
ADJ

ADJ Encore Burst 100 IP

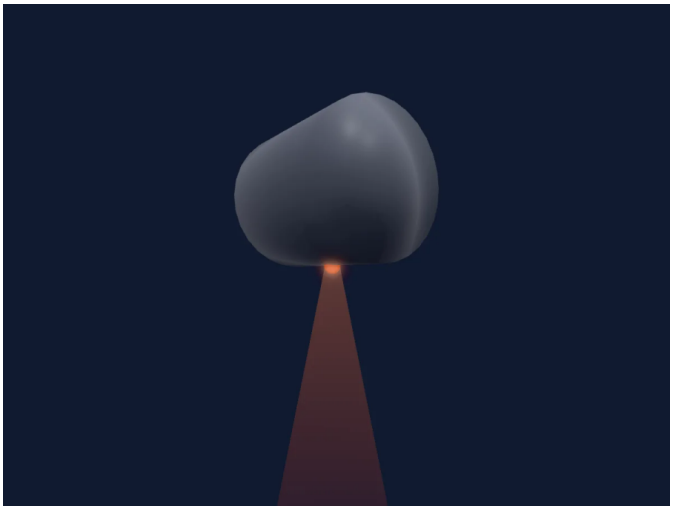

Manufacturer	**ADJ**
Type	**PAR**
DMX modes	**5**
DMX footprint	**1, 2, 3, 4, 5 channels**
Size (W × H × D)	**1000 × 1000 × 1000 mm**
GDTF fixture type	**A47D3DE1-739A-4E33-BFDB-8F…**

Controls

Dimmer

DMX modes

Mode 1	1 ch
Mode 2	2 ch
Mode 3	3 ch
Mode 4	4 ch
Mode 5	5 ch

Mode 1

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	

Mode 2

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	

Mode 3

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	
3	Shutter1Strobe	0	0–31 Shutter closed (LED off) 32–63 Shutter open (LED on) 64–95 Strobe effect; slow to fast; 96–127 Shutter open (LED on) 128–159 Pulse effect in sequences 160–191 Shutter open (LED on) 192–223 Random stobe effect; slow to fast 224–255 Shutter open (LED on)

Mode 4

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	
3	Shutter1Strobe	0	0–31 Shutter closed (LED off) 32–63 Shutter open (LED on) 64–95 Strobe effect; slow to fast; 96–127 Shutter open (LED on) 128–159 Pulse effect in sequences 160–191 Shutter open (LED on) 192–223 Random stobe effect; slow to fast 224–255 Shutter open (LED on)
4	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theater 101–120 Stage 2 121–140 Dimmer speed; fast to slow 141–255 Default to unit setting

Mode 5

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	

Mode 5 (continued)

Ch	Function	Default	DMX values
3	Shutter1Strobe	0	0–31 Shutter closed (LED off) 32–63 Shutter open (LED on) 64–95 Strobe effect; slow to fast; 96–127 Shutter open (LED on) 128–159 Pulse effect in sequences 160–191 Shutter open (LED on) 192–223 Random stobe effect; slow to fast 224–255 Shutter open (LED on)
4	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theater 101–120 Stage 2 121–140 Dimmer speed; fast to slow 141–255 Default to unit setting
5	Dimmer Curve	0	0–20 Square 21–40 Linear 41–60 Invert square 61–80 S Curve 81–255 No function