
ADJ

Par Z100 3K

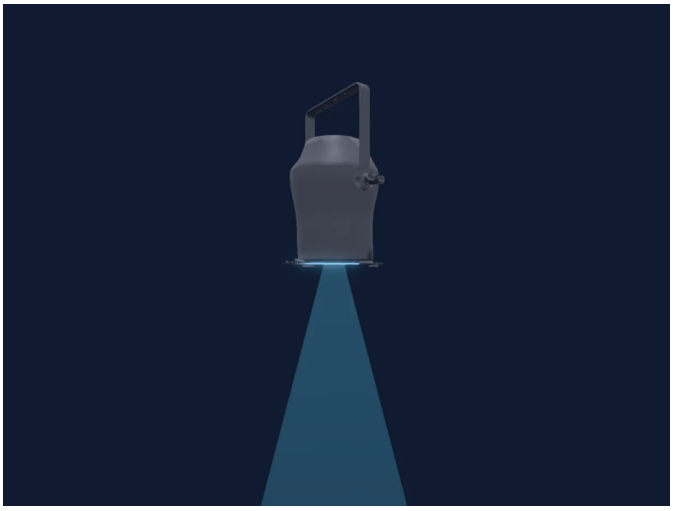

Manufacturer	**ADJ**
Type	**PAR**
DMX modes	**4**
DMX footprint	**1, 2, 3, 4 channels**
Beam angle	**30°**
Size (W × H × D)	**250 × 200 × 40 mm**
GDTF fixture type	**83334F11-4282-4EF5-A957-DE4…**

Controls

Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

1CH	1 ch
2CH	2 ch
3CH	3 ch
4CH	4 ch

1CH

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 % 63–126 25 % 127–190 50 % 191–254 75 % 255–255 100 %

2CH

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 % 63–126 25 % 127–190 50 % 191–254 75 % 255–255 100 %
2	Shutter / Strobe	63	0–31 LED OFF 32–63 LED ON 64–95 Strobing Slow-Fast 96–127 LED ON 128–159 Pulse Effect 160–191 LED ON 192–223 Random Strobing Slow-Fast 224–255 LED ON

3CH

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 % 63–126 25 % 127–190 50 % 191–254 75 % 255–255 100 %
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	63	0–31 LED OFF 32–63 LED ON 64–95 Strobing Slow-Fast 96–127 LED ON 128–159 Pulse Effect 160–191 LED ON 192–223 Random Strobing Slow-Fast 224–255 LED ON

4CH

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–62 0 % 63–126 25 % 127–190 50 % 191–254 75 % 255–255 100 %
2	Dimmer Fine	0	Fine byte of Dimmer

4CH (continued)

Ch	Function	Default	DMX values
3	Shutter / Strobe	63	0–31 LED OFF 32–63 LED ON 64–95 Strobing Slow-Fast 96–127 LED ON 128–159 Pulse Effect 160–191 LED ON 192–223 Random Strobing Slow-Fast 224–255 LED ON
4	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–255 Default Dimmer Setting