
Cameo

Kling Tile

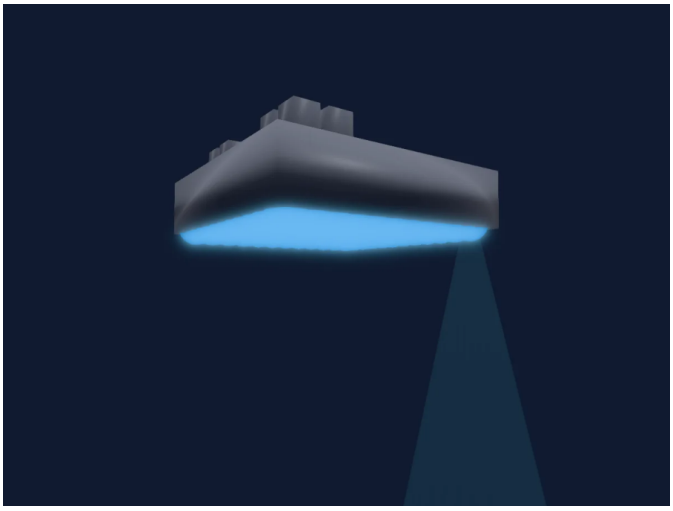

Manufacturer	**Cameo**
Type	**Effect light**
DMX modes	**2**
DMX footprint	**3, 8 channels**
Beam angle	**25°**
Size (W × H × D)	**300 × 70 × 300 mm**
GDTF fixture type	**995D36E2-AD2F-4DA5-BF38-D…**

Controls

RGB colour mixing · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

432 CH Mode	3 ch
8 CH Mode	8 ch

432 CH Mode

3 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	

8 CH Mode

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–5 Strobe open 6–254 1Hz to 20Hz strobe · 1 Hz 1–19.9 Hz 255–255 1Hz to 20Hz strobe · 20 Hz 20 Hz
3	Color RGBRed	0	
4	Color RGBGreen	0	
5	Color RGBBlue	0	
6	Color Wheel	0	6–13 Red (wheel slot 1) 14–21 Amber (wheel slot 2) 22–29 Yellow Warm (wheel slot 3) 30–37 Yellow (wheel slot 4) 38–45 Green (wheel slot 5) 46–53 Turquoise (wheel slot 6) 54–61 Cyan (wheel slot 7) 62–69 Blue (wheel slot 8) 70–77 Lavender (wheel slot 9) 78–85 Mauve (wheel slot 10) 86–93 Magenta (wheel slot 11) 94–101 Pink (wheel slot 12) 102–109 Warm White (wheel slot 13) 110–117 White (wheel slot 14) 118–125 cold White (wheel slot 15) 127–128 Colour Jumping Stop 129–192 Colour Jumping Speed slow to fast 193–255 Colour Fading Speed slow to fast
7	Effect	0	0–5 Control by Channel 2-6 6–10 Program 1 11–20 Program 2 21–31 Program 3 32–42 Program 4 43–53 Program 5 54–64 Program 6 65–75 Program 7 76–86 Program 8 87–97 Program 9 98–108 Program 10 109–119 Program 11 120–130 Program 12 131–141 Program 13 142–152 Program 14 153–163 Program 15 164–174 Program 16 175–185 Program 17 186–196 Program 18 197–207 Program 19 208–218 Program 20 219–229 Program 21 230–240 Program 22 241–250 Program 23 251–255 Program 24

8 CH Mode (continued)

Ch	Function	Default	DMX values
8	Effect Speed	0	0–254 slow 255–255 fast