
Chauvet DJ

Shocker 2

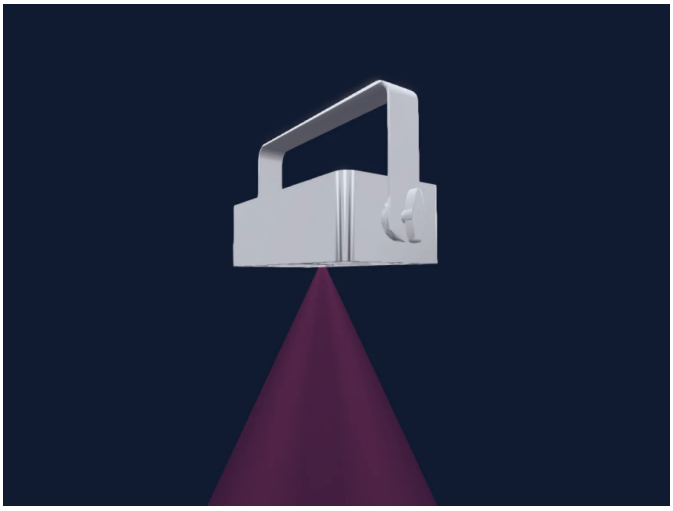

Manufacturer	**Chauvet DJ**
Type	**Blinder**
DMX modes	**5**
DMX footprint	**1, 2, 4, 7, 8 channels**
Beam angle	**51°**
Size (W × H × D)	**376 × 188 × 56 mm**
GDTF fixture type	**24FFD574-E07A-4F81-A0AA-75…**

Controls

Extra LED colours · Effect speed · Strobe · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

1Ch Mode	1 ch
2Ch Mode	2 ch
4Ch Mode	4 ch
7Ch Mode	7 ch
8Ch Mode	8 ch

1Ch Mode

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max

2Ch Mode

2 channels

Ch	Function	Default	DMX values
1	White	255	0–0 Min 1–254 Min > Max 255–255 Max
2	White	255	0–0 Min 1–254 Min > Max 255–255 Max

4Ch Mode

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	White	255	0–0 Min 1–254 Min > Max 255–255 Max
3	White	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Shutter / Strobe	0	0–10 Shutter Open - Shutter Open 11–255 Strobe S > F - Strobe

7Ch Mode

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	White	255	0–0 Min 1–254 Min > Max 255–255 Max
3	White	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Shutter / Strobe	0	0–10 Shutter Open - Shutter Open 11–255 Strobe S > F - Strobe

7Ch Mode (continued)

Ch	Function	Default	DMX values
5	Effect	0	0–10 No Function - Custom 11–27 Auto Program 1 - Macro 28–44 Auto Program 2 - Macro 45–61 Auto Program 3 - Macro 62–78 Auto Program 4 - Macro 79–95 Auto Program 5 - Macro 96–112 Auto Program 6 - Macro 113–129 Auto Program 7 - Macro 130–146 Auto Program 8 - Macro 147–163 Auto Program 9 - Macro 164–180 Auto Program 10 - Macro 181–197 Auto Program 11 - Macro 198–214 Auto Program 12 - Macro 215–249 Auto Program 13 - Macro 250–255 Sound Show - Macro
6	Effect Speed	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Intensity MSpeed	0	0–51 Preset Dim Spd - Speed 52–101 Dim Spd Mode Off - Speed 102–152 Dim Spd Mode 1 Fastest - Speed 153–203 Dim Spd Mode 2 Middle - Speed 204–255 Dim Spd Mode 3 Slow - Speed

8Ch Mode

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	White	255	0–0 Min 1–254 Min > Max 255–255 Max
3	White	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Shutter / Strobe	0	0–10 Shutter Open - Shutter Open 11–132 Strobe S > F - Strobe 133–255 Strobe Random - Strobe Random
5	Effect	0	0–10 No Function - Custom 11–27 Auto Program 1 - Macro 28–44 Auto Program 2 - Macro 45–61 Auto Program 3 - Macro 62–78 Auto Program 4 - Macro 79–95 Auto Program 5 - Macro 96–112 Auto Program 6 - Macro 113–129 Auto Program 7 - Macro 130–146 Auto Program 8 - Macro 147–163 Auto Program 9 - Macro 164–180 Auto Program 10 - Macro 181–197 Auto Program 11 - Macro 198–214 Auto Program 12 - Macro 215–231 Auto Program 13 - Macro 232–249 Auto Program 14 - Macro 250–255 Sound Show - Macro
6	Effect Speed	0	0–0 Min 1–254 Min > Max 255–255 Max

8Ch Mode (continued)

Ch	Function	Default	DMX values
7	Function	0	0–6 No Function - Custom 7–50 Master - Custom 51–100 Slave 1 - Custom 101–150 Slave 2 - Custom 151–200 Slave 3 - Custom 201–255 Slave 4 - Custom
8	Intensity MSpeed	0	0–51 Preset Dim Spd - Speed 52–101 Dim Spd Mode Off - Speed 102–152 Dim Spd Mode 1 Fastest - Speed 153–203 Dim Spd Mode 2 Middle - Speed 204–255 Dim Spd Mode 3 Slow - Speed