
Chauvet DJ

SlimBANK H18 ILS

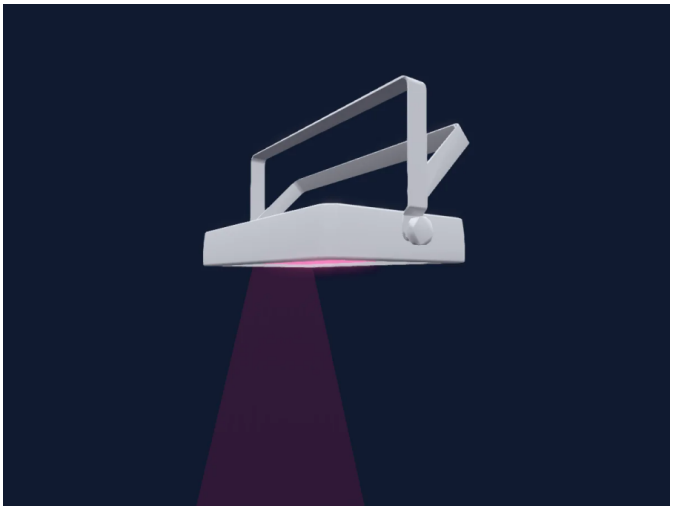

Manufacturer	**Chauvet DJ**
Type	**Effect light**
DMX modes	**4**
DMX footprint	**6, 8, 12, 22 channels**
Beam angle	**27°**
Heads / cells	**3**
Size (W × H × D)	**397 × 177 × 109 mm**
GDTF fixture type	**DA6296AF-0D9C-11EF-846C-52…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer · Pixel control

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

6Ch	6 ch
8Ch	8 ch
12Ch	12 ch
22Ch	22 ch

6Ch

6 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
5	White	255	0–0 Min 1–254 Min > Max 255–255 Max
6	UV	0	0–0 Min 1–254 Min > Max 255–255 Max

8Ch

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
6	White	255	0–0 Min 1–254 Min > Max 255–255 Max
7	UV	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Shutter / Strobe	0	0–10 Open - Shutter Open 11–255 Strobe S > F - Strobe

12Ch

12 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max

12Ch (continued)

Ch	Function	Default	DMX values
2	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
6	White	255	0–0 Min 1–254 Min > Max 255–255 Max
7	UV	0	0–0 Min 1–254 Min > Max 255–255 Max
8	Shutter / Strobe	0	0–10 Open - Shutter Open 11–255 Strobe S > F - Strobe
9	Color Macro1	0	0–10 No Function - Custom 11–200 Color Macro - Macro 201–205 Color Temperature 1 - CTC 206–210 Color Temperature 2 - CTC 211–215 Color Temperature 3 - CTC 216–220 Color Temperature 4 - CTC 221–225 Color Temperature 5 - CTC 226–230 Color Temperature 6 - CTC 231–235 Color Temperature 7 - CTC 236–240 Color Temperature 8 - CTC 241–245 Color Temperature 9 - CTC 246–250 Color Temperature 10 - CTC 251–255 Color Temperature 11 - CTC
10	Effect	0	0–10 No Function - Custom 11–28 Automatic Program 1 - Macro 29–45 Automatic Program 2 - Macro 46–62 Automatic Program 3 - Macro 63–79 Automatic Program 4 - Macro 80–96 Automatic Program 5 - Macro 97–113 Automatic Program 6 - Macro 114–130 Automatic Program 7 - Macro 131–147 Automatic Program 8 - Macro 148–164 Automatic Program 9 - Macro 165–181 Automatic Program 10 - Macro 182–198 Automatic Program 11 - Macro 199–215 Automatic Program 12 - Macro 216–232 Automatic Program 13 - Macro 233–250 Automatic Program 14 - Macro 251–255 Sound-Active Program - Macro
11	Effect Speed	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Intensity MSpeed	0	0–51 Dimmer Speed Set From Disp Menu - Speed 52–152 Dimmer Speed Mode Off - Speed 153–203 Dimmer Speed Mode 2 (Medium) - Speed 204–255 Dimmer Speed Mode 3 (Slow) - Speed

22Ch

22 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
5	White	255	0–0 Min 1–254 Min > Max 255–255 Max
6	UV	0	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
11	White	255	0–0 Min 1–254 Min > Max 255–255 Max
12	UV	0	0–0 Min 1–254 Min > Max 255–255 Max
13	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
14	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
15	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
16	Color Add RY	255	0–0 Min 1–254 Min > Max 255–255 Max
17	White	255	0–0 Min 1–254 Min > Max 255–255 Max
18	UV	0	0–0 Min 1–254 Min > Max 255–255 Max

22Ch (continued)

Ch	Function	Default	DMX values
19	Effect	0	0–10 No Function - Custom 11–28 Automatic Program 1 - Macro 29–45 Automatic Program 2 - Macro 46–62 Automatic Program 3 - Macro 63–79 Automatic Program 4 - Macro 80–96 Automatic Program 5 - Macro 97–113 Automatic Program 6 - Macro 114–130 Automatic Program 7 - Macro 131–147 Automatic Program 8 - Macro 148–164 Automatic Program 9 - Macro 165–181 Automatic Program 10 - Macro 182–198 Automatic Program 11 - Macro 199–215 Automatic Program 12 - Macro 216–232 Automatic Program 13 - Macro 233–250 Automatic Program 14 - Macro 251–255 Sound-Active Program - Macro
20	Effect Speed	0	0–0 Min 1–254 Min > Max 255–255 Max
21	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
22	Shutter / Strobe	0	0–10 Open - Shutter Open 11–255 Strobe S > F - Strobe