
Chauvet DJ

SlimBANK T18 USB

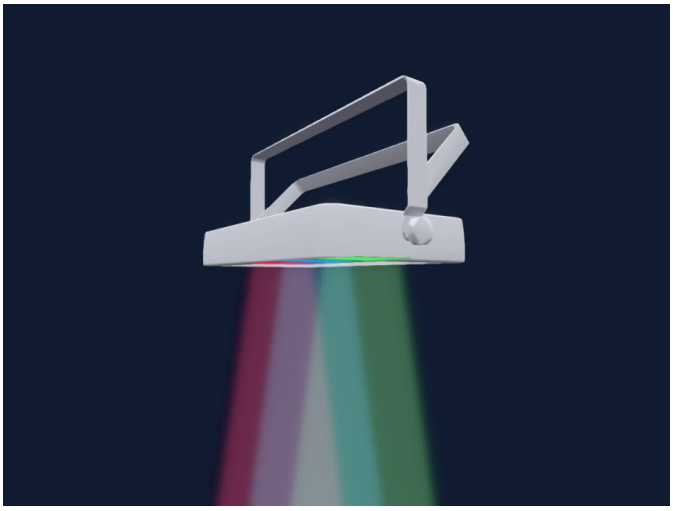

Manufacturer	**Chauvet DJ**
Type	**Effect light**
DMX modes	**4**
DMX footprint	**3, 5, 9, 13 channels**
Beam angle	**17°**
Heads / cells	**3**
Size (W × H × D)	**397 × 177 × 109 mm**
GDTF fixture type	**5018306F-1E8A-11E7-9ACC-F07…**

Controls

RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer · Pixel control

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

Mode4 3Ch	3 ch
Mode3 5Ch	5 ch
Mode2 9Ch	9 ch
Mode1 13Ch	13 ch

Mode4 3Ch

3 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

Mode3 5Ch

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Shutter / Strobe	0	0–10 Open - Shutter Open 11–255 Strobe S > F - Strobe

Mode2 9Ch

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
2	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
4	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Shutter / Strobe	0	0–10 Open - Shutter Open 11–255 Strobe S > F - Strobe

Mode2 9Ch (continued)

Ch	Function	Default	DMX values
6	Color Macro1	0	0–10 No Func - Custom 11–30 R:100% G:0-100% B:0 - Macro 31–50 R:100%-0 G:100% B:0 - Macro 51–70 R:0 G:100% B:0-100% - Macro 71–90 R:0 G:100%-0 B:100% - Macro 91–110 R:0-100% G:0 B:100% - Macro 111–130 R:100% G:0 B:100%-0 - Macro 131–150 R:100% G:0-100% B:0-100% - Macro 151–170 R:100%-0 G:100%-0 B:100% - Macro 171–200 RGB:100% - Macro 201–205 Color Temp 1 - CTC 206–210 Color Temp 2 - CTC 211–215 Color Temp 3 - CTC 216–220 Color Temp 4 - CTC 221–225 Color Temp 5 - CTC 226–230 Color Temp 6 - CTC 231–235 Color Temp 7 - CTC 236–240 Color Temp 8 - CTC 241–245 Color Temp 9 - CTC 246–250 Color Temp 10 - CTC 251–255 Color Temp 11 - CTC
7	Effect	0	0–10 No Func - Custom 11–28 Auto Program 1 - Macro 29–45 Auto Program 2 - Macro 46–62 Auto Program 3 - Macro 63–79 Auto Program 4 - Macro 80–96 Auto Program 5 - Macro 97–113 Auto Program 6 - Macro 114–130 Auto Program 7 - Macro 131–147 Auto Program 8 - Macro 148–164 Auto Program 9 - Macro 165–181 Auto Program 10 - Macro 182–198 Auto Program 11 - Macro 199–215 Auto Program 12 - Macro 216–232 Auto Program 13 - Macro 233–250 Auto Program 14 - Macro 251–255 Sound-Active Program - Macro
8	Effect Speed	0	0–0 Min 1–254 Min > Max 255–255 Max
9	Intensity MSpeed	0	0–51 Default Dim Spd Set Fr Menu - Custom 52–101 Dim Spd Mode Off - Speed 102–152 Dim Spd Mode 1 (Fast Speed) - Speed 153–203 Dim Spd Mode 2 (Medium Speed) - Speed 204–255 Dim Spd Mode 3 (Slow Speed) - Speed

Mode1 13Ch

13 channels

Ch	Function	Default	DMX values
1	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
2	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
3	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max

Mode1 13Ch (continued)

Ch	Function	Default	DMX values
4	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
5	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
6	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
7	Red	255	0–0 Min 1–254 Min > Max 255–255 Max
8	Green	255	0–0 Min 1–254 Min > Max 255–255 Max
9	Blue	255	0–0 Min 1–254 Min > Max 255–255 Max
10	Effect	0	0–10 No Func - Custom 11–28 Auto Program 1 - Macro 29–45 Auto Program 2 - Macro 46–62 Auto Program 3 - Macro 63–79 Auto Program 4 - Macro 80–96 Auto Program 5 - Macro 97–113 Auto Program 6 - Macro 114–130 Auto Program 7 - Macro 131–147 Auto Program 8 - Macro 148–164 Auto Program 9 - Macro 165–181 Auto Program 10 - Macro 182–198 Auto Program 11 - Macro 199–215 Auto Program 12 - Macro 216–232 Auto Program 13 - Macro 233–250 Auto Program 14 - Macro 251–255 Sound-Active Program - Macro
11	Effect Speed	0	0–0 Min 1–254 Min > Max 255–255 Max
12	Dimmer	0	0–0 Min 1–254 Min > Max 255–255 Max
13	Shutter / Strobe	0	0–10 Open - Shutter Open 11–255 Strobe S > F - Strobe