
Chauvet

Intimidator Spot 350

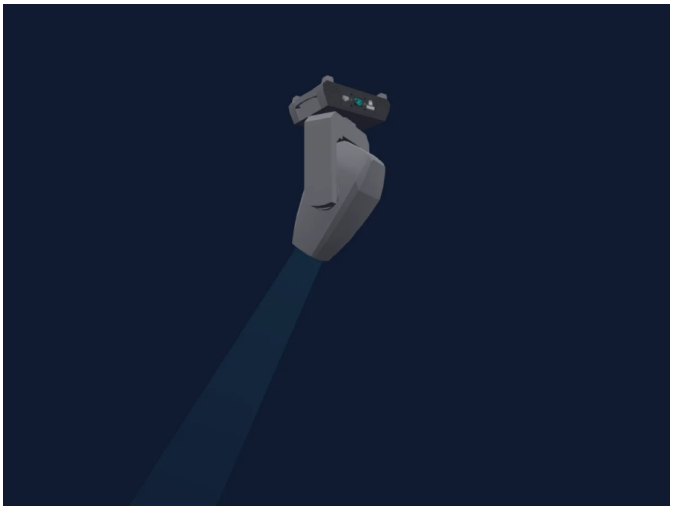

Manufacturer	**Chauvet**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**14 channels**
Beam angle	**12°**
Pan range	**540°**
Tilt range	**270°**
Size (W × H × D)	**257 × 443 × 240 mm**
GDTF fixture type	**F407A95A-7AF0-43DE-A501-84…**

Controls

Focus · Prism · Colour wheel · Strobe · Dimmer · Pan and tilt · Movement speed · Gobos · Gobo rotation

Safety-relevant functions

Fixture reset · Built-in effect programmes

DMX modes

15ch 14 ch

15ch

14 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Color Wheel	0	0–6 Open (wheel slot 1) 7–13 Yellow (wheel slot 2) 14–20 Pink (wheel slot 3) 21–27 Green (wheel slot 4) 28–35 Red (wheel slot 5) 36–42 Light Blue (wheel slot 6) 43–49 Kelly Green (wheel slot 7) 50–56 Orange (wheel slot 8) 57–63 Dark Blue (wheel slot 9) 64–127 Split colors 128–191 Color scroll fast to slow 192–255 Reverse color scroll slow to fast
7	Gobo	0	0–7 Open (wheel slot 1) 8–15 Gobo 1 (wheel slot 2) 16–23 Gobo 2 (wheel slot 3) 24–31 Gobo 3 (wheel slot 4) 32–39 Gobo 4 (wheel slot 5) 40–47 Gobo 5 (wheel slot 6) 48–55 Gobo 6 (wheel slot 7) 56–63 Gobo 7 (wheel slot 8) 64–71 Gobo 7 shaking slow to fast (wheel slot 8) 72–79 Gobo 6 shaking slow to fast (wheel slot 7) 80–87 Gobo 5 shaking slow to fast (wheel slot 6) 88–95 Gobo 4 shaking slow to fast (wheel slot 5) 96–103 Gobo 3 shaking slow to fast (wheel slot 4) 104–111 Gobo 2 shaking slow to fast (wheel slot 3) 112–119 Gobo 1 shaking slow to fast (wheel slot 2) 120–127 Open (wheel slot 1) 128–191 Gobo scroll slow to fast 192–255 Reverse gobo scroll slow to fast
8	Gobo Rotation	147	0–63 Gobo index 64–147 Gobo rotation fast to slow 148–231 Reverse gobo rotation slow to fast 232–255 Bounce effect short to long
9	Prism	0	0–7 Open (wheel slot 1) 8–12 3-facet prism (wheel slot 2) 13–130 Prism rotation with increasing speed 131–247 Reverse prism rotation with increasing speed 248–255 Prism Effect
10	Focus	128	
11	Dimmer	0	0–254 Closed 255–255 Open
12	Shutter / Strobe	7	0–3 Closed 4–7 Open 8–75 Strobe · Min 1–11.8 Hz 76–76 Strobe · Max 12 Hz 77–144 Pulse · Min 1–8.88 Hz 145–145 Pulse · Max 9 Hz 146–214 Strobe Random · Min 1–11.8 Hz 215–215 Strobe Random · Max 12 Hz 255–255 Open

15ch (continued)

Ch	Function	Default	DMX values
13	Control1	0	0–7 No function 8–15 Pan tilt blackout 16–23 Color blackout 24–31 Gobo blackout 32–39 Disable blackout while pan/tilt/moving color wheel 40–47 Disable blackout while pan/tilt/moving gobo wheel 48–55 Disable blackout while moving all options 56–95 No function 96–103 Pan reset 104–111 Tilt reset 112–119 Color reset 120–127 Gobo reset 128–135 Reset gobo rotation 136–143 Prism reset 144–151 Reset focus 152–159 All reset 160–255 No function
14	Effect	0	0–7 No function 8–23 Movement macro 1 24–39 Movement macro 2 40–55 Movement macro 3 56–71 Movement macro 4 72–87 Movement macro 5 88–103 Movement macro 6 104–119 Movement macro 7 120–135 Movement macro 8 136–151 Sound active movement macro 1 152–167 Sound active movement macro 2 168–183 Sound active movement macro 3 184–199 Sound active movement macro 4 200–215 Sound active movement macro 5 216–231 Sound active movement macro 6 232–247 Sound active movement macro 7 248–255 Sound active movement macro 8