
CKC Lighting

Blinder WW4

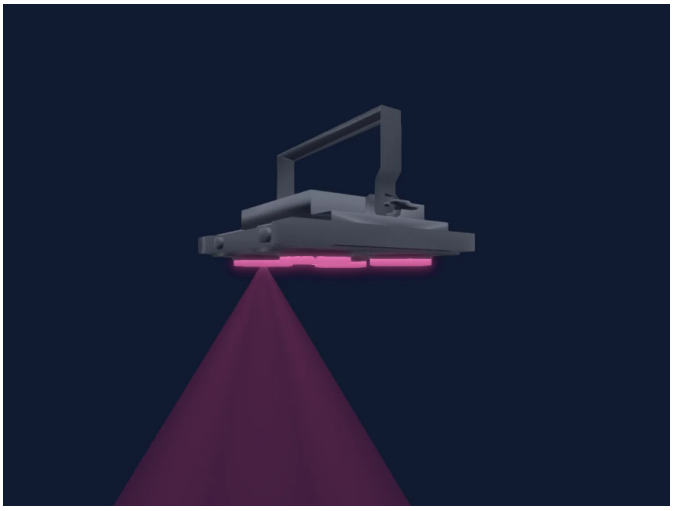

Manufacturer	**CKC Lighting**
Type	**Blinder**
DMX modes	**6**
DMX footprint	**1, 2, 4, 5, 7, 9 channels**
Beam angle	**65°**
Size (W × H × D)	**400 × 262 × 400 mm**
GDTF fixture type	**DC3C98FC-1A39-48FC-8103-B6…**

Controls

Effect speed · Strobe · Dimmer

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

1 CH	1 ch
2 CH	2 ch
4 CH	4 ch
5 CH	5 ch
7 CH	7 ch
9 CH	9 ch

1 CH

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Min Dimmer 255–255 Max Dimmer

2 CH

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 All Cob Min 255–255 All Cob Max
2	Dimmer	0	0–254 Master Dimmer Min 255–255 Master Dimmer Max

4 CH

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Blinder Min 1 255–255 Blinder Max 1
2	Dimmer	0	0–254 Blinder Min 2 255–255 Blinder Max 2
3	Dimmer	0	0–254 Blinder Min 3 255–255 Blinder Max 3
4	Dimmer	0	0–254 Blinder Min 4 255–255 Blinder Max 4

5 CH

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Blinder Min 1 255–255 Blinder Max 1
2	Dimmer	0	0–254 Blinder Min 2 255–255 Blinder Max 2
3	Dimmer	0	0–254 Blinder Min 3 255–255 Blinder Max 3
4	Dimmer	0	0–254 Blinder Min 4 255–255 Blinder Max 4
5	Dimmer	255	0–254 Min Dimmer 255–255 Max Dimmer

7 CH

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Blinder Min 1 255–255 Blinder Max 1
2	Dimmer	0	0–254 Blinder Min 2 255–255 Blinder Max 2
3	Dimmer	0	0–254 Blinder Min 3 255–255 Blinder Max 3
4	Dimmer	0	0–254 Blinder Min 4 255–255 Blinder Max 4
5	Dimmer	255	0–254 Min Dimmer 255–255 Max Dimmer

7 CH (continued)

Ch	Function	Default	DMX values
6	Shutter / Strobe	50	0–31 COB OFF 32–63 COB ON 64–94 Strobe Min 95–95 Strobe Max 96–127 COB ON 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 COB ON 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 COB ON
7	Dimmer Mode	0	0–20 Standard 21–40 STAGE 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to Unit Setting

9 CH

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Blinder Min 1 255–255 Blinder Max 1
2	Dimmer	0	0–254 Blinder Min 2 255–255 Blinder Max 2
3	Dimmer	0	0–254 Blinder Min 3 255–255 Blinder Max 3
4	Dimmer	0	0–254 Blinder Min 4 255–255 Blinder Max 4
5	Effect	0	0–20 Normal 21–42 DREAM 43–64 METEOR 65–87 FADE 88–110 CHANGE 111–123 FLOW 1 124–146 FLOW 2 147–169 FLOW 3 170–192 FLOW 4 193–255 No Function
6	Effect Speed	0	
7	Dimmer	255	0–254 Min Dimmer 255–255 Max Dimmer
8	Shutter / Strobe	50	0–31 COB OFF 32–63 COB ON 64–94 Strobe Min 95–95 Strobe Max 96–127 COB ON 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 COB ON 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 COB ON

9 CH (continued)

Ch	Function	Default	DMX values
9	Dimmer Mode	0	0–20 Standard 21–40 STAGE 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to Unit Setting