
CKC Lighting

Fresnel 350

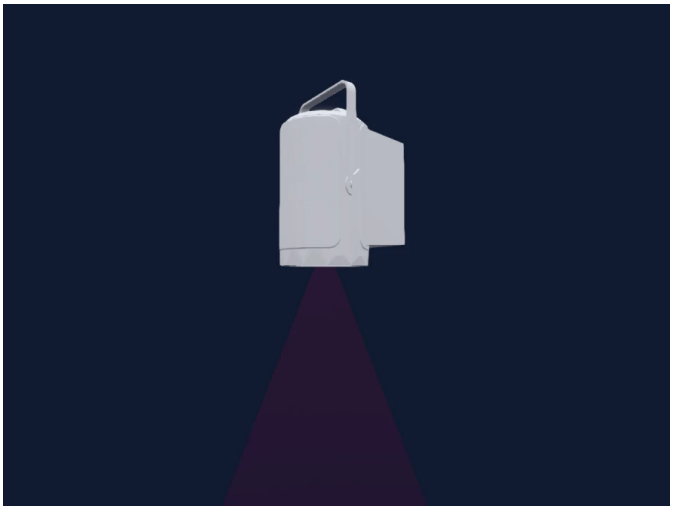

Manufacturer	**CKC Lighting**
Type	**Spot**
DMX modes	**4**
DMX footprint	**2, 3, 4, 6 channels**
Beam angle	**18-68°**
Size (W × H × D)	**273 × 291 × 35 mm**
GDTF fixture type	**96797CFF-A5C1-4C50-84FE-95…**

Controls

Zoom · Strobe · Dimmer

DMX modes

2CH	2 ch
3CH	3 ch
4CH	4 ch
6CH	6 ch

2CH

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 0% 255–255 100%
2	Zoom	0	0–127 Narrow 128–254 Middle 255–255 Wide

3CH

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 0% 255–255 100%
2	Shutter / Strobe	50	0–31 Shutter Closed (1) 32–63 Shutter Open (1) 64–77 Strobe slow 78–92 Strobe mid 93–95 Strobe fast 96–127 Shutter Open (2) 128–140 Pulse slow 141–156 Pulse mid 157–159 Pulse fast 160–191 Shutter Open (3) 192–204 Random · Str Rnd slow 1–8.35 Hz 205–220 Random · Str Rnd mid 8.97–18.2 Hz 221–223 Random · Str Rnd fast 18.8–20 Hz 224–255 Shutter Open (4)
3	Zoom	0	0–127 Narrow 128–254 Middle 255–255 Wide

4CH

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 0% 255–255 100%
2	Shutter / Strobe	50	0–31 Shutter Closed (1) 32–63 Shutter Open (1) 64–77 Strobe slow 78–92 Strobe mid 93–95 Strobe fast 96–127 Shutter Open (2) 128–140 Pulse slow 141–156 Pulse mid 157–159 Pulse fast 160–191 Shutter Open (3) 192–204 Random · Str Rnd slow 1–8.35 Hz 205–220 Random · Str Rnd mid 8.97–18.2 Hz 221–223 Random · Str Rnd fast 18.8–20 Hz 224–255 Shutter Open (4)
3	Zoom	0	0–127 Narrow 128–254 Middle 255–255 Wide
4	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to Unit Setting

6CH

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 0% 255–255 100%
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Shutter Closed (1) 32–63 Shutter Open (1) 64–77 Strobe slow 78–92 Strobe mid 93–95 Strobe fast 96–127 Shutter Open (2) 128–140 Pulse slow 141–156 Pulse mid 157–159 Pulse fast 160–191 Shutter Open (3) 192–204 Random · Str Rnd slow 1–8.35 Hz 205–220 Random · Str Rnd mid 8.97–18.2 Hz 221–223 Random · Str Rnd fast 18.8–20 Hz 224–255 Shutter Open (4)
4	Zoom	0	0–127 Narrow 128–254 Middle 255–255 Wide
5	Zoom Fine	0	Fine byte of Zoom
6	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to Unit Setting