
DTS Lighting

Scena LED MZ 200 CT

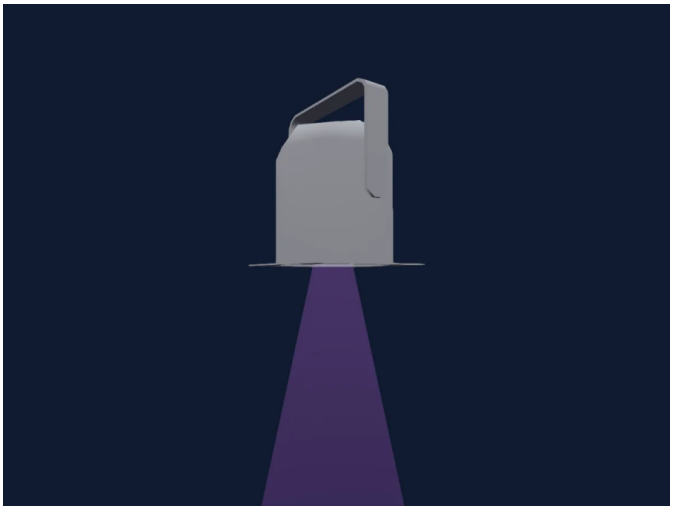

Manufacturer	**DTS Lighting**
Type	**PAR**
DMX modes	**3**
DMX footprint	**3, 9 channels**
Beam angle	**25°**
Size (W × H × D)	**250 × 195 × 45 mm**
GDTF fixture type	**256B0829-DC2D-45E7-9FC0-F9…**

Controls

Zoom · Extra LED colours · Colour temperature · Strobe · Dimmer

Safety-relevant functions

Fixture reset · Service functions · Strobe

DMX modes

3 CH	3 ch
CTC	3 ch
9 CH	9 ch

3 CH

3 channels

Ch	Function	Default	DMX values
1	White	0	
2	White	0	
3	Zoom	0	

CTC

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	C TC	255	0–10 Open (wheel slot 1) 11–53 2700K (wheel slot 2) 54–82 3000K (wheel slot 3) 83–125 3200K (wheel slot 4) 126–168 3500K (wheel slot 5) 169–197 4000K (wheel slot 6) 198–225 4500K (wheel slot 7) 226–240 5000K (wheel slot 8) 241–250 5600K (wheel slot 9) 251–255 6500K (wheel slot 10)
3	Zoom	0	

9 CH

9 channels

Ch	Function	Default	DMX values
1	White	0	
2	White Count	0	
3	Shutter / Strobe	19	0–9 Closed 10–29 Open 30–118 Slow 119–119 Fast 120–148 Slow 149–149 Fast 150–178 Slow 179–179 Fast 180–203 Slow 204–204 Fast 205–228 Slow 229–255 Fast
4	Dimmer	0	
5	Dimmer Fine	0	Fine byte of Dimmer
6	C TC	255	0–10 Open (wheel slot 1) 11–53 2700K (wheel slot 2) 54–82 3000K (wheel slot 3) 83–125 3200K (wheel slot 4) 126–168 3500K (wheel slot 5) 169–197 4000K (wheel slot 6) 198–225 4500K (wheel slot 7) 226–240 5000K (wheel slot 8) 241–250 5600K (wheel slot 9) 251–255 6500K (wheel slot 10)

9 CH (continued)

Ch	Function	Default	DMX values
7	Control1	135	15–24 Smooth Off 25–26 Smooth 1 27–28 Smooth 2 29–30 Smooth 3 31–32 Smooth 4 (Default) 33–34 Smooth 5 35–36 Smooth 6 37–38 Smooth 7 39–40 Smooth 8 41–42 Smooth 9 43–44 Smooth 10 45–46 Smooth 11 47–48 Smooth 12 49–50 Smooth 13 51–52 Smooth 14 53–54 Smooth 15 55–56 Smooth 16 57–58 Smooth 17 59–60 Smooth 18 61–62 Smooth 19 63–84 Smooth 20 85–104 610Hz 105–105 800Hz 106–106 1000Hz (default) 107–107 1500Hz 108–108 2000Hz 109–109 2500Hz 110–110 3000Hz 111–111 3500Hz 112–112 4000Hz 113–113 4500Hz 114–134 5000Hz 135–144 Boost ON (default) 145–154 Boost OFF 155–164 Display OFF (default) 165–172 Display ON 173–174 Display Force ON 175–176 NO-DMX-KEEP (default) 177–178 NO-DMX-BLACKOUT 179–180 NO-DMX-RGB@100 181–182 NO-DMX-CHPR 183–184 NO-DMX-CUSTOM 235–244 FAN STANDARD 245–252 FAN SILENT (default) 255–255 SET DEFAULT FUNCTIONS
8	Zoom	0	
9	Zoom Reset	0	0–9 NO FUNCTION 10–255 RESET