
Eagle Lite

SPOT200

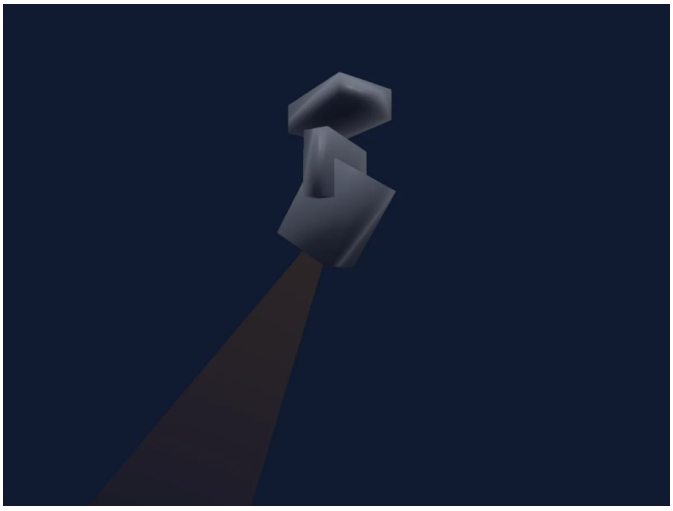

Manufacturer	**Eagle Lite**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**17 channels**
Beam angle	**25°**
Pan range	**540°**
Tilt range	**220°**
Size (W × H × D)	**224 × 320 × 224 mm**
GDTF fixture type	**E540CE2E-2A69-4468-8C3B-79…**

Controls

Focus · Prism · Prism rotation · Colour wheel · Dimmer · Movement speed · Gobos · Gobo rotation

Safety-relevant functions

Fixture reset · Built-in effect programmes

DMX modes

Default 17 ch

Default

17 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Dimmer	0	
7	Shutter1Strobe	0	0–7 Open 8–255 Strobe Slow -> Fast
8	Color Wheel	0	0–15 Open/White (wheel slot 1) 16–31 Red (wheel slot 2) 32–47 Green (wheel slot 3) 48–63 Yellow (wheel slot 4) 64–79 Blue (wheel slot 5) 80–95 Magenta (wheel slot 6) 96–111 Orange (wheel slot 7) 112–127 Cyan (wheel slot 8) 128–191 Color Scroll CW 192–255 Color scroll CCW
9	Color Effects1	0	0–10 No function 11–209 Color fine 210–255 Color scroll Fast -> Slow
10	Gobo	0	0–6 Open (wheel slot 1) 7–13 Gobo 1 (wheel slot 2) 14–20 Gobo 2 (wheel slot 3) 21–27 Gobo 3 (wheel slot 4) 28–34 Gobo 4 (wheel slot 5) 35–41 Gobo 5 (wheel slot 6) 42–48 Gobo 6 (wheel slot 7) 49–55 Gobo 7 (wheel slot 8) 56–63 Gobo 8 (wheel slot 9) 64–70 Gobo 8 Shake Slow->Fast (wheel slot 9) 71–77 Gobo 7 Shake Slow->Fast (wheel slot 8) 78–84 Gobo 6 Shake Slow->Fast (wheel slot 7) 85–91 Gobo 5 Shake Slow->Fast (wheel slot 6) 92–98 Gobo 4 Shake Slow->Fast (wheel slot 5) 99–105 Gobo 3 Shake Slow->Fast (wheel slot 4) 106–112 Gobo 2 (wheel slot 3) 113–119 Gobo 1 (wheel slot 2) 120–127 Open (wheel slot 1) 128–191 Gobo Rotate CW Slow to fast 192–255 Gobo Rotate CCW Slow to fast
11	Gobo 2	0	0–15 Open (wheel slot 1) 16–31 Gobo 1 (wheel slot 2) 32–47 Gobo 2 (wheel slot 3) 48–63 Gobo 3 (wheel slot 4) 64–79 Gobo 4 (wheel slot 5) 80–95 Gobo 5 (wheel slot 6) 96–127 Gobo 6 (wheel slot 7) 128–191 Gobo Rotate CW Slow to fast 192–255 Gobo Rotate CCW Slow to fast
12	Gobo Rotation	176	0–15 Open 16–95 Gobo 0-180 96–175 Gobo rotate 176–215 Gobo Rotate CW Slow to fast 216–255 Gobo Rotate CCW Slow to fast
13	Focus	0	
14	Prism	0	0–63 Open 64–255 3-Facet Prism (wheel slot 1)

Default (continued)

Ch	Function	Default	DMX values
15	Prism Rotation	0	0–15 No Rotation 16–135 Rotate CW Slow to fast 136–255 Rotate CCW Slow to fast
16	Effect	0	0–7 No function 8–131 Auto mode 132–255 Sound mode
17	Fixture Global Reset	250	0–249 No function 250–253 Reset 254–255 No function