
Elation

DW Chorus 24

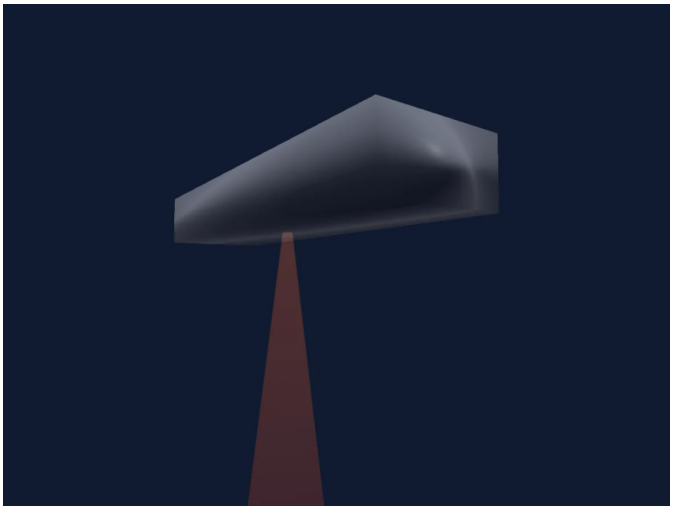

Manufacturer	**Elation**
Type	**PAR**
DMX modes	**8**
DMX footprint	**1, 2, 3, 4, 5, 9, 11 channels**
Beam angle	**14°**
Size (W × H × D)	**1420 × 200 × 400 mm**
GDTF fixture type	**D661B4D0-E459-4D6F-A791-CB…**

Controls

Extra LED colours · Colour wheel · Strobe · Dimmer

DMX modes

1 channel	1 ch
2 channel	2 ch
8 channel	2 ch
3 channel	3 ch
4 channel	4 ch
5 channel	5 ch
9 channel	9 ch
11 channel	11 ch

1 channel

1 channel

Ch	Function	Default	DMX values
1	Color Temperature	0	0–0 min ColorTemperature 1–254 No Feature 255–255 Max ColorTemperature

2 channel

2 channels

Ch	Function	Default	DMX values
1	Color RGBCW	0	0–0 min 1–254 No Feature 255–255 max
2	Color RGBWW	0	0–0 min 1–254 No Feature 255–255 max

8 channel

2 channels

Ch	Function	Default	DMX values
1	Color RGBCW	255	0–0 min 1–254 No Feature 255–255 max
2	Color RGBWW	255	0–0 min 1–254 No Feature 255–255 max

3 channel

3 channels

Ch	Function	Default	DMX values
1	Color RGBCW	0	0–0 min 1–255 Empty Channel Set
2	Color RGBWW	0	0–0 min 1–254 No Feature 255–255 max
3	Dimmer	0	0–0 closed 1–254 No Feature 255–255 open

4 channel

4 channels

Ch	Function	Default	DMX values
1	Color RGBCW	0	0–0 min 1–254 No Feature 255–255 max
2	Color RGBWW	0	0–0 min 1–254 No Feature 255–255 max

4 channel (continued)

Ch	Function	Default	DMX values
3	Shutter / Strobe	0	0–31 open 32–32 min Strobe 33–94 No Feature 95–95 max Strobe 96–127 Open (2) 128–128 min Pulse 129–158 No Feature 159–159 max Pulse 160–191 open (3) 192–192 Shutter1StrobeRandom 6 · min Rnd 0.1 Hz 193–222 No Feature 223–223 Shutter1StrobeRandom 6 · max Rnd 10 Hz 224–255 open (4)
4	Dimmer	0	0–0 closed 1–254 No Feature 255–255 open

5 channel

5 channels

Ch	Function	Default	DMX values
1	Color RGBCW	0	0–0 min 1–254 No Feature 255–255 max
2	Color RGBWW	0	0–0 min 1–254 No Feature 255–255 max
3	Shutter / Strobe	0	0–31 open 32–32 min Strobe 33–94 No Feature 95–95 max Strobe 96–127 Open (2) 128–128 min Pulse 129–158 No Feature 159–159 max Pulse 160–191 open (3) 192–192 Shutter1StrobeRandom 6 · min Rnd 0.1 Hz 193–222 No Feature 223–223 Shutter1StrobeRandom 6 · max Rnd 10 Hz 224–255 open (4)
4	Dimmer	0	0–0 closed 1–254 No Feature 255–255 open
5	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default

9 channel

9 channels

Ch	Function	Default	DMX values
1	Color RGBCW	255	0–0 min 1–254 No Feature 255–255 max

9 channel (continued)

Ch	Function	Default	DMX values
2	Color RGBWW	255	0–0 min 1–254 No Feature 255–255 max
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Dimmer	0	0–0 closed 1–254 No Feature 255–255 open`

11 channel

11 channels

Ch	Function	Default	DMX values
1	Color RGBCW	255	0–0 min 1–254 No Feature 255–255 max
2	Color RGBWW	255	0–0 min 1–254 No Feature 255–255 max
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Shutter / Strobe	0	0–31 open 32–32 min Strobe 33–94 No Feature 95–95 max Strobe 96–127 Open (2) 128–128 min Pulse 129–158 No Feature 159–159 max Pulse 160–191 open (3) 192–192 Shutter1StrobeRandom 6 · min Rnd 0.1 Hz 193–222 No Feature 223–223 Shutter1StrobeRandom 6 · max Rnd 10 Hz 224–255 open (4)
10	Dimmer	0	0–0 closed 1–254 No Feature 255–255 open`
11	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default