
Elation

KL Par FC

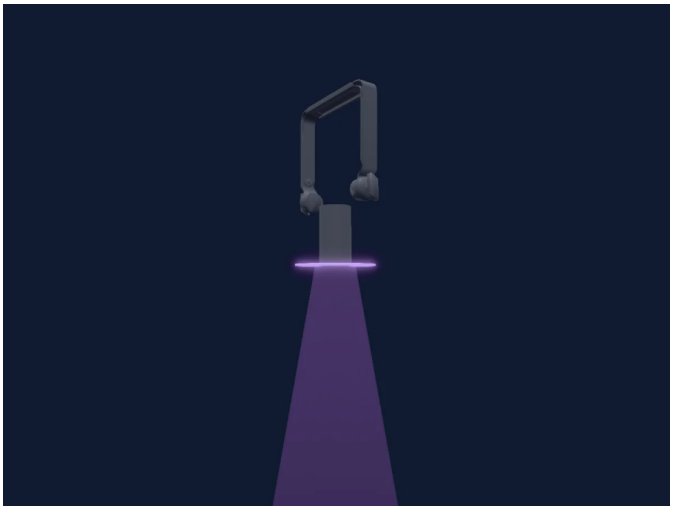

Manufacturer	**Elation**
Type	**PAR**
DMX modes	**6**
DMX footprint	**1, 6, 9, 11, 14, 18 channels**
Beam angle	**22°**
Size (W × H × D)	**250 × 354 × 250 mm**
GDTF fixture type	**DE2BC917-A434-4DE2-AA48-91…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

Dimmer	1 ch
Dimmer Color	6 ch
CMY	9 ch
Standard	11 ch
CMY Extended	14 ch
Extended	18 ch

Dimmer

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

Dimmer Color

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	0	0–31 Shutter closed 32–63 No function (shutter open) 64–95 Strobe effect - slow to fast 96–127 No function (shutter open) 128–159 Pulse effect (in sequence) 160–191 No function (shutter open) 192–223 Random strobe effect - slow to fast 224–255 No function (shutter open)
4	C TC	0	

Dimmer Color (continued)

Ch	Function	Default	DMX values
5	Color Wheel	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–54 Quarter CT Blue (wheel slot 54) 55–55 Half CT Blue (wheel slot 55) 56–56 Full CT Blue (wheel slot 56) 57–57 Double CT Blue (wheel slot 57) 58–58 Quarter CT Orange (wheel slot 58) 59–59 Half CT Orange (wheel slot 59) 60–60 Full CT Orange (wheel slot 60) 61–179 Open (wheel slot 61) 180–201 CCW fast to slow 202–207 Stop

Dimmer Color (continued)

Ch	Function	Default	DMX values
6	Function	0	

CMY

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	0	0–31 Shutter closed 32–63 No function (shutter open) 64–95 Strobe effect - slow to fast 96–127 No function (shutter open) 128–159 Pulse effect (in sequence) 160–191 No function (shutter open) 192–223 Random strobe effect - slow to fast 224–255 No function (shutter open)
4	Color Add C	0	0–254 0 % 255–255 100 %
5	Color Add M	0	0–254 0 % 255–255 100 %
6	Color Add Y	0	0–254 0 % 255–255 100 %
7	C TC	0	

CMY (continued)

Ch	Function	Default	DMX values
8	Color Wheel	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–54 Quarter CT Blue (wheel slot 54) 55–55 Half CT Blue (wheel slot 55) 56–56 Full CT Blue (wheel slot 56) 57–57 Double CT Blue (wheel slot 57) 58–58 Quarter CT Orange (wheel slot 58) 59–59 Half CT Orange (wheel slot 59) 60–60 Full CT Orange (wheel slot 60) 61–179 Open (wheel slot 61) 180–201 CCW fast to slow 202–207 Stop

CMY (continued)

Ch	Function	Default	DMX values
9	Function	0	

Standard

11 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	0	0–31 Shutter closed 32–63 No function (shutter open) 64–95 Strobe effect - slow to fast 96–127 No function (shutter open) 128–159 Pulse effect (in sequence) 160–191 No function (shutter open) 192–223 Random strobe effect - slow to fast 224–255 No function (shutter open)
4	Red	0	0–254 0 % 255–255 100 %
5	Green	0	0–254 0 % 255–255 100 %
6	Blue	0	0–254 0 % 255–255 100 %
7	Color Add GC	0	0–254 0 % 255–255 100 %
8	Color Add RY	0	0–254 0 % 255–255 100 %
9	C TC	0	

Standard (continued)

Ch	Function	Default	DMX values
10	Color Wheel	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–54 Quarter CT Blue (wheel slot 54) 55–55 Half CT Blue (wheel slot 55) 56–56 Full CT Blue (wheel slot 56) 57–57 Double CT Blue (wheel slot 57) 58–58 Quarter CT Orange (wheel slot 58) 59–59 Half CT Orange (wheel slot 59) 60–60 Full CT Orange (wheel slot 60) 61–179 Open (wheel slot 61) 180–201 CCW fast to slow 202–207 Stop

Standard (continued)

Ch	Function	Default	DMX values
11	Function	0	

CMY Extended

14 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	0	0–31 Shutter closed 32–63 No function (shutter open) 64–95 Strobe effect - slow to fast 96–127 No function (shutter open) 128–159 Pulse effect (in sequence) 160–191 No function (shutter open) 192–223 Random strobe effect - slow to fast 224–255 No function (shutter open)
4	Color Add C	0	0–254 0 % 255–255 100 %
5	Color Add C Fine	0	Fine byte of Color Add C
6	Color Add M	0	0–254 0 % 255–255 100 %
7	Color Add M Fine	0	Fine byte of Color Add M
8	Color Add Y	0	0–254 0 % 255–255 100 %
9	Color Add Y Fine	0	Fine byte of Color Add Y
10	C TC	0	

CMY Extended (continued)

Ch	Function	Default	DMX values
11	Color Wheel	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–54 Quarter CT Blue (wheel slot 54) 55–55 Half CT Blue (wheel slot 55) 56–56 Full CT Blue (wheel slot 56) 57–57 Double CT Blue (wheel slot 57) 58–58 Quarter CT Orange (wheel slot 58) 59–59 Half CT Orange (wheel slot 59) 60–60 Full CT Orange (wheel slot 60) 61–179 Open (wheel slot 61) 180–201 CCW fast to slow 202–207 Stop

CMY Extended (continued)

Ch	Function	Default	DMX values
12	Tint	0	0–0 Idle 1–127 Full Minus Green to Neutral 128–128 Neutral White 129–255 Neutral to Full Plus Green
13	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–121 0s 122–122 01s 123–123 02s 124–124 03s 125–125 04s 126–126 05s 127–127 06s 128–128 07s 129–129 08s 130–130 09s 131–131 1s 132–132 1*5s 133–133 2s 134–134 3s 135–135 4s 136–136 5s 137–137 6s 138–138 7s 139–139 8s 140–140 9s 141–141 10s 142–255 Idle
14	Function	0	

Extended

18 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	0	0–31 Shutter closed 32–63 No function (shutter open) 64–95 Strobe effect - slow to fast 96–127 No function (shutter open) 128–159 Pulse effect (in sequence) 160–191 No function (shutter open) 192–223 Random strobe effect - slow to fast 224–255 No function (shutter open)
4	Red	0	0–254 0 % 255–255 100 %
5	Red Fine	0	Fine byte of Red
6	Green	0	0–254 0 % 255–255 100 %
7	Green Fine	0	Fine byte of Green
8	Blue	0	0–254 0 % 255–255 100 %
9	Blue Fine	0	Fine byte of Blue

Extended (continued)

Ch	Function	Default	DMX values
10	Color Add GC	0	0–254 0 % 255–255 100 %
11	Color Add GC Fine	0	Fine byte of Color Add GC
12	Color Add RY	0	0–254 0 % 255–255 100 %
13	Color Add RY Fine	0	Fine byte of Color Add RY
14	C TC	0	

Extended (continued)

Ch	Function	Default	DMX values
15	Color Wheel	0	0–0 Open (wheel slot 61) 1–1 Pale Yellow (wheel slot 1) 2–2 Straw (wheel slot 2) 3–3 Gold Tint (wheel slot 3) 4–4 Spring Yellow (wheel slot 4) 5–5 Medium Yellow (wheel slot 5) 6–6 Yellow (wheel slot 6) 7–7 Deep Amber (wheel slot 7) 8–8 Deep Straw (wheel slot 8) 9–9 Loving Amber (wheel slot 9) 10–10 Gold Amber (wheel slot 10) 11–11 Orange (wheel slot 11) 12–12 Deep Orange (wheel slot 12) 13–13 Dark Amber (wheel slot 13) 14–14 Millennium Gold (wheel slot 14) 15–15 Deep Golden Amber (wheel slot 15) 16–16 Scarlet (wheel slot 16) 17–17 Primary Red (wheel slot 17) 18–18 Bright Red (wheel slot 18) 19–19 Medium Red (wheel slot 19) 20–20 Fire (wheel slot 20) 21–21 Pink (wheel slot 21) 22–22 Medium Pink (wheel slot 22) 23–23 Dark Pink (wheel slot 23) 24–24 Bright Pink (wheel slot 24) 25–25 Bright Rose (wheel slot 25) 26–26 Special Rose Pink (wheel slot 26) 27–27 Vanity Fair (wheel slot 27) 28–28 Magenta (wheel slot 28) 29–29 Dark Magenta (wheel slot 29) 30–30 Rose Purple (wheel slot 30) 31–31 Mauve (wheel slot 31) 32–32 Medium Purple (wheel slot 32) 33–33 Lavender (wheel slot 33) 34–34 Palace blue (wheel slot 34) 35–35 Dark Blue (wheel slot 35) 36–36 Medium Blue (wheel slot 36) 37–37 Deep Blue (wheel slot 37) 38–38 Daylight Blue (wheel slot 38) 39–39 Slate Blue (wheel slot 39) 40–40 Light Blue (wheel slot 40) 41–41 Sky Blue (wheel slot 41) 42–42 Pale Navy Blue (wheel slot 42) 43–43 Marine Blue (wheel slot 43) 44–44 Peacock Blue (wheel slot 44) 45–45 Lagoon Blue (wheel slot 45) 46–46 Medium Blue Green (wheel slot 46) 47–47 Dark Yellow Green (wheel slot 47) 48–48 Primary Green (wheel slot 48) 49–49 Fern Green (wheel slot 49) 50–50 Moss Green (wheel slot 50) 51–51 Dark Green (wheel slot 51) 52–52 Lime Green (wheel slot 52) 53–53 Pale Green (wheel slot 53) 54–54 Quarter CT Blue (wheel slot 54) 55–55 Half CT Blue (wheel slot 55) 56–56 Full CT Blue (wheel slot 56) 57–57 Double CT Blue (wheel slot 57) 58–58 Quarter CT Orange (wheel slot 58) 59–59 Half CT Orange (wheel slot 59) 60–60 Full CT Orange (wheel slot 60) 61–179 Open (wheel slot 61) 180–201 CCW fast to slow 202–207 Stop

Extended (continued)

Ch	Function	Default	DMX values
16	Tint	0	0–0 Idle 1–127 Full Minus Green to Neutral 128–128 Neutral White 129–255 Neutral to Full Plus Green
17	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–120 Stage 2 121–121 0s 122–122 01s 123–123 02s 124–124 03s 125–125 04s 126–126 05s 127–127 06s 128–128 07s 129–129 08s 130–130 09s 131–131 1s 132–132 1*5s 133–133 2s 134–134 3s 135–135 4s 136–136 5s 137–137 6s 138–138 7s 139–139 8s 140–140 9s 141–141 10s 142–255 Idle
18	Function	0	