
Eurolite

IP TMH-W285

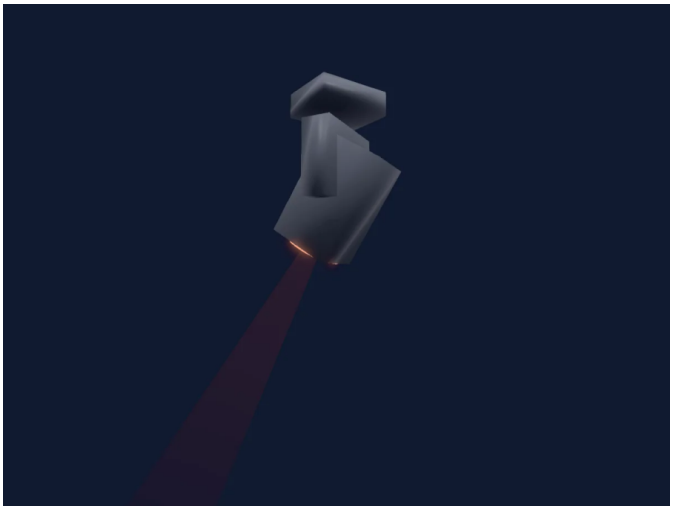

Manufacturer	**Eurolite**
Type	**Moving head**
DMX modes	**2**
DMX footprint	**18, 26 channels**
Beam angle	**2-25°**
Pan range	**540°**
Tilt range	**260°**
Heads / cells	**3**
Size (W × H × D)	**260 × 450 × 260 mm**
GDTF fixture type	**65EB6515-40CE-4F0B-9D5C-4D…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer · Pixel control · Movement speed

Safety-relevant functions

Fixture reset · Strobe

DMX modes

18ch	18 ch
26ch Mode	26 ch

18ch

18 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Dimmer	255	
7	Shutter / Strobe	255	0–8 closed 9–88 strobe FX 1 89–168 Strobe FX 2 169–240 Strobe FX 3 241–255 open
8	Red	0	
9	Green	0	
10	Blue	0	
11	White	0	
12	Zoom	0	
13	Color Macro1	0	0–10 no function 11–20 Red 21–30 Green 31–40 Blue 41–50 Orange 51–60 Cyan 61–70 Yellow 71–80 Purple 81–90 White 91–100 macro 1 101–110 macro 2 111–120 macro 3 121–130 macro 4 131–140 macro 5 141–150 macro 6 151–160 macro 7 161–170 macro 8 171–180 macro 9 181–190 macro 10 191–200 macro 11 201–210 macro 12 211–220 macro 13 221–230 macro 14 231–255 macro 15
14	Color Macro1Rate	0	

18ch (continued)

Ch	Function	Default	DMX values
15	Color Macro1	0	0–10 no function 11–20 Red 21–30 Green 31–40 Blue 41–50 Orange 51–60 Cyan 61–70 Yellow 71–80 Purple 81–90 White 91–100 macro 1 101–110 macro 2 111–120 macro 3 121–130 macro 4 131–140 macro 5 141–150 macro 6 151–160 macro 7 161–170 macro 8 171–180 macro 9 181–190 macro 10 191–200 macro 11 201–210 macro 12 211–220 macro 13 221–230 macro 14 231–255 macro 15
16	Color Macro1Rate	0	
17	Dimmer	255	
18	Fixture Global Reset	0	0–129 no function 130–255 Reset

26ch Mode

26 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Dimmer	255	
7	Shutter / Strobe	255	0–8 closed 9–88 strobe FX 1 89–168 Strobe FX 2 169–240 Strobe FX 3 241–255 open
8	Red	0	
9	Green	0	
10	Blue	0	
11	White	0	
12	Red	0	
13	Green	0	
14	Blue	0	
15	White	0	
16	Red	0	
17	Green	0	

26ch Mode (continued)

Ch	Function	Default	DMX values
18	Blue	0	
19	White	0	
20	Zoom	0	
21	Color Macro1	0	0–10 no function 11–20 Red 21–30 Green 31–40 Blue 41–50 Orange 51–60 Cyan 61–70 Yellow 71–80 Purple 81–90 White 91–100 macro 1 101–110 macro 2 111–120 macro 3 121–130 macro 4 131–140 macro 5 141–150 macro 6 151–160 macro 7 161–170 macro 8 171–180 macro 9 181–190 macro 10 191–200 macro 11 201–210 macro 12 211–220 macro 13 221–230 macro 14 231–255 macro 15
22	Color Macro1Rate	0	
23	Color Macro1	0	0–10 no function 11–20 Red 21–30 Green 31–40 Blue 41–50 Orange 51–60 Cyan 61–70 Yellow 71–80 Purple 81–90 White 91–100 macro 1 101–110 macro 2 111–120 macro 3 121–130 macro 4 131–140 macro 5 141–150 macro 6 151–160 macro 7 161–170 macro 8 171–180 macro 9 181–190 macro 10 191–200 macro 11 201–210 macro 12 211–220 macro 13 221–230 macro 14 231–255 macro 15
24	Color Macro1Rate	0	
25	Dimmer	255	
26	Fixture Global Reset	0	0–129 no function 130–255 Reset