
Eurolite

LED PIX-144_72 RGB_CW

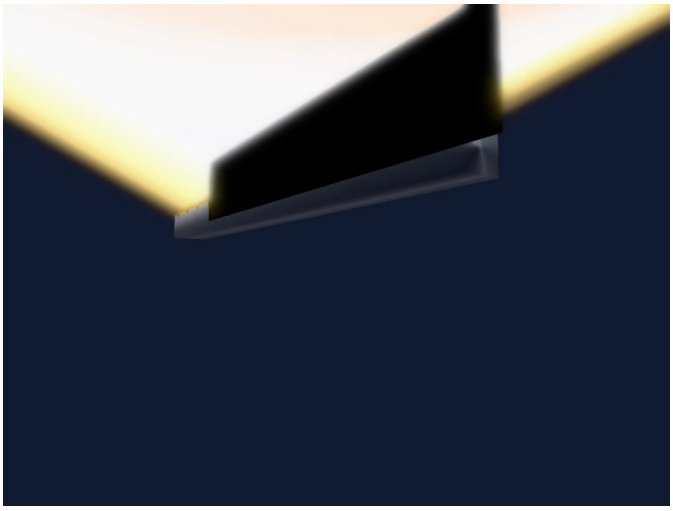

Manufacturer	**Eurolite**
Type	**LED bar**
DMX modes	**3**
DMX footprint	**6, 16, 84 channels**
Beam angle	**120°**
Heads / cells	**24**
Size (W × H × D)	**1000 × 65 × 90 mm**
GDTF fixture type	**B5740F57-7F0A-4A58-909D-D7…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Effect speed · Dimmer · Pixel control

Safety-relevant functions

Built-in effect programmes

DMX modes

6-Channel	6 ch
16-Channel	16 ch
84-Channel	84 ch

6-Channel

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Strobe Rate	0	0–8 No function 9–255 Strobe speed
3	Red	0	
4	Green	0	
5	Blue	0	
6	Color Add CW	0	

16-Channel

16 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Color RGBYellow	0	
3	Red	0	
4	Green	0	
5	Blue	0	
6	Color Add CW	0	
7	Strobe Rate	0	0–15 No function 16–131 Strobe speed 132–139 No function 140–181 Closing pulse speed 182–189 No function 190–231 Opening pulse speed 232–239 No function 240–247 Random strobe 248–255 No function
8	Strobe Frequency	0	0–15 No function 16–131 Strobe speed 132–139 No function 140–181 Closing pulse speed 182–189 No function 190–231 Opening pulse speed 232–239 No function 240–247 Random strobe 248–255 No function
9	Strobe Mode Pulse	0	
10	Effect	0	0–7 No function 8–27 Effect 1 28–47 Effect 2 48–67 Effect 3 68–87 Effect 4 88–107 Effect 5 108–127 Effect 6 128–147 Effect 7 148–167 Effect 8 168–187 Effect 9 188–207 Effect 10 208–227 Effect 11 228–247 Effect 12 248–255 Effect 13
11	Effect Speed	0	

16-Channel (continued)

Ch	Function	Default	DMX values
12	Color Effects1	0	0–7 No function 8–15 Effect 1 16–23 Effect 2 24–31 Effect 3 32–39 Effect 4 40–47 Effect 5 48–55 Effect 6 56–63 Effect 7 64–71 Effect 8 72–79 Effect 9 80–87 Effect 10 88–95 Effect 11 96–103 Effect 12 104–111 Effect 13 112–119 Effect 14 120–127 Effect 15 128–135 Effect 16 136–143 Effect 17 144–151 Effect 18 152–159 Effect 19 160–167 Effect 20 168–175 Effect 21 176–183 Effect 22 184–191 Effect 23 192–199 Effect 24 200–207 Effect 25 208–215 Effect 26 216–223 Effect 27 224–231 Effect 28 232–239 Effect 29 240–247 Effect 30 248–255 Effect 31
13	Effect Speed 2	0	
14	Color Macro1	0	0–7 No function 8–255 Mix-effect RGB
15	Color Control	0	
16	Effect	0	0–127 Forwards 128–255 Backwards

84-Channel

84 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	Red	0	
5	Green	0	
6	Blue	0	
7	Red	0	
8	Green	0	
9	Blue	0	
10	Red	0	
11	Green	0	
12	Blue	0	
13	Red	0	

84-Channel (continued)

Ch	Function	Default	DMX values
14	Green	0	
15	Blue	0	
16	Red	0	
17	Green	0	
18	Blue	0	
19	Red	0	
20	Green	0	
21	Blue	0	
22	Red	0	
23	Green	0	
24	Blue	0	
25	Red	0	
26	Green	0	
27	Blue	0	
28	Red	0	
29	Green	0	
30	Blue	0	
31	Red	0	
32	Green	0	
33	Blue	0	
34	Red	0	
35	Green	0	
36	Blue	0	
37	Red	0	
38	Green	0	
39	Blue	0	
40	Red	0	
41	Green	0	
42	Blue	0	
43	Red	0	
44	Green	0	
45	Blue	0	
46	Red	0	
47	Green	0	
48	Blue	0	
49	Red	0	
50	Green	0	
51	Blue	0	
52	Red	0	
53	Green	0	
54	Blue	0	
55	Red	0	
56	Green	0	
57	Blue	0	
58	Red	0	

84-Channel (continued)

Ch	Function	Default	DMX values
59	Green	0	
60	Blue	0	
61	Red	0	
62	Green	0	
63	Blue	0	
64	Red	0	
65	Green	0	
66	Blue	0	
67	Red	0	
68	Green	0	
69	Blue	0	
70	Red	0	
71	Green	0	
72	Blue	0	
73	Dimmer	0	
74	Dimmer	0	
75	Dimmer	0	
76	Dimmer	0	
77	Dimmer	0	
78	Dimmer	0	
79	Dimmer	0	
80	Dimmer	0	
81	Dimmer	0	
82	Dimmer	0	
83	Dimmer	0	
84	Dimmer	0	