
Eurolite

LED TMH-S200

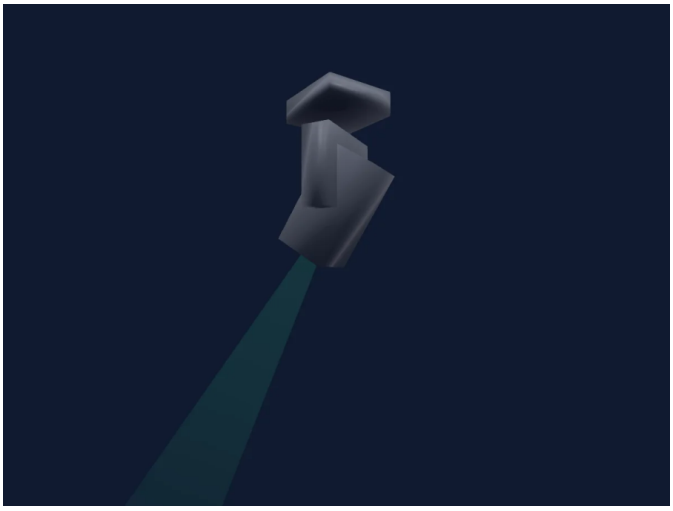

Manufacturer	**Eurolite**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**17 channels**
Beam angle	**8-22°**
Pan range	**540°**
Tilt range	**220°**
Size (W × H × D)	**240 × 450 × 220 mm**
GDTF fixture type	**9D17D5E9-3776-4315-8104-14…**

Controls

Focus · Frost · Prism · Prism rotation · Zoom · Colour wheel · Strobe · Dimmer · Movement speed · Gobos · Gobo rotation

Safety-relevant functions

Fixture reset · Strobe

DMX modes

Mode 1 — 17 ch

Mode 1

17 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Shutter / Strobe	255	0–3 Close 4–251 Strobe 252–255 Open
7	Dimmer	0	0–254 0% 255–255 100%
8	Color Wheel	0	0–4 white (wheel slot 1) 5–9 white/ red (wheel slot 1) 10–14 red (wheel slot 2) 15–19 red/ green (wheel slot 2) 20–24 green (wheel slot 3) 25–29 green/ light blue (wheel slot 3) 30–34 blue (wheel slot 4) 35–39 light blue/ amber (wheel slot 4) 40–44 amber (wheel slot 5) 45–49 amber/ purple (wheel slot 5) 50–54 purple (wheel slot 6) 55–59 purple/ yellow (wheel slot 6) 60–64 yellow (wheel slot 7) 65–69 yellow/ light green (wheel slot 7) 70–74 light green (wheel slot 8) 75–79 light green/ pink (wheel slot 8) 80–84 pink (wheel slot 9) 85–89 pink/ blue (wheel slot 9) 90–94 blue (wheel slot 10) 95–99 blue/ white (wheel slot 10) 100–182 Rainbow forward 183–255 Rainbow backward
9	Gobo	0	0–9 Open (wheel slot 9) 10–19 Gobo1 (wheel slot 1) 20–29 Gobo2 (wheel slot 2) 30–39 Gobo3 (wheel slot 3) 40–49 Gobo4 (wheel slot 4) 50–59 Gobo5 (wheel slot 5) 60–69 Gobo6 (wheel slot 6) 70–79 Gobo7 (wheel slot 7) 80–89 Gobo8 (wheel slot 8) 90–99 Gobo9 (wheel slot 9) 100–104 Gobo 1 Shake (wheel slot 1) 105–109 Gobo 2 Shake (wheel slot 2) 110–114 Gobo 3 Shake (wheel slot 3) 115–119 Gobo 4 Shake (wheel slot 4) 120–124 Gobo 5 Shake (wheel slot 5) 125–129 Gobo 6 Shake (wheel slot 6) 130–134 Gobo 7 Shake (wheel slot 7) 135–139 Gobo 8 Shake (wheel slot 8) 140–144 Gobo 9 Shake (wheel slot 9) 145–145 Open Shake (wheel slot 9) 146–255 Empty Channel Set

Mode 1 (continued)

Ch	Function	Default	DMX values
10	Gobo 2	0	0–9 Open (wheel slot 8) 10–19 Gobo1 (wheel slot 1) 20–29 Gobo2 (wheel slot 2) 30–39 Gobo3 (wheel slot 3) 40–49 Gobo4 (wheel slot 4) 50–59 Gobo5 (wheel slot 5) 60–69 Gobo6 (wheel slot 6) 70–79 Gobo7 (wheel slot 7) 80–89 1 (wheel slot 1) 90–99 2 (wheel slot 2) 100–109 3 (wheel slot 3) 110–119 4 (wheel slot 4) 120–129 5 (wheel slot 5) 130–139 6 (wheel slot 6) 140–149 7 (wheel slot 7) 150–200 backward 201–255 forward
11	Gobo Rotation	0	0–127 Gobo2 Pos 128–191 forward Spin 192–255 backward Spin
12	Focus	0	
13	Zoom	128	
14	Prism	0	0–127 no Prism (wheel slot 2) 128–255 Prism (wheel slot 1)
15	Prism Rotation	0	0–127 Prism Rotate 128–190 backward 191–192 no function 193–255 forward
16	Frost1	0	0–127 no Frost 128–255 Frost
17	Fixture Global Reset	0	0–20 no funktion 21–127 int program 128–160 reset other 161–199 reset PAN/TILT 200–250 reset all 251–255 no funktion