
Eurolite

LED Z-PAR QCL 7x10W

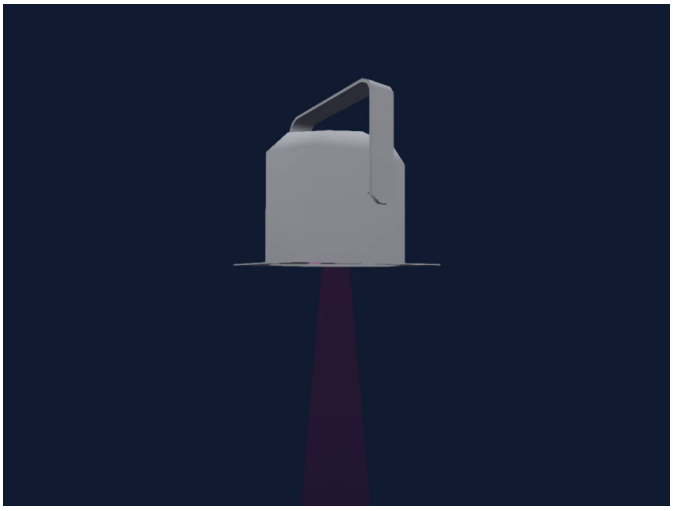

Manufacturer	**Eurolite**
Type	**Effect light**
DMX modes	**1**
DMX footprint	**12 channels**
Beam angle	**4-18°**
Size (W × H × D)	**250 × 195 × 45 mm**
GDTF fixture type	**83C18964-7C22-4E10-84A7-6D…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Effect speed · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

12ch mode — 12 ch

12ch mode

12 channels

Ch	Function	Default	DMX values
1	Zoom	127	0–126 Zoom wide 127–254 Zoom half 255–255 Zoom narrow
2	Dimmer	0	0–126 Dimmer 0% 127–254 Dimmer 50% 255–255 Dimmer 100%
3	Strobe Frequency	0	0–0 Strobe off 1–254 Strobe slow 255–255 Strobe full
4	Red	0	
5	Green	0	
6	Blue	0	
7	White	255	
8	Color1Wheel Index	0	0–0 Inactive / RGB Mix Ch 4-7 (wheel slot 1) 1–18 deep orange (wheel slot 2) 19–19 yellow (wheel slot 3) 20–20 bright red (wheel slot 4) 21–39 deep magenta (wheel slot 5) 40–58 green (wheel slot 6) 59–59 yellow 1 (wheel slot 7) 60–60 deep green (wheel slot 8) 61–79 mint (wheel slot 9) 80–99 deep blue (wheel slot 10) 100–100 yellow 2 (wheel slot 11) 101–118 warm white (wheel slot 12) 119–119 cool white (wheel slot 13) 120–139 pink (wheel slot 14) 140–158 mint 1 (wheel slot 15) 159–159 white (wheel slot 16) 160–178 magenta (wheel slot 17) 179–179 white 1 (wheel slot 18) 180–198 pink 1 (wheel slot 19) 199–199 white 2 (wheel slot 20) 200–218 mint 2 (wheel slot 21) 219–219 white 3 (wheel slot 22) 220–254 pink 2 (wheel slot 23) 255–255 white 4 (wheel slot 24)
9	Effect	0	0–10 RGBW Ch1-8 11–119 Colour Change Switch 120–179 Colour Change Fade 180–244 Colour Change Switch+Fade+Strobe 245–255 Music (Sound-to-Light)
10	Effect Speed	0	0–254 Effects Speed max 255–255 Effects Speed min
11	Zoom MSpeed	0	0–254 Zoom Speed Fast 255–255 Zoom Speed Slow
12	Control1	0	0–64 No function 65–128 Auto Mode 129–192 Music Mode 193–255 Reset