
Eurolite

Matrix Panel 5x5

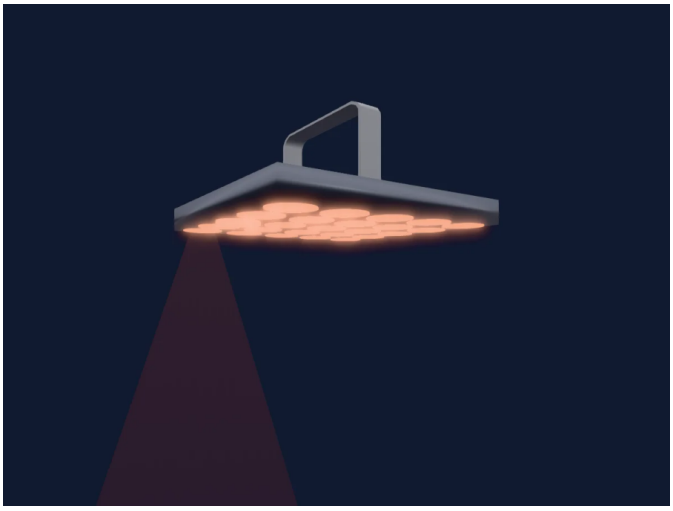

Manufacturer	**Eurolite**
Type	**Spot**
DMX modes	**4**
DMX footprint	**4, 10, 15, 102 channels**
Beam angle	**25-45°**
Heads / cells	**25**
Size (W × H × D)	**270 × 180 × 45 mm**
GDTF fixture type	**D41942BD-FA76-4109-9C42-93...**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer · Pixel control

Safety-relevant functions

Strobe

DMX modes

4-Ch-Mode	4 ch
10ch Mode	10 ch
15ch Mode	15 ch
102 ch Mode	102 ch

4-Ch-Mode

4 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	Color Add WW	0	

10ch Mode

10 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	Color Add WW	0	
5	Dimmer	0	
6	Shutter / Strobe	0	0–10 open 11–40 Strobe 1 increasing speed 41–70 Strobe 2 increasing speed 71–100 Strobe 3 increasing speed 101–127 Strobe 4 increasing speed 128–255 Strobe 5 increasing speed
7	Macros Static	0	
8	Macros Animated	0	
9	Macros Music	0	
10	Macros Speed	0	

15ch Mode

15 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	Color Add WW	0	
5	Dimmer	0	
6	Shutter / Strobe	0	0–10 Shutter open 11–40 Strobe 1 increasing speed 41–70 Strobe 2 increasing speed 71–100 Strobe 3 increasing speed 101–127 Strobe 4 increasing speed 128–255 Strobe 5 increasing speed
7	Color Fade	0	
8	Macros Static	0	
9	Macros Animated	0	
10	Macros Music	0	
11	Macros Speed	0	
12	Red Background	0	
13	Green Background	0	
14	Blue Background	0	
15	Ww Background	0	

102 ch Mode

102 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	Color Add WW	0	
5	Red	0	
6	Green	0	
7	Blue	0	
8	Color Add WW	0	
9	Red	0	
10	Green	0	
11	Blue	0	
12	Color Add WW	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	Color Add WW	0	
17	Red	0	
18	Green	0	
19	Blue	0	
20	Color Add WW	0	
21	Red	0	
22	Green	0	
23	Blue	0	
24	Color Add WW	0	
25	Red	0	
26	Green	0	
27	Blue	0	
28	Color Add WW	0	
29	Red	0	
30	Green	0	
31	Blue	0	
32	Color Add WW	0	
33	Red	0	
34	Green	0	
35	Blue	0	
36	Color Add WW	0	
37	Red	0	
38	Green	0	
39	Blue	0	
40	Color Add WW	0	
41	Red	0	
42	Green	0	
43	Blue	0	
44	Color Add WW	0	
45	Red	0	

102 ch Mode (continued)

Ch	Function	Default	DMX values
46	Green	0	
47	Blue	0	
48	Color Add WW	0	
49	Red	0	
50	Green	0	
51	Blue	0	
52	Color Add WW	0	
53	Red	0	
54	Green	0	
55	Blue	0	
56	Color Add WW	0	
57	Red	0	
58	Green	0	
59	Blue	0	
60	Color Add WW	0	
61	Red	0	
62	Green	0	
63	Blue	0	
64	Color Add WW	0	
65	Red	0	
66	Green	0	
67	Blue	0	
68	Color Add WW	0	
69	Red	0	
70	Green	0	
71	Blue	0	
72	Color Add WW	0	
73	Red	0	
74	Green	0	
75	Blue	0	
76	Color Add WW	0	
77	Red	0	
78	Green	0	
79	Blue	0	
80	Color Add WW	0	
81	Red	0	
82	Green	0	
83	Blue	0	
84	Color Add WW	0	
85	Red	0	
86	Green	0	
87	Blue	0	
88	Color Add WW	0	
89	Red	0	
90	Green	0	

102 ch Mode (continued)

Ch	Function	Default	DMX values
91	Blue	0	
92	Color Add WW	0	
93	Red	0	
94	Green	0	
95	Blue	0	
96	Color Add WW	0	
97	Red	0	
98	Green	0	
99	Blue	0	
100	Color Add WW	0	
101	Dimmer	0	
102	Shutter / Strobe	0	0–10 Shutter open 11–41 Strobe 1 increasing speed 42–70 Strobe 2 increasing speed 71–100 Strobe 3 increasing speed 101–127 strobe 4 increasing speed 128–255 strobe 5 increasing speed