
Eurolite

TMH-75 Spot

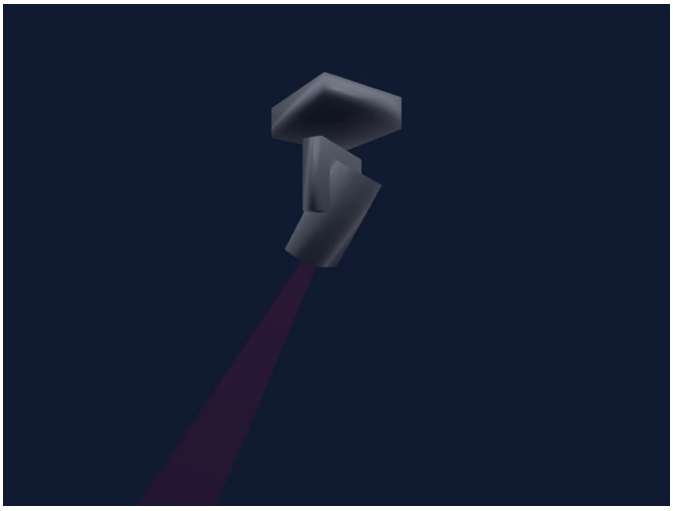

Manufacturer	**Eurolite**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**13 channels**
Beam angle	**12°**
Pan range	**540°**
Tilt range	**270°**
Size (W × H × D)	**150 × 250 × 80 mm**
GDTF fixture type	**B976346D-D54D-4F78-938E-8B...**

Controls

Focus · Prism · Colour wheel · Strobe · Dimmer · Pan and tilt · Movement speed · Gobos · Gobo rotation

Safety-relevant functions

Fixture reset · Service functions · Strobe

DMX modes

13Ch 13 ch

13Ch

13 channels

Ch	Function	Default	DMX values
1	Pan	128	0–0 Minimum 1–126 Negative 127–253 Centre 254–255 Maximum
2	Tilt	128	0–0 Minimum 1–126 Negative 127–253 Centre 254–255 Maximum
3	Position MSpeed	0	0–0 Maximum Speed 1–222 Fast to Slow 223–223 Minimum Speed 224–255 Mib
4	Color Wheel	0	0–12 Open (wheel slot 1) 13–25 Red (wheel slot 2) 26–38 Cyan (wheel slot 3) 39–51 Green (wheel slot 4) 52–64 Yellow (wheel slot 5) 65–77 Pink (wheel slot 6) 78–90 Blue (wheel slot 7) 91–103 Amber (wheel slot 8) 104–116 Lime (wheel slot 9) 117–127 Purple (wheel slot 10) 128–128 >>> 129–189 100% -> 0% 190–193 Stop 194–254 0 -> -100% 255–255 <<<
5	Gobo	0	0–8 Open (wheel slot 1) 9–17 Gobo 1 (wheel slot 2) 18–26 Gobo 2 (Colored) (wheel slot 3) 27–35 Gobo 3 (wheel slot 4) 36–44 Gobo 4 (wheel slot 5) 45–53 Gobo 5 (wheel slot 6) 54–62 Gobo 6 (Colored) (wheel slot 7) 63–69 Gobo 7 (wheel slot 8) 70–91 Gobo 1 92–113 Gobo 2 (Colored) 114–135 Gobo 3 136–157 Gobo 4 158–179 Gobo 5 180–201 Gobo 6 (Colored) 202–223 Gobo 7 224–224 >>> 225–238 100% -> 0% 239–240 Stop 241–254 0 -> -100% 255–255 <<<
6	Gobo Rotation	0	0–3 stop 4–4 >>> 5–127 100 -> 0% 128–131 nothing 132–254 0% -> -100% 255–255 <<<
7	Focus	0	0–0 Far 1–254 Far to Near 255–255 Near

13Ch (continued)

Ch	Function	Default	DMX values
8	Prism	0	0–14 Open (wheel slot 1) 15–50 3-Facet Prism (wheel slot 2) 51–51 >>> 52–150 100 -> 0% 151–155 stop 156–254 0% -> -100% 255–255 <<<
9	Shutter / Strobe	0	0–4 open 5–248 min Strobe 249–250 max Strobe 251–255 open (2)
10	Dimmer	0	
11	Control1	0	8–15 Reset All 16–23 Reset P/T 24–31 Reset Colors 32–39 Reset Gobo 40–47 Reset Function 48–55 Reset Other 56–63 Display Off 64–87 Display On 88–255 Standby
12	Pan Fine	128	Fine byte of Pan
13	Tilt Fine	128	Fine byte of Tilt