
Event Lighting

DELUGEM120WFX

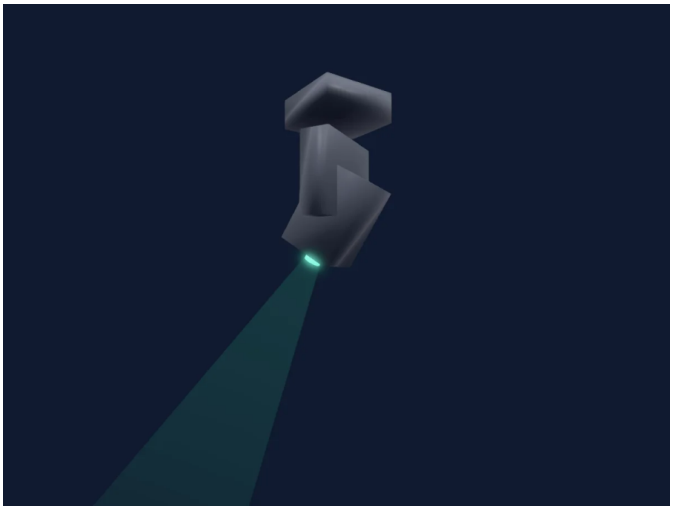

Manufacturer	**Event Lighting**
Type	**Moving head**
DMX modes	**5**
DMX footprint	**18, 20, 23, 41, 225 channels**
Beam angle	**25°**
Pan range	**540°**
Tilt range	**220°**
Heads / cells	**49**
Size (W × H × D)	**240 × 350 × 220 mm**
GDTF fixture type	**F627DA19-962F-4A11-95FA-B5…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Effect speed · Dimmer · Pixel control · Pan and tilt · Movement speed

Safety-relevant functions

Fixture reset · Service functions · Built-in effect programmes

DMX modes

18ch Mode	18 ch
20ch Mode	20 ch
23ch Mode	23 ch
41ch Mode	41 ch
225ch Mode	225 ch

18ch Mode

18 channels

Ch	Function	Default	DMX values
1	Pan	0	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	0	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Shutter1Strobe	0	0–5 Shutter Open 1 6–10 Shutter Closed 11–35 Pulse Random Strobe 36–60 Ramp Up Strobe 61–85 Ramp Down Strobe 86–110 Random Strobe 111–135 Strobe Break Effect 136–250 Strobe 251–255 Shutter Open 2
7	Dimmer	0	
8	Dimmer Fine	0	Fine byte of Dimmer
9	Red	255	
10	Green	255	
11	Blue	255	
12	Color Add GY	0	
13	Zoom	0	

18ch Mode (continued)

Ch	Function	Default	DMX values
14	Control1	0	0–4 No Function 5–9 Display On 10–14 Display 10s 15–19 Display 30s 20–24 Display 60s 25–29 Screen Lock Off 30–34 Screen Lock On 35–39 Signal Hold 40–44 Black Field 45–59 No Function 60–64 Standard Dimming 65–69 Fast Dimming 70–74 Slow Dimming 75–84 No Function 85–89 Linear 90–94 Square 95–99 S-Curve 100–109 No Function 110–114 4000Hz 115–119 8000Hz 120–124 16000Hz 125–129 24000Hz 130–139 No Function 140–144 Fan Auto 145–149 Fan Silent 150–154 Fan Full 155–164 No Function 165–169 Red Drift Off 170–174 Red Drift On 175–179 No Function 180–184 Pan Reverse Off 185–189 Pan Reverse On 190–194 Pan Error Correction Off 195–199 Pan Error Correction On 200–204 Tilt Reverse Off 205–209 Tilt Reverse On 210–214 Tilt Error Correction Off 215–219 Tilt Error Correction On 220–224 XY Reset 225–229 Zoom Reset 230–234 Reset All 235–255 No Function
15	Position Effect	0	0–5 No Function 6–45 Movement Macro 1 46–85 Movement Macro 2 86–125 Movement Macro 3 126–165 Movement Macro 4 166–205 Movement Macro 5 206–255 Movement Macro 6
16	Position Effect Rate	0	0–0 Slow 1–254 Slow > Fast 255–255 Fast

18ch Mode (continued)

Ch	Function	Default	DMX values
17	Color Wheel	0	0–5 No Function 6–10 Magenta (wheel slot 1) 11–15 Peacock Blue (wheel slot 2) 16–20 Steel Blue (wheel slot 3) 21–25 Light Blue (wheel slot 4) 26–30 Dark Blue (wheel slot 5) 31–35 Leaf Green (wheel slot 6) 36–40 Dark Green (wheel slot 7) 41–45 Mauve0 (wheel slot 8) 46–50 Deep Golden Amber (wheel slot 9) 51–55 Pale Lavender (wheel slot 10) 56–60 Primary Green (wheel slot 11) 61–65 Bright Blue (wheel slot 12) 66–70 Apricot (wheel slot 13) 71–75 Pale Gold (wheel slot 14) 76–135 Rainbow Effect 136–194 Colour Macro Jumping 195–255 Colour Macro Gradient
18	Color Wheel 2	0	0–5 No Function 6–21 1800K (wheel slot 1) 22–37 2000K (wheel slot 2) 38–53 2500K (wheel slot 3) 54–69 2700K (wheel slot 4) 70–85 3000K (wheel slot 5) 86–101 3200K (wheel slot 6) 102–117 3500K (wheel slot 7) 118–133 4000K (wheel slot 8) 134–149 4500K (wheel slot 9) 150–165 5000K (wheel slot 10) 166–181 5600K (wheel slot 11) 182–197 6000K (wheel slot 12) 198–213 6500K (wheel slot 13) 214–229 7200K (wheel slot 14) 230–255 8000K (wheel slot 15)

20ch Mode

20 channels

Ch	Function	Default	DMX values
1	Shutter1Strobe	0	0–5 Shutter Open 1 6–10 Shutter Closed 11–35 Pulse Random Strobe 36–60 Ramp Up Strobe 61–85 Ramp Down Strobe 86–110 Random Strobe 111–135 Strobe Break Effect 136–250 Strobe 251–255 Shutter Open 2
2	Dimmer	0	
3	Dimmer Fine	0	Fine byte of Dimmer
4	Red	255	
5	Red Fine	255	Fine byte of Red
6	Green	255	
7	Green Fine	255	Fine byte of Green
8	Blue	255	
9	Blue Fine	255	Fine byte of Blue
10	Color Add GY	0	
11	Color Add GY Fine	0	Fine byte of Color Add GY

20ch Mode (continued)

Ch	Function	Default	DMX values
12	No Feature	0	
13	Zoom	0	
14	Zoom Fine	0	Fine byte of Zoom
15	Pan	0	
16	Pan Fine	0	Fine byte of Pan
17	Tilt	0	
18	Tilt Fine	0	Fine byte of Tilt
19	Control1	0	0–4 No Function 5–9 Display On 10–14 Display 10s 15–19 Display 30s 20–24 Display 60s 25–29 Screen Lock Off 30–34 Screen Lock On 35–39 Signal Hold 40–44 Black Field 45–59 No Function 60–64 Standard Dimming 65–69 Fast Dimming 70–74 Slow Dimming 75–84 No Function 85–89 Linear 90–94 Square 95–99 S-Curve 100–109 No Function 110–114 4000Hz 115–119 8000Hz 120–124 16000Hz 125–129 24000Hz 130–139 No Function 140–144 Fan Auto 145–149 Fan Silent 150–154 Fan Full 155–164 No Function 165–169 Red Drift Off 170–174 Red Drift On 175–179 No Function 180–184 Pan Reverse Off 185–189 Pan Reverse On 190–194 Pan Error Correction Off 195–199 Pan Error Correction On 200–204 Tilt Reverse Off 205–209 Tilt Reverse On 210–214 Tilt Error Correction Off 215–219 Tilt Error Correction On 220–224 XY Reset 225–229 Zoom Reset 230–234 Reset All 235–255 No Function
20	L EDFrequency	0	0–50 Menu Setting 51–100 4000Hz 101–150 8000Hz 151–200 16000Hz 201–255 24000Hz

23ch Mode

23 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Shutter1Strobe	0	0–5 Shutter Open 1 6–10 Shutter Closed 11–35 Pulse Random Strobe 36–60 Ramp Up Strobe 61–85 Ramp Down Strobe 86–110 Random Strobe 111–135 Strobe Break Effect 136–250 Strobe 251–255 Shutter Open 2
7	Dimmer	0	0–254 Closed 255–255 Open
8	Dimmer Fine	0	Fine byte of Dimmer
9	Red	255	
10	Red Fine	255	Fine byte of Red
11	Green	255	
12	Green Fine	255	Fine byte of Green
13	Blue	255	
14	Blue Fine	255	Fine byte of Blue
15	Color Add GY	0	
16	Color Add GY Fine	0	Fine byte of Color Add GY
17	Zoom	0	
18	Zoom Fine	0	Fine byte of Zoom

23ch Mode (continued)

Ch	Function	Default	DMX values
19	Control1	0	0–4 No Function 5–9 Display On 10–14 Display 10s 15–19 Display 30s 20–24 Display 60s 25–29 Screen Lock Off 30–34 Screen Lock On 35–39 Signal Hold 40–44 Black Field 45–59 No Function 60–64 Standard Dimming 65–69 Fast Dimming 70–74 Slow Dimming 75–84 No Function 85–89 Linear 90–94 Square 95–99 S-Curve 100–109 No Function 110–114 4000Hz 115–119 8000Hz 120–124 16000Hz 125–129 24000Hz 130–139 No Function 140–144 Fan Auto 145–149 Fan Silent 150–154 Fan Full 155–164 No Function 165–169 Red Drift Off 170–174 Red Drift On 175–179 No Function 180–184 Pan Reverse Off 185–189 Pan Reverse On 190–194 Pan Error Correction Off 195–199 Pan Error Correction On 200–204 Tilt Reverse Off 205–209 Tilt Reverse On 210–214 Tilt Error Correction Off 215–219 Tilt Error Correction On 220–224 XY Reset 225–229 Zoom Reset 230–234 Reset All 235–255 No Function
20	Position Effect	0	0–5 No Function 6–45 Movement Macro 1 46–85 Movement Macro 2 86–125 Movement Macro 3 126–165 Movement Macro 4 166–205 Movement Macro 5 206–255 Movement Macro 6
21	Position Effect Rate	0	0–0 Slow 1–254 Slow > Fast 255–255 Fast

23ch Mode (continued)

Ch	Function	Default	DMX values
22	Color Wheel	0	0–5 No Function 6–10 Magenta (wheel slot 1) 11–15 Peacock Blue (wheel slot 2) 16–20 Steel Blue (wheel slot 3) 21–25 Light Blue (wheel slot 4) 26–30 Dark Blue (wheel slot 5) 31–35 Leaf Green (wheel slot 6) 36–40 Dark Green (wheel slot 7) 41–45 Mauve0 (wheel slot 8) 46–50 Deep Golden Amber (wheel slot 9) 51–55 Pale Lavender (wheel slot 10) 56–60 Primary Green (wheel slot 11) 61–65 Bright Blue (wheel slot 12) 66–70 Apricot (wheel slot 13) 71–75 Pale Gold (wheel slot 14) 76–135 Rainbow Effect 136–194 Colour Macro Jumping 195–255 Colour Macro Gradient
23	Color Wheel 2	0	0–5 No Function 6–21 1800K (wheel slot 1) 22–37 2000K (wheel slot 2) 38–53 2500K (wheel slot 3) 54–69 2700K (wheel slot 4) 70–85 3000K (wheel slot 5) 86–101 3200K (wheel slot 6) 102–117 3500K (wheel slot 7) 118–133 4000K (wheel slot 8) 134–149 4500K (wheel slot 9) 150–165 5000K (wheel slot 10) 166–181 5600K (wheel slot 11) 182–197 6000K (wheel slot 12) 198–213 6500K (wheel slot 13) 214–229 7200K (wheel slot 14) 230–255 8000K (wheel slot 15)

41ch Mode

41 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Shutter1Strobe	0	0–5 Shutter Open 1 6–10 Shutter Closed 11–35 Pulse Random Strobe 36–60 Ramp Up Strobe 61–85 Ramp Down Strobe 86–110 Random Strobe 111–135 Strobe Break Effect 136–250 Strobe 251–255 Shutter Open 2
7	Dimmer	0	0–254 Closed 255–255 Open
8	Dimmer Fine	0	Fine byte of Dimmer
9	Red	255	
10	Red Fine	255	Fine byte of Red

41ch Mode (continued)

Ch	Function	Default	DMX values
11	Green	255	
12	Green Fine	255	Fine byte of Green
13	Blue	255	
14	Blue Fine	255	Fine byte of Blue
15	Color Add GY	0	
16	Color Add GY Fine	0	Fine byte of Color Add GY
17	Zoom	0	
18	Zoom Fine	0	Fine byte of Zoom
19	Control1	0	0–4 No Function 5–9 Display On 10–14 Display 10s 15–19 Display 30s 20–24 Display 60s 25–29 Screen Lock Off 30–34 Screen Lock On 35–39 Signal Hold 40–44 Black Field 45–59 No Function 60–64 Standard Dimming 65–69 Fast Dimming 70–74 Slow Dimming 75–84 No Function 85–89 Linear 90–94 Square 95–99 S-Curve 100–109 No Function 110–114 4000Hz 115–119 8000Hz 120–124 16000Hz 125–129 24000Hz 130–139 No Function 140–144 Fan Auto 145–149 Fan Silent 150–154 Fan Full 155–164 No Function 165–169 Red Drift Off 170–174 Red Drift On 175–179 No Function 180–184 Pan Reverse Off 185–189 Pan Reverse On 190–194 Pan Error Correction Off 195–199 Pan Error Correction On 200–204 Tilt Reverse Off 205–209 Tilt Reverse On 210–214 Tilt Error Correction Off 215–219 Tilt Error Correction On 220–224 XY Reset 225–229 Zoom Reset 230–234 Reset All 235–255 No Function
20	Position Effect	0	0–5 No Function 6–45 Movement Macro 1 46–85 Movement Macro 2 86–125 Movement Macro 3 126–165 Movement Macro 4 166–205 Movement Macro 5 206–255 Movement Macro 6

41ch Mode (continued)

Ch	Function	Default	DMX values
21	Position Effect Rate	0	0–0 Slow 1–254 Slow > Fast 255–255 Fast
22	Color Wheel	0	0–5 No Function 6–10 Magenta (wheel slot 1) 11–15 Peacock Blue (wheel slot 2) 16–20 Steel Blue (wheel slot 3) 21–25 Light Blue (wheel slot 4) 26–30 Dark Blue (wheel slot 5) 31–35 Leaf Green (wheel slot 6) 36–40 Dark Green (wheel slot 7) 41–45 Mauve0 (wheel slot 8) 46–50 Deep Golden Amber (wheel slot 9) 51–55 Pale Lavender (wheel slot 10) 56–60 Primary Green (wheel slot 11) 61–65 Bright Blue (wheel slot 12) 66–70 Apricot (wheel slot 13) 71–75 Pale Gold (wheel slot 14) 76–135 Rainbow Effect 136–194 Colour Macro Jumping 195–255 Colour Macro Gradient
23	Color Wheel 2	0	0–5 No Function 6–21 1800K (wheel slot 1) 22–37 2000K (wheel slot 2) 38–53 2500K (wheel slot 3) 54–69 2700K (wheel slot 4) 70–85 3000K (wheel slot 5) 86–101 3200K (wheel slot 6) 102–117 3500K (wheel slot 7) 118–133 4000K (wheel slot 8) 134–149 4500K (wheel slot 9) 150–165 5000K (wheel slot 10) 166–181 5600K (wheel slot 11) 182–197 6000K (wheel slot 12) 198–213 6500K (wheel slot 13) 214–229 7200K (wheel slot 14) 230–255 8000K (wheel slot 15)
24	Tint	0	
25	Function	0	0–50 As Per Menu 51–100 4000Hz 101–150 8000Hz 151–200 16000Hz 201–255 24000Hz
26	Dimmer	0	
27	Shutter1Strobe	0	0–5 Shutter Open 1 6–10 Shutter Closed 11–35 Pulse Random Strobe 36–60 Ramp Up Strobe 61–85 Ramp Down Strobe 86–110 Random Strobe 111–135 Strobe Break Effect 136–250 Strobe 251–255 Shutter Open 2

41ch Mode (continued)

Ch	Function	Default	DMX values
28	Effect	0	0–9 No Function 10–34 Effect 1 35–59 Effect 2 60–84 Effect 3 85–109 Effect 4 110–134 Effect 5 135–159 Effect 6 160–184 Effect 7 185–209 Effect 8 210–234 Effect 9 235–244 Effect 10 245–255 Effect Cycle
29	Effect Speed	0	0–127 Index 128–128 Stop 129–129 CW Fast 130–190 CW Fast > Slow 191–191 CW Slow 192–192 Stop 193–193 CCW Slow 194–254 CCW Slow > Fast 255–255 CCW Fast
30	Red	0	
31	Green	0	
32	Blue	0	
33	Color Add WW	0	
34	Dimmer	0	
35	Shutter1Strobe	0	0–5 Shutter Open 1 6–10 Shutter Closed 11–35 Pulse Random Strobe 36–60 Ramp Up Strobe 61–85 Ramp Down Strobe 86–110 Random Strobe 111–135 Strobe Break Effect 136–250 Strobe 251–255 Shutter Open 2
36	Effect	0	0–9 No Function 10–34 Effect 1 35–59 Effect 2 60–84 Effect 3 85–109 Effect 4 110–134 Effect 5 135–159 Effect 6 160–184 Effect 7 185–209 Effect 8 210–234 Effect 9 235–244 Effect 10 245–255 Effect Cycle
37	Effect Speed	0	0–127 Index 128–128 Stop 129–129 CW Fast 130–190 CW Fast > Slow 191–191 CW Slow 192–192 Stop 193–193 CCW Slow 194–254 CCW Slow > Fast 255–255 CCW Fast
38	Red	0	
39	Green	0	

41ch Mode (continued)

Ch	Function	Default	DMX values
40	Blue	0	
41	Color Add WW	0	

225ch Mode

225 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Shutter1Strobe	0	
7	Dimmer	0	
8	Dimmer Fine	0	Fine byte of Dimmer
9	Red	255	
10	Red Fine	255	Fine byte of Red
11	Green	255	
12	Green Fine	255	Fine byte of Green
13	Blue	255	
14	Blue Fine	255	Fine byte of Blue
15	Color Add GY	0	
16	Color Add GY Fine	0	Fine byte of Color Add GY
17	Zoom	0	
18	Zoom Fine	0	Fine byte of Zoom
19	Control1	0	
20	Position Effect	0	
21	Position Effect Rate	0	
22	Color Wheel	0	0–5 No Function 6–10 Magenta (wheel slot 1) 11–15 Peacock Blue (wheel slot 2) 16–20 Steel Blue (wheel slot 3) 21–25 Light Blue (wheel slot 4) 26–30 Dark Blue (wheel slot 5) 31–35 Leaf Green (wheel slot 6) 36–40 Dark Green (wheel slot 7) 41–45 Mauve0 (wheel slot 8) 46–50 Deep Golden Amber (wheel slot 9) 51–55 Pale Lavender (wheel slot 10) 56–60 Primary Green (wheel slot 11) 61–65 Bright Blue (wheel slot 12) 66–70 Apricot (wheel slot 13) 71–75 Pale Gold (wheel slot 14) 76–135 Rainbow Effect 136–194 Colour Macro Jumping 195–255 Colour Macro Gradient

225ch Mode (continued)

Ch	Function	Default	DMX values
23	Color Wheel 2	0	0–5 No Function 6–21 1800K (wheel slot 1) 22–37 2000K (wheel slot 2) 38–53 2500K (wheel slot 3) 54–69 2700K (wheel slot 4) 70–85 3000K (wheel slot 5) 86–101 3200K (wheel slot 6) 102–117 3500K (wheel slot 7) 118–133 4000K (wheel slot 8) 134–149 4500K (wheel slot 9) 150–165 5000K (wheel slot 10) 166–181 5600K (wheel slot 11) 182–197 6000K (wheel slot 12) 198–213 6500K (wheel slot 13) 214–229 7200K (wheel slot 14) 230–255 8000K (wheel slot 15)
24	Tint	0	
25	Function	0	
26	Dimmer	0	
27	Shutter1Strobe	0	
28	Effect	0	0–9 No Function 10–34 Effect 1 35–59 Effect 2 60–84 Effect 3 85–109 Effect 4 110–134 Effect 5 135–159 Effect 6 160–184 Effect 7 185–209 Effect 8 210–234 Effect 9 235–244 Effect 10 245–255 Effect Cycle
29	Effect Speed	0	
30	Red	0	
31	Green	0	
32	Blue	0	
33	Color Add WW	0	
34	Red	0	
35	Green	0	
36	Blue	0	
37	Color Add WW	0	
38	Red	0	
39	Green	0	
40	Blue	0	
41	Color Add WW	0	
42	Red	0	
43	Green	0	
44	Blue	0	
45	Color Add WW	0	
46	Red	0	
47	Green	0	
48	Blue	0	
49	Color Add WW	0	

225ch Mode (continued)

Ch	Function	Default	DMX values
50	Red	0	
51	Green	0	
52	Blue	0	
53	Color Add WW	0	
54	Red	0	
55	Green	0	
56	Blue	0	
57	Color Add WW	0	
58	Red	0	
59	Green	0	
60	Blue	0	
61	Color Add WW	0	
62	Red	0	
63	Green	0	
64	Blue	0	
65	Color Add WW	0	
66	Red	0	
67	Green	0	
68	Blue	0	
69	Color Add WW	0	
70	Red	0	
71	Green	0	
72	Blue	0	
73	Color Add WW	0	
74	Red	0	
75	Green	0	
76	Blue	0	
77	Color Add WW	0	
78	Red	0	
79	Green	0	
80	Blue	0	
81	Color Add WW	0	
82	Red	0	
83	Green	0	
84	Blue	0	
85	Color Add WW	0	
86	Red	0	
87	Green	0	
88	Blue	0	
89	Color Add WW	0	
90	Red	0	
91	Green	0	
92	Blue	0	
93	Color Add WW	0	
94	Red	0	

225ch Mode (continued)

Ch	Function	Default	DMX values
95	Green	0	
96	Blue	0	
97	Color Add WW	0	
98	Red	0	
99	Green	0	
100	Blue	0	
101	Color Add WW	0	
102	Red	0	
103	Green	0	
104	Blue	0	
105	Color Add WW	0	
106	Red	0	
107	Green	0	
108	Blue	0	
109	Color Add WW	0	
110	Red	0	
111	Green	0	
112	Blue	0	
113	Color Add WW	0	
114	Red	0	
115	Green	0	
116	Blue	0	
117	Color Add WW	0	
118	Red	0	
119	Green	0	
120	Blue	0	
121	Color Add WW	0	
122	Red	0	
123	Green	0	
124	Blue	0	
125	Color Add WW	0	
126	Dimmer	0	
127	Shutter1Strobe	0	
128	Effect	0	0–9 No Function 10–34 Effect 1 35–59 Effect 2 60–84 Effect 3 85–109 Effect 4 110–134 Effect 5 135–159 Effect 6 160–184 Effect 7 185–209 Effect 8 210–234 Effect 9 235–244 Effect 10 245–255 Effect Cycle
129	Effect Speed	0	
130	Red	0	
131	Green	0	

225ch Mode (continued)

Ch	Function	Default	DMX values
132	Blue	0	
133	Color Add WW	0	
134	Red	0	
135	Green	0	
136	Blue	0	
137	Color Add WW	0	
138	Red	0	
139	Green	0	
140	Blue	0	
141	Color Add WW	0	
142	Red	0	
143	Green	0	
144	Blue	0	
145	Color Add WW	0	
146	Red	0	
147	Green	0	
148	Blue	0	
149	Color Add WW	0	
150	Red	0	
151	Green	0	
152	Blue	0	
153	Color Add WW	0	
154	Red	0	
155	Green	0	
156	Blue	0	
157	Color Add WW	0	
158	Red	0	
159	Green	0	
160	Blue	0	
161	Color Add WW	0	
162	Red	0	
163	Green	0	
164	Blue	0	
165	Color Add WW	0	
166	Red	0	
167	Green	0	
168	Blue	0	
169	Color Add WW	0	
170	Red	0	
171	Green	0	
172	Blue	0	
173	Color Add WW	0	
174	Red	0	
175	Green	0	
176	Blue	0	

225ch Mode (continued)

Ch	Function	Default	DMX values
177	Color Add WW	0	
178	Red	0	
179	Green	0	
180	Blue	0	
181	Color Add WW	0	
182	Red	0	
183	Green	0	
184	Blue	0	
185	Color Add WW	0	
186	Red	0	
187	Green	0	
188	Blue	0	
189	Color Add WW	0	
190	Red	0	
191	Green	0	
192	Blue	0	
193	Color Add WW	0	
194	Red	0	
195	Green	0	
196	Blue	0	
197	Color Add WW	0	
198	Red	0	
199	Green	0	
200	Blue	0	
201	Color Add WW	0	
202	Red	0	
203	Green	0	
204	Blue	0	
205	Color Add WW	0	
206	Red	0	
207	Green	0	
208	Blue	0	
209	Color Add WW	0	
210	Red	0	
211	Green	0	
212	Blue	0	
213	Color Add WW	0	
214	Red	0	
215	Green	0	
216	Blue	0	
217	Color Add WW	0	
218	Red	0	
219	Green	0	
220	Blue	0	
221	Color Add WW	0	

225ch Mode (continued)

Ch	Function	Default	DMX values
222	Red	0	
223	Green	0	
224	Blue	0	
225	Color Add WW	0	