
Expolite

TourWash 91

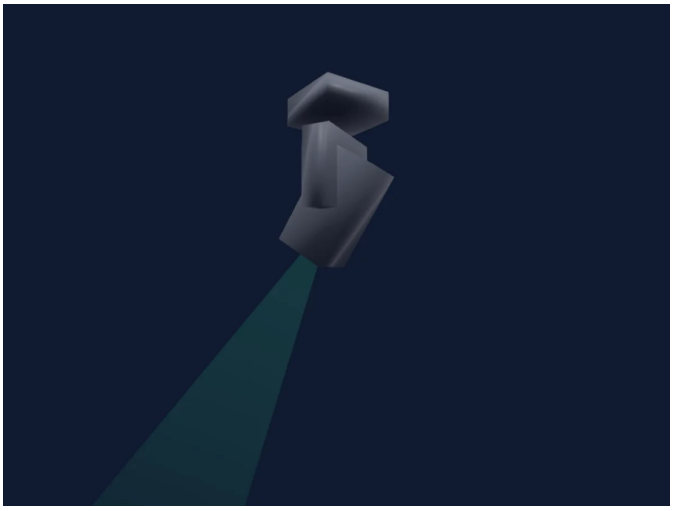

Manufacturer	**Expolite**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**15 channels**
Beam angle	**8-40°**
Pan range	**540°**
Tilt range	**260°**
Size (W × H × D)	**240 × 450 × 220 mm**
GDTF fixture type	**4B4FCEB7-7704-497C-ABCC-23…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Dimmer · Pan and tilt · Movement speed

Safety-relevant functions

Fixture reset

DMX modes

15ch Advanced — 15 ch

15ch Advanced

15 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	0–254 Fastest 255–255 Slowest
6	Red	255	
7	Green	255	
8	Blue	255	
9	White	255	
10	Color Add RY	255	
11	Color Macro1	0	0–5 Open 6–10 Full Power 11–30 Red 100% / Green Up / Blue 0% 31–50 Red Down / Green 100% / Blue 0% 51–70 Red 0% / Green 100% / Blue Up 71–90 Red 0% / Green Down / Blue 100% 91–110 Red Up / Green 0% / Blue 100% 111–130 Red 100% / Green 0% / Blue Down 131–150 Red 100% / Green Up / Blue Up 151–170 Red Down / Green Down / Blue 100% 171–200 Red 100% / Green 100% / Blue 100% / White 100% 201–205 3200K 206–210 3400K 211–215 4200K 216–220 4900K 221–225 5600K 226–230 5900K 231–235 6500K 236–240 7200K 241–245 8000K 246–250 8500K 251–255 10000K
12	Dimmer	0	0–254 Closed 255–255 Open
13	Strobe Mode Strobe	10	0–9 Open 10–10 1Hz 11–254 1-20Hz 255–255 20Hz
14	Zoom	127	0–126 Min 127–254 Med 255–255 Max

15ch Advanced (continued)

Ch	Function	Default	DMX values
15	Control1	0	20–39 P/T Black Deactivated 40–59 P/T Black Activated 60–79 Fan Auto 80–99 Fan Slow 100–119 Fan Normal 120–139 Fan Fast 140–149 Auto 1 (Activated after 3sec) 150–159 Auto 2 (Activated after 3sec) 160–169 Test (Activated after 3sec) 170–179 Custom (Activated after 3sec) 180–199 Sound 1 200–235 Reset (Activated after 3sec) 236–239 Dim 0 240–243 Dim 1 244–247 Dim 2 248–251 Dim 3 252–255 Dim 4