
Fine Art

FINE 6019 PIXIE IP

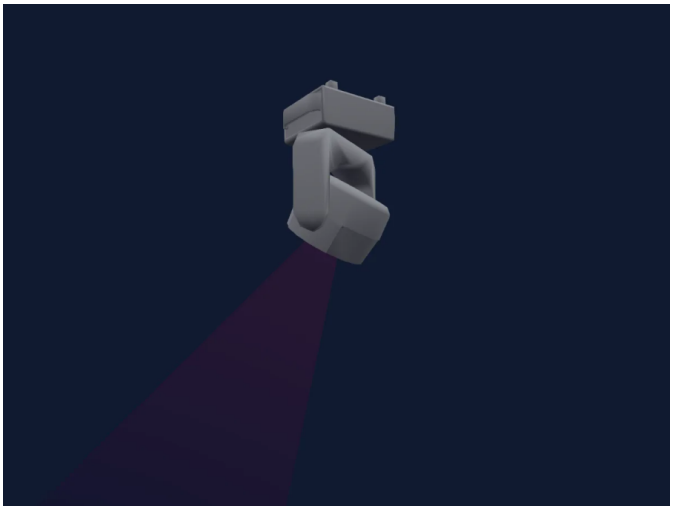

Manufacturer	**Fine Art**
Type	**Profile spot**
DMX modes	**4**
DMX footprint	**21, 35, 78 channels**
Beam angle	**6-65°**
Pan range	**540°**
Tilt range	**252°**
Heads / cells	**20**
Size (W × H × D)	**290 × 192 × 290 mm**
GDTF fixture type	**9FEE8014-1C3D-44C8-BBFA-88…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer · Pixel control · Pan and tilt

Safety-relevant functions

Fixture reset

DMX modes

RGBW 97CH	21 ch
STAND 21CH	21 ch
Shape 35CH	35 ch
RGB 78CH	78 ch

RGBW 97CH

21 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Red Fine	255	Fine byte of Red
3	Green	255	
4	Green Fine	255	Fine byte of Green
5	Blue	255	
6	Blue Fine	255	Fine byte of Blue
7	White	255	
8	White Fine	255	Fine byte of White
9	C TO	0	0–3 Open 4–4 2700K 5–5 3200K 6–6 4300K 7–7 5600K 8–8 6500K 9–9 8000K 10–255 8000K>>>2700K
10	Color Macro1	0	0–9 Open 10–255 Macro
11	Shutter / Strobe	255	0–3 Close 4–103 Pulse Slow>>>Fast 104–107 Open 108–207 Strobe Slow>>>Fast 208–212 Open 1 213–251 Random 100%>>>1% 252–255 Open 2
12	Dimmer	0	0–254 Close 255–255 Open
13	Dimmer Fine	0	Fine byte of Dimmer
14	Pan	127	
15	Pan Fine	255	Fine byte of Pan
16	Tilt	128	
17	Tilt Fine	128	Fine byte of Tilt
18	Control1	0	
19	Focus Reset	0	0–25 None 26–76 Zoom Reset 77–127 PT Reset 128–255 All Reset
20	Zoom	128	
21	Effects1Fade	0	

STAND 21CH

21 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Red Fine	255	Fine byte of Red
3	Green	255	
4	Green Fine	255	Fine byte of Green
5	Blue	255	
6	Blue Fine	255	Fine byte of Blue
7	White	255	

STAND 21CH (continued)

Ch	Function	Default	DMX values
8	White Fine	255	Fine byte of White
9	C TO	0	0–3 Open 4–4 2700K 5–5 3200K 6–6 4300K 7–7 5600K 8–8 6500K 9–9 8000K 10–255 8000K>>>2700K
10	Color Macro1	0	0–9 Open 10–255 Macro
11	Shutter / Strobe	255	0–3 Close 4–103 Pulse Slow>>>Fast 104–107 Open 108–207 Strobe Slow>>>Fast 208–212 Open 1 213–251 Random 100%>>>1% 252–255 Open 2
12	Dimmer	0	0–254 Close 255–255 Open
13	Dimmer Fine	0	Fine byte of Dimmer
14	Pan	127	
15	Pan Fine	255	Fine byte of Pan
16	Tilt	128	
17	Tilt Fine	128	Fine byte of Tilt
18	Control1	0	
19	Focus Reset	0	0–25 None 26–76 Zoom Reset 77–127 PT Reset 128–255 All Reset
20	Zoom	128	
21	Effects1Fade	0	

Shape 35CH

35 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Red Fine	255	Fine byte of Red
3	Green	255	
4	Green Fine	255	Fine byte of Green
5	Blue	255	
6	Blue Fine	255	Fine byte of Blue
7	White	255	
8	White Fine	255	Fine byte of White
9	C TO	0	0–3 Open 4–4 2700K 5–5 3200K 6–6 4300K 7–7 5600K 8–8 6500K 9–9 8000K 10–255 8000K>>>2700K

Shape 35CH (continued)

Ch	Function	Default	DMX values
10	Color Macro1	0	0–9 Open 10–255 Macro
11	Shutter / Strobe	255	0–3 Close 4–103 Pulse Slow>>>Fast 104–107 Open 108–207 Strobe Slow>>>Fast 208–212 Open 1 213–251 Random 100%>>>1% 252–255 Open 2
12	Dimmer	0	0–254 Close 255–255 Open
13	Dimmer Fine	0	Fine byte of Dimmer
14	Pan	127	
15	Pan Fine	255	Fine byte of Pan
16	Tilt	128	
17	Tilt Fine	128	Fine byte of Tilt
18	Control1	0	
19	Focus Reset	0	0–25 None 26–76 Zoom Reset 77–127 PT Reset 128–255 All Reset
20	Zoom	128	
21	Effects1Fade	0	
22	Shaper Macros	0	0–7 None 8–10 Static Shape1>>Static Shape3 11–11 None 12–14 Static Shape4>>Static Shape5 15–63 Animation1>>Animation49 64–64 None 65–68 Animation50>>Animation53 69–69 None 70–70 Animation54 71–255 None
23	Shaper Macros Speed	0	0–63 Stop 64–158 Fast>>>Slow 159–160 Stop 161–255 Slow>>>Fast
24	Shape Fade	0	0–15 None 16–255 Fade in Fade out and Curve Selection
25	Shape R	0	
26	Shape G	0	
27	Shape B	0	
28	Shape W	0	
29	Shape Dim	255	0–254 Close 255–255 Open
30	Bkg Dim	255	0–254 Close 255–255 Open
31	Shape Trans	0	0–4 None 5–255 Transition Time100ms->4s
32	Shape Offset	0	

Shape 35CH (continued)

Ch	Function	Default	DMX values
33	Shutter / Strobe 2	255	0–3 Close 4–103 Pulse Slow>>>Fast 104–107 Open 108–207 Strobe Slow>>>Fast 208–212 Open 1 213–251 Random 100%>>>1% 252–255 Open 2
34	Shutter / Strobe 3	255	0–3 Close 4–103 Pulse Slow>>>Fast 104–107 Open 108–207 Strobe Slow>>>Fast 208–212 Open 1 213–251 Random 100%>>>1% 252–255 Open 2
35	Bkg Select	0	0–8 None 9–23 Bkg Shape 24–254 None 255–255 Empty Channel Set

RGB 78CH

78 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Red Fine	255	Fine byte of Red
3	Green	255	
4	Green Fine	255	Fine byte of Green
5	Blue	255	
6	Blue Fine	255	Fine byte of Blue
7	White	255	
8	White Fine	255	Fine byte of White
9	C TO	0	
10	Color Macro1	0	
11	Shutter / Strobe	255	0–3 Close 4–103 Pulse Slow>>>Fast 104–107 Open 108–207 Strobe Slow>>>Fast 208–212 Open 1 213–251 Random 100%>>>1% 252–255 Open 2
12	Dimmer	0	
13	Dimmer Fine	0	Fine byte of Dimmer
14	Pan	127	
15	Pan Fine	255	Fine byte of Pan
16	Tilt	128	
17	Tilt Fine	128	Fine byte of Tilt
18	Control1	0	
19	Focus Reset	0	
20	Zoom	128	
21	Effects1Fade	0	
22	Red	255	
23	Green	255	

RGB 78CH (continued)

Ch	Function	Default	DMX values
24	Blue	255	
25	Red	255	
26	Green	255	
27	Blue	255	
28	Red	255	
29	Green	255	
30	Blue	255	
31	Red	255	
32	Green	255	
33	Blue	255	
34	Red	255	
35	Green	255	
36	Blue	255	
37	Red	255	
38	Green	255	
39	Blue	255	
40	Red	255	
41	Green	255	
42	Blue	255	
43	Red	255	
44	Green	255	
45	Blue	255	
46	Red	255	
47	Green	255	
48	Blue	255	
49	Red	255	
50	Green	255	
51	Blue	255	
52	Red	255	
53	Green	255	
54	Blue	255	
55	Red	255	
56	Green	255	
57	Blue	255	
58	Red	255	
59	Green	255	
60	Blue	0	
61	Red	255	
62	Green	255	
63	Blue	255	
64	Red	255	
65	Green	255	
66	Blue	255	
67	Red	255	
68	Green	255	

RGB 78CH (continued)

Ch	Function	Default	DMX values
69	Blue	255	
70	Red	255	
71	Green	255	
72	Blue	255	
73	Red	255	
74	Green	255	
75	Blue	255	
76	Red	255	
77	Green	255	
78	Blue	255	