
Flash

EVENT Tube 360

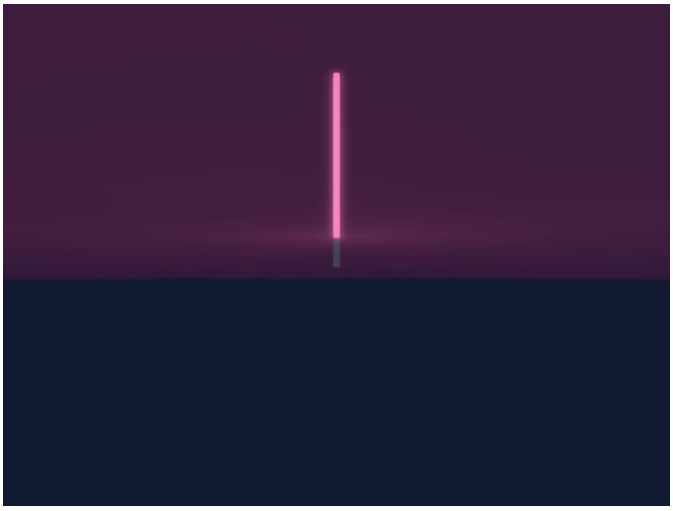

Manufacturer	**Flash**
Type	**PAR**
DMX modes	**10**
DMX footprint	**4, 5, 6, 7, 12 channels**
Size (W × H × D)	**50 × 1500 × 50 mm**
GDTF fixture type	**5BAACFB6-CA7C-4A28-BE06-4…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer

DMX modes

4ch A	4 ch
4ch B	4 ch
160ch	5 ch
40ch	5 ch
5ch	5 ch
80ch	5 ch
6ch A	6 ch
6ch B	6 ch
7ch	7 ch
12ch	12 ch

4ch A

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Shutter1Strobe 2 · Min 1–24.9 Hz 255–255 Shutter1Strobe 2 · Max 25 Hz
3	C TC	0	0–4 No function 5–163 CTC 164–255 CTC 3
4	Tint	128	

4ch B

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Shutter1Strobe 2 · Min 1–24.9 Hz 255–255 Shutter1Strobe 2 · Max 25 Hz
3	H SBHue	5	0–4 No function 5–45 Red 46–87 Yellow 88–129 Green 130–171 Cyan 172–213 Blue 214–254 Magenta 255–255 Red
4	H SBSaturation	0	

160ch

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	

40ch

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	

5ch

5 channels

Ch	Function	Default	DMX values
1	Red	255	

5ch (continued)

Ch	Function	Default	DMX values
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	

80ch

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	

6ch A

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Shutter1Strobe 2 · Min 1–24.9 Hz 255–255 Shutter1Strobe 2 · Max 25 Hz
3	H SBHue	5	0–4 No function 5–45 Red 46–87 Yellow 88–129 Green 130–171 Cyan 172–213 Blue 214–254 Magenta 255–255 Red
4	Tint	128	
5	C TC	0	0–4 No function 5–163 CTC 164–255 CTC 3
6	H SBSaturation	0	

6ch B

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	0	
6	Color Add RY	0	

7ch

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Shutter1Strobe 2 · Min 1–24.9 Hz 255–255 Shutter1Strobe 2 · Max 25 Hz
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	0	
7	Color Add RY	0	

12ch

12 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Shutter1Strobe 2 · Min 1–24.9 Hz 255–255 Shutter1Strobe 2 · Max 25 Hz

12ch (continued)

Ch	Function	Default	DMX values
3	Color Effects1	0	0–10 No function 11–13 Color macro 1 14–16 Color macro 2 17–19 Color macro 3 20–22 Color macro 4 23–25 Color macro 5 26–28 Color macro 6 29–31 Color macro 7 32–34 Color macro 8 35–37 Color macro 9 38–40 Color macro 10 41–43 Color macro 11 44–46 Color macro 12 47–49 Color macro 13 50–52 Color macro 14 53–55 Color macro 15 56–58 Color macro 16 59–61 Color macro 17 62–64 Color macro 18 65–67 Color macro 19 68–70 Color macro 20 71–73 Color macro 21 74–76 Color macro 22 77–79 Color macro 23 80–82 Color macro 24 83–85 Color macro 25 86–88 Color macro 26 89–91 Color macro 27 92–94 Color macro 28 95–97 Color macro 29 98–100 Color macro 30 101–103 Color macro 31 104–106 Color macro 32 107–109 Color macro 33 110–112 Color macro 34 113–115 Color macro 35 116–118 Color macro 36 119–121 Color macro 37 122–124 Color macro 38 125–255 Color macro 39
4	Color Macro2	0	
5	Tint	0	

12ch (continued)

Ch	Function	Default	DMX values
6	Color Macro1	0	0–10 No function 11–19 Red 20–28 Green 29–37 Blue 38–46 White 47–55 Amber 56–64 Orange 65–73 Cyan 74–82 Magenta 83–91 Yellow 92–100 Cyan 101–109 Color 1 110–118 Color 2 119–127 Color 3 128–136 Color 4 137–145 Color 5 146–154 Color 6 155–163 Color 7 164–172 Color 8 173–181 Color 9 182–190 Color 10 191–199 Color 11 200–208 Color 12 209–217 Color 13 218–226 Color 14 227–235 Color 15 236–244 Color 16 245–255 Color 17
7	Color Effect Rate	0	0–254 Slow 255–255 Fast
8	Red	255	
9	Green	255	
10	Blue	255	
11	White	0	
12	Color Add RY	0	