
Flash

LED BAR 24x3W RGB 8 Section

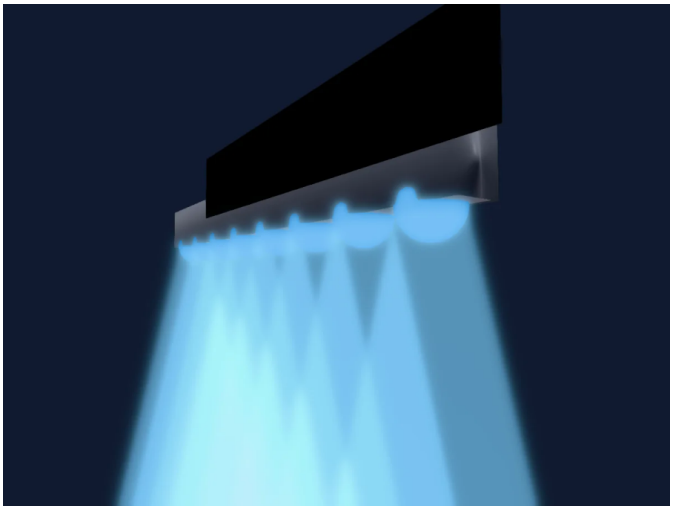

Manufacturer	**Flash**
Type	**LED bar**
DMX modes	**5**
DMX footprint	**5, 8, 14, 26, 50 channels**
Beam angle	**25°**
Size (W × H × D)	**1000 × 100 × 80 mm**
GDTF fixture type	**2E2A1E3C-76BA-4E27-9FC1-93…**

Controls

RGB colour mixing · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

5CH Mode	5 ch
8CH Mode	8 ch
14CH Mode	14 ch
26CH Mode	26 ch
50ch mode	50 ch

5CH Mode

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Macro1	0	0–7 No function 8–22 Color chase 1 23–37 Color chase 2 38–52 Color chase 3 53–67 Color chase 4 68–82 Color chase 5 83–97 Color chase 6 98–112 Color chase 7 113–127 Color chase 8 128–142 Color chase 9 143–157 Color chase 10 158–172 Color chase 11 173–187 Color chase 12 188–202 Color chase 13 203–217 Color chase 14 218–232 Color chase 15 233–247 Color chase 16 248–255 Sound active
5	Color Macro1Rate	0	

8CH Mode

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Min strobe 255–255 Max strobe
3	Red	255	
4	Green	255	
5	Blue	255	
6	Color Macro2	0	0–7 No function 8–22 Color chase 1 23–37 Color chase 2 38–52 Color chase 3 53–67 Color chase 4 68–82 Color chase 5 83–97 Color chase 6 98–112 Color chase 7 113–127 Color chase 8 128–142 Color chase 9 143–157 Color chase 10 158–172 Color chase 11 173–187 Color chase 12 188–202 Color chase 13 203–217 Color chase 14 218–232 Color chase 15 233–247 Color chase 16 248–255 Sound active

8CH Mode (continued)

Ch	Function	Default	DMX values
7	Color Macro1	0	0–7 No function 8–22 Color chase 1 23–37 Color chase 2 38–52 Color chase 3 53–67 Color chase 4 68–82 Color chase 5 83–97 Color chase 6 98–112 Color chase 7 113–127 Color chase 8 128–142 Color chase 9 143–157 Color chase 10 158–172 Color chase 11 173–187 Color chase 12 188–202 Color chase 13 203–217 Color chase 14 218–232 Color chase 15 233–247 Color chase 16 248–255 Sound active
8	Color Macro1Rate	0	

14CH Mode

14 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Min strobe 255–255 Max strobe
3	Red	255	
4	Green	255	
5	Blue	255	
6	Color Macro2	0	0–7 No function 8–22 Color chase 1 23–37 Color chase 2 38–52 Color chase 3 53–67 Color chase 4 68–82 Color chase 5 83–97 Color chase 6 98–112 Color chase 7 113–127 Color chase 8 128–142 Color chase 9 143–157 Color chase 10 158–172 Color chase 11 173–187 Color chase 12 188–202 Color chase 13 203–217 Color chase 14 218–232 Color chase 15 233–247 Color chase 16 248–255 Sound active
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	

14CH Mode (continued)

Ch	Function	Default	DMX values
13	Color Macro1	0	0–7 No function 8–22 Color chase 1 23–37 Color chase 2 38–52 Color chase 3 53–67 Color chase 4 68–82 Color chase 5 83–97 Color chase 6 98–112 Color chase 7 113–127 Color chase 8 128–142 Color chase 9 143–157 Color chase 10 158–172 Color chase 11 173–187 Color chase 12 188–202 Color chase 13 203–217 Color chase 14 218–232 Color chase 15 233–247 Color chase 16 248–255 Sound active
14	Color Macro1Rate	0	

26CH Mode

26 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Min strobe 255–255 Max strobe
3	Red	255	
4	Green	255	
5	Blue	255	
6	Color Macro2	0	0–7 No function 8–22 Color chase 1 23–37 Color chase 2 38–52 Color chase 3 53–67 Color chase 4 68–82 Color chase 5 83–97 Color chase 6 98–112 Color chase 7 113–127 Color chase 8 128–142 Color chase 9 143–157 Color chase 10 158–172 Color chase 11 173–187 Color chase 12 188–202 Color chase 13 203–217 Color chase 14 218–232 Color chase 15 233–247 Color chase 16 248–255 Sound active
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	

26CH Mode (continued)

Ch	Function	Default	DMX values
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Color Macro1	0	0–7 No function 8–22 Color chase 1 23–37 Color chase 2 38–52 Color chase 3 53–67 Color chase 4 68–82 Color chase 5 83–97 Color chase 6 98–112 Color chase 7 113–127 Color chase 8 128–142 Color chase 9 143–157 Color chase 10 158–172 Color chase 11 173–187 Color chase 12 188–202 Color chase 13 203–217 Color chase 14 218–232 Color chase 15 233–247 Color chase 16 248–255 Sound active
26	Color Macro1Rate	0	

50ch mode

50 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–10 Open 11–254 Min strobe 255–255 Max strobe
3	Red	255	
4	Green	255	
5	Blue	255	

50ch mode (continued)

Ch	Function	Default	DMX values
6	Color Macro2	0	0–7 No function 8–22 Color chase 1 23–37 Color chase 2 38–52 Color chase 3 53–67 Color chase 4 68–82 Color chase 5 83–97 Color chase 6 98–112 Color chase 7 113–127 Color chase 8 128–142 Color chase 9 143–157 Color chase 10 158–172 Color chase 11 173–187 Color chase 12 188–202 Color chase 13 203–217 Color chase 14 218–232 Color chase 15 233–247 Color chase 16 248–255 Sound active
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	

50ch mode (continued)

Ch	Function	Default	DMX values
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Color Macro1	0	0–7 No function 8–22 Color chase 1 23–37 Color chase 2 38–52 Color chase 3 53–67 Color chase 4 68–82 Color chase 5 83–97 Color chase 6 98–112 Color chase 7 113–127 Color chase 8 128–142 Color chase 9 143–157 Color chase 10 158–172 Color chase 11 173–187 Color chase 12 188–202 Color chase 13 203–217 Color chase 14 218–232 Color chase 15 233–247 Color chase 16 248–255 Sound active
50	Color Macro1Rate	0	