
Generic

LED Spot 60W

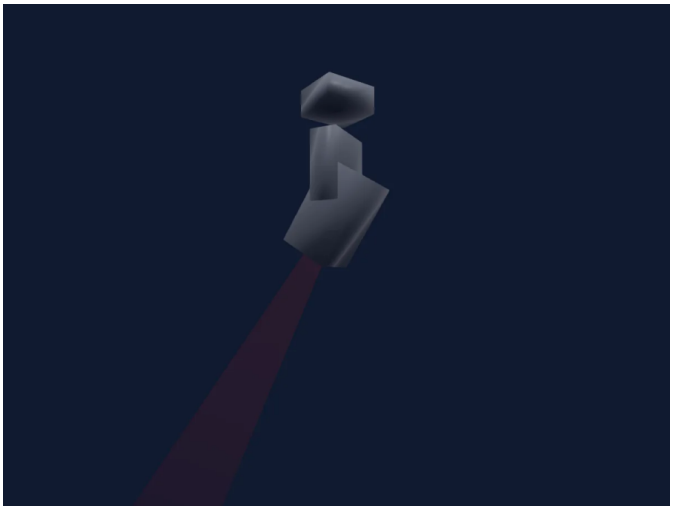

Manufacturer	**Generic**
Type	**Moving head**
DMX modes	**2**
DMX footprint	**9, 11 channels**
Beam angle	**13°**
Pan range	**540°**
Tilt range	**230°**
Size (W × H × D)	**159 × 265 × 147 mm**
GDTF fixture type	**5E2A9C3F-8D4B-4F7A-9C1E-3B…**

Controls

Colour wheel · Strobe · Dimmer · Pan and tilt · Movement speed · Gobos

Safety-relevant functions

Fixture reset · Strobe

DMX modes

9CH	9 ch
11CH	11 ch

9CH

9 channels

Ch	Function	Default	DMX values
1	Pan	127	
2	Tilt	127	
3	Color Wheel	0	0–9 White (wheel slot 1) 10–19 Red (wheel slot 2) 20–29 Orange (wheel slot 3) 30–39 Yellow (wheel slot 4) 40–49 Green (wheel slot 5) 50–59 Blue (wheel slot 6) 60–69 Magenta (wheel slot 7) 70–79 Cyan (wheel slot 8) 80–89 Cyan/Magenta (wheel slot 9) 90–99 Magenta/Blue (wheel slot 10) 100–109 Blue/Green (wheel slot 11) 110–119 Green/Yellow (wheel slot 12) 120–129 Yellow/Orange (wheel slot 13) 130–139 Orange/Red (wheel slot 14) 140–255 Spin
4	Gobo	0	0–7 Open (wheel slot 1) 8–15 Circle (wheel slot 2) 16–23 Spread (wheel slot 3) 24–31 Mouse Dots (wheel slot 4) 32–39 QR Code (wheel slot 5) 40–47 Scatter (wheel slot 6) 48–55 Fan (wheel slot 7) 56–63 Tiger (wheel slot 8) 64–127 Shake 128–255 Scroll
5	Shutter / Strobe	0	0–9 Open 10–249 Strobe 250–255 Open
6	Dimmer	0	
7	Position MSpeed	0	
8	Control1	0	0–0 No Function 1–255 Auto Run
9	Control2	0	0–20 No Function 21–100 X Axis Auto 101–200 X Axis Auto 2 201–249 XY Axis Auto 250–255 Reset (5s)

11CH

11 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt

11CH (continued)

Ch	Function	Default	DMX values
5	Color Wheel	0	0–9 White (wheel slot 1) 10–19 Red (wheel slot 2) 20–29 Orange (wheel slot 3) 30–39 Yellow (wheel slot 4) 40–49 Green (wheel slot 5) 50–59 Blue (wheel slot 6) 60–69 Magenta (wheel slot 7) 70–79 Cyan (wheel slot 8) 80–89 Cyan/Magenta (wheel slot 9) 90–99 Magenta/Blue (wheel slot 10) 100–109 Blue/Green (wheel slot 11) 110–119 Green/Yellow (wheel slot 12) 120–129 Yellow/Orange (wheel slot 13) 130–139 Orange/Red (wheel slot 14) 140–255 Spin
6	Gobo	0	0–7 Open (wheel slot 1) 8–15 Circle (wheel slot 2) 16–23 Spread (wheel slot 3) 24–31 Mouse Dots (wheel slot 4) 32–39 QR Code (wheel slot 5) 40–47 Scatter (wheel slot 6) 48–55 Fan (wheel slot 7) 56–63 Tiger (wheel slot 8) 64–127 Shake 128–255 Scroll
7	Shutter / Strobe	0	0–9 Open 10–249 Strobe 250–255 Open
8	Dimmer	0	
9	Position MSpeed	0	
10	Control1	0	0–59 No Function 60–84 Auto Mode 0 85–109 Auto Mode 1 110–134 Auto Mode 2 135–159 Auto Mode 3 160–184 Sound Mode 0 185–209 Sound Mode 1 210–234 Sound Mode 2 235–255 Sound Mode 3
11	Control2	0	0–20 No Function 21–100 X Axis Auto 101–200 X Axis Auto 2 201–249 XY Axis Auto 250–255 Reset (5s)