
Generic

UKing 100w Prism 2

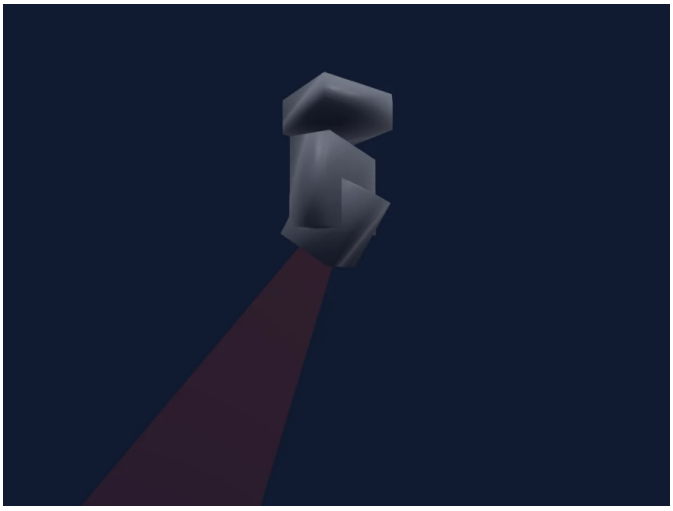

Manufacturer	**Generic**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**12 channels**
Beam angle	**25°**
Pan range	**520°**
Tilt range	**270°**
Size (W × H × D)	**120 × 150 × 120 mm**
GDTF fixture type	**178ED7F2-619A-410F-9B9B-C1…**

Controls

Prism · Colour wheel · Dimmer · Pan and tilt · Gobos

Safety-relevant functions

Fixture reset

DMX modes

Mode 1 — 12 ch

Mode 1

12 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	127	
4	Tilt Fine	255	Fine byte of Tilt
5	Global MSpeed	0	
6	Dimmer	0	
7	Strobe Rate	0	
8	Color Wheel	0	0–15 White (wheel slot 1) 16–31 Red (wheel slot 2) 32–47 Yellow (wheel slot 3) 48–63 Green (wheel slot 4) 64–79 Amber (wheel slot 5) 80–95 Lavender (wheel slot 6) 96–111 Magenta (wheel slot 7) 112–127 Aqua (wheel slot 8) 128–191 CW F-S 192–255 CCW F-S
9	Gobo	0	0–7 Spot (wheel slot 1) 8–15 Circle (wheel slot 2) 16–23 Squiggle (wheel slot 3) 24–31 Quasar (wheel slot 4) 32–39 Flower (wheel slot 5) 40–47 Star (wheel slot 6) 48–55 Caltrop (wheel slot 7) 56–73 Guitar Pic Flower (wheel slot 8) 74–82 Caltrop (wheel slot 7) 83–91 Star (wheel slot 6) 92–100 Flower (wheel slot 5) 101–109 Quasar (wheel slot 4) 110–118 Squiggle (wheel slot 3) 119–127 Circle (wheel slot 2) 128–191 CW F-S 192–255 CCW F-S
10	Prism	127	0–7 Close Prism 8–127 Open Prism 128–255 Prism Rotation
11	Beam Shaper Macro	0	0–49 channel 1-10 are valid 50–200 Go one's own way 201–255 Sound Control
12	Fixture Global Reset	0	0–240 No Function 241–255 Lamp Body Reset