
Ignition

2bright Par 7 IP

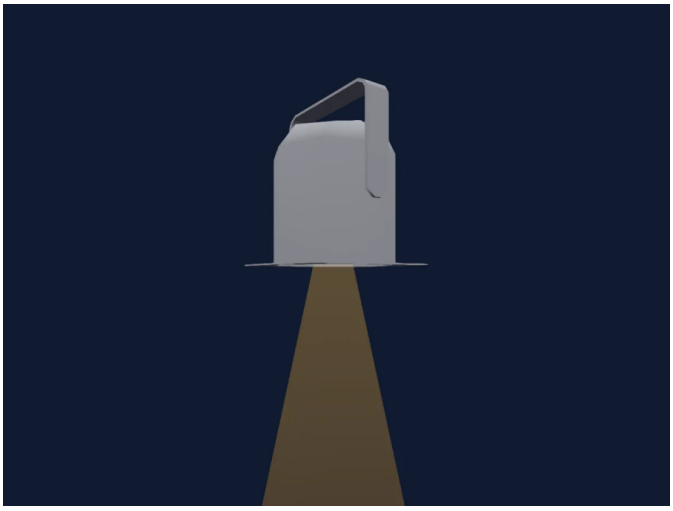

Manufacturer	**Ignition**
Type	**PAR**
DMX modes	**5**
DMX footprint	**2, 3, 6, 9, 11 channels**
Beam angle	**25°**
Size (W × H × D)	**250 × 195 × 45 mm**
GDTF fixture type	**D930F982-4FD2-4657-BD1E-12…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Fixture reset

DMX modes

2 Ch	2 ch
3 Ch	3 ch
6 Ch	6 ch
9 Ch	9 ch
11Ch	11 ch

2 Ch

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	C TC	0	0–5 Reset 6–31 2800 K 32–63 3500 K 64–95 4000 K 96–127 5000 K 128–159 6000 K 160–191 7000 K 192–223 7500 K 224–255 8000 K

3 Ch

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–5 Open 6–10 Closed 11–32 Pulse Random Slow 33–33 Pulse Random Fast 34–55 Pulse Open Slow 56–56 Pulse Open Fast 57–78 Pulse Close Slow 79–79 Pulse Close Fast 80–101 Random Slow 102–102 Random Fast 103–126 Burst strobe · Bust 5 Sec 1s Break 127–127 Burst strobe · Bust 1 Sec 1s Break 128–249 Strobe 1Hz 250–250 Strobe 20Hz 251–255 Open
3	Color Macro1	0	

6 Ch

6 channels

Ch	Function	Default	DMX values
1	Color RGBRed	100	
2	Color RGBGreen	100	
3	Color RGBBlue	100	
4	White	0	
5	Color Add RY	0	
6	Color Macro1	0	

9 Ch

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	

9 Ch (continued)

Ch	Function	Default	DMX values
2	Shutter / Strobe	0	0–5 Open 6–10 Closed 11–32 Pulse Random Slow 33–33 Pulse Random Fast 34–55 Pulse Open Slow 56–56 Pulse Open Fast 57–78 Pulse Close Slow 79–79 Pulse Close Fast 80–101 Random Slow 102–102 Random Fast 103–126 Burst strobe · Bust 5 Sec 1s Break 127–127 Burst strobe · Bust 1 Sec 1s Break 128–249 Strobe 1Hz 250–250 Strobe 20Hz 251–255 Open
3	Color RGBRed	100	
4	Color RGBGreen	100	
5	Color RGBBlue	100	
6	White	0	
7	Color Add RY	0	
8	UV	0	
9	Color Macro1	0	

11Ch

11 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–5 Open 6–10 Closed 11–32 Pulse Random Slow 33–33 Pulse Random Fast 34–55 Pulse Open Slow 56–56 Pulse Open Fast 57–78 Pulse Close Slow 79–79 Pulse Close Fast 80–101 Random Slow 102–102 Random Fast 103–126 Burst strobe · Bust 5 Sec 1s Break 127–127 Burst strobe · Bust 1 Sec 1s Break 128–249 Strobe 1Hz 250–250 Strobe 20Hz 251–255 Open
3	Color RGBRed	100	
4	Color RGBGreen	100	
5	Color RGBBlue	100	
6	White	0	
7	Color Add RY	0	
8	UV	0	
9	Color Macro1	0	

11Ch (continued)

Ch	Function	Default	DMX values
10	C TC	0	0–5 Reset 6–31 2800 K 32–63 3500 K 64–95 4000 K 96–127 5000 K 128–159 6000 K 160–191 7000 K 192–223 7500 K 224–255 8000 K
11	Dimmer Curve	0	0–5 Default 6–63 Linear 64–127 Exponential 128–191 Logarithmic 192–255 S-Curve