
Ignition

Contour Ambience Wash

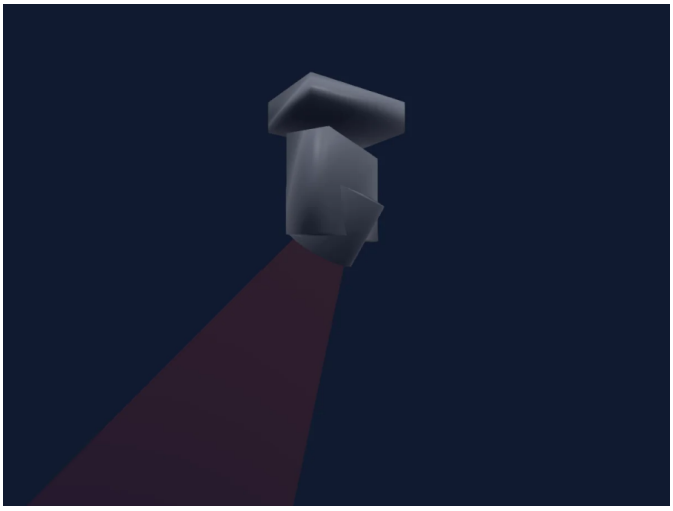

Manufacturer	**Ignition**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**14 channels**
Beam angle	**10-60°**
Pan range	**540°**
Tilt range	**220°**
Size (W × H × D)	**160 × 150 × 160 mm**
GDTF fixture type	**C6832F4D-FA2B-4D69-AF2C-3E…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer · Pan and tilt · Movement speed

Safety-relevant functions

Fixture reset

DMX modes

14CH	14 ch

14CH

14 channels

Ch	Function	Default	DMX values
1	Pan	170	
2	Pan Fine	170	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	128	Fine byte of Tilt
5	Position MSpeed	0	0–254 fast 255–255 slow
6	Fixture Global Reset	255	0–9 Keine Funktion 10–14 Reset 15–255 Keine Funktion
7	Dimmer	0	0–254 Closed 255–255 Open
8	Shutter / Strobe	0	0–24 no function 25–63 fast 64–64 slow 65–69 open 70–83 Shutter1StrobePulseOpen · fast 1–0.164 Hz 84–84 Shutter1StrobePulseOpen · slow 0.1 Hz 85–89 open 90–103 Shutter1StrobePulseClose · fast 1–0.164 Hz 104–104 Shutter1StrobePulseClose · slow 0.1 Hz 105–109 open 110–123 Shutter1StrobeRandom · fast 1–0.164 Hz 124–124 Shutter1StrobeRandom · slow 0.1 Hz 125–129 open 130–143 Shutter1StrobeRandomPulseOpen · fast 1–0.164 Hz 144–144 Shutter1StrobeRandomPulseOpen · slow 0.1 Hz 145–149 open 150–163 Shutter1StrobeRandomPulseClose · fast 1–0.164 Hz 164–164 Shutter1StrobeRandomPulseClose · slow 0.1 Hz 165–169 open 170–184 burst pulse 185–189 open 190–204 burst pulse random 205–209 open 210–224 Shutter1StrobeEffect · Sinus curve 225–229 open 230–244 Shutter1StrobeEffect · burst 245–255 open
9	Red	0	
10	Green	0	
11	Blue	0	
12	White	0	
13	Color Effects1	0	
14	Zoom	125	0–126 wide 127–254 normal 255–255 narrow