
Krypton

P1400-IP

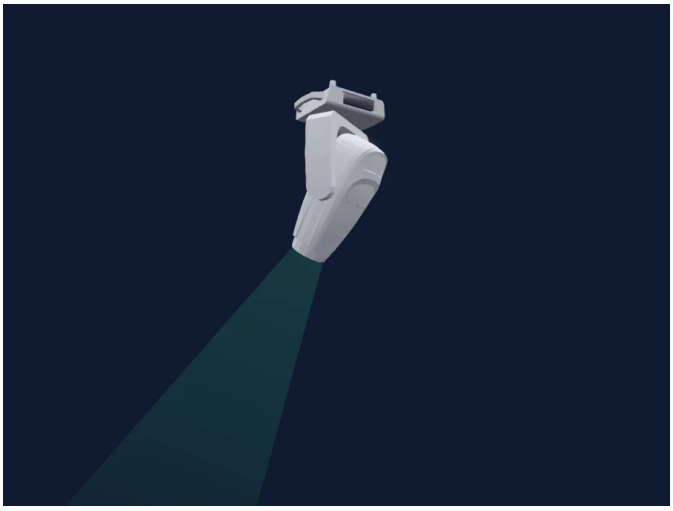

Manufacturer	**Krypton**
Type	**Profile spot**
DMX modes	**2**
DMX footprint	**36, 52 channels**
Beam angle	**6-52°**
Pan range	**540°**
Tilt range	**270°**
Size (W × H × D)	**303 × 569 × 241 mm**
GDTF fixture type	**8E8D0275-929C-4813-B082-EC…**

Controls

Focus · Frost · Iris · Prism · Prism rotation · Zoom · CMY colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer · Pan and tilt · Animation wheel · Gobos · Gobo rotation

Safety-relevant functions

Fixture reset · Strobe

DMX modes

Standard	36 ch
Extended	52 ch

Standard

36 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Dimmer	0	0–254 Closed 255–255 Open
6	Dimmer Fine	0	Fine byte of Dimmer
7	Shutter / Strobe	50	0–31 Shutter closed 32–63 Shutter open1 64–94 min Strobe 95–95 max Strobe 96–127 Shutter open2 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 Shutter Open3 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 Shutter Open4
8	Cyan	0	
9	Magenta	0	
10	Yellow	0	
11	C TO	0	0–254 6500K 255–255 2400K
12	Color Wheel	5	0–4 Open (wheel slot 1) 5–114 index 115–119 Open (wheel slot 1) 120–129 Deep Red (wheel slot 2) 130–139 Medium Blue (wheel slot 3) 140–149 Deep Green (wheel slot 4) 150–159 Amber (wheel slot 5) 160–169 Congo Blue (wheel slot 6) 170–179 CTB (wheel slot 7) 180–191 Open (wheel slot 1) 192–223 CW Rot Slow to Fast 224–224 Stop 225–255 CCW Rot Fast to Slow
13	Color Wheel Fine	1	Fine byte of Color Wheel
14	Gobo	0	0–5 Open (wheel slot 1) 6–20 Gobo 1 (wheel slot 2) 21–35 Gobo 2 (wheel slot 3) 36–50 Gobo 3 (wheel slot 4) 51–65 Gobo 4 (wheel slot 5) 66–80 Gobo 5 (wheel slot 6) 81–95 Gobo 6 (wheel slot 7) 96–110 Gobo 1 shake (slow-fast) (wheel slot 2) 111–125 Gobo 2 shake (slow-fast) (wheel slot 3) 126–140 Gobo 3 shake (slow-fast) (wheel slot 4) 141–155 Gobo 4 shake (slow-fast) (wheel slot 5) 156–170 Gobo 5 shake (slow-fast) (wheel slot 6) 171–185 Gobo 6 shake (slow-fast) (wheel slot 7) 186–192 Open (wheel slot 1) 193–223 CW Slow to Fast 224–224 Stop 225–255 CCW Fast to Slow

Standard (continued)

Ch	Function	Default	DMX values
15	Gobo Rotation	0	0–127 Gobo Position 0 degree 128–128 Gobo Position 540 degree 129–191 Rot CW Slow to Fast 192–192 Stop 193–255 Rot CCW Fast to Slow
16	Gobo Rotation Fine	0	Fine byte of Gobo Rotation
17	Gobo 2	0	0–5 Open (wheel slot 1) 6–18 Gobo 1 (wheel slot 2) 19–31 Gobo 2 (wheel slot 3) 32–44 Gobo 3 (wheel slot 4) 45–57 Gobo 4 (wheel slot 5) 58–70 Gobo 5 (wheel slot 6) 71–83 Gobo 6 (wheel slot 7) 84–96 Gobo 7 (wheel slot 8) 97–109 Gobo 1 shake (slow-fast) (wheel slot 2) 110–122 Gobo 2 shake (slow-fast) (wheel slot 3) 123–135 Gobo 3 shake (slow-fast) (wheel slot 4) 136–148 Gobo 4 shake (slow-fast) (wheel slot 5) 149–161 Gobo 5 shake (slow-fast) (wheel slot 6) 162–174 Gobo 6 shake (slow-fast) (wheel slot 7) 175–187 Gobo 7 shake (slow-fast) (wheel slot 8) 188–192 Open (wheel slot 1) 193–223 Spin CW Slow to Fast 224–224 Stop 225–255 Spin CCW Fast to Slow
18	Zoom	128	0–254 narrow 255–255 wide
19	Focus	0	
20	Iris	0	0–224 Open 225–225 Close 226–234 slow 235–235 fast 236–244 slow 245–245 fast 246–254 Slow 255–255 Fast
21	Prism	0	0–5 Open (wheel slot 1) 6–130 6 Linear Prism (wheel slot 2) 131–255 4 Facet Prism (wheel slot 3)
22	Prism Rotation	6	0–5 Rot Off 6–128 Position 0-540 degrees 129–191 Rotation CW Slow to Fast 192–192 Stop 193–255 Rotation CCW Fast to Slow
23	Frost1	0	
24	Frost2	0	
25	Animation Wheel1Pos	0	0–127 Wheel Position 0 degrees (wheel slot 1) 128–128 Wheel Position 540 degrees (wheel slot 2) 129–191 Rot CW Slow to Fast 192–192 Stop 193–255 Rot CCW Fast to Slow
26	Blade1A	0	
27	Blade1B	0	
28	Blade2A	0	
29	Blade2B	0	
30	Blade3A	0	
31	Blade3B	0	

Standard (continued)

Ch	Function	Default	DMX values
32	Blade4A	0	
33	Blade4B	0	
34	Shaper Rot	128	
35	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theater 101–255 Default to Unit Setting
36	Control1	0	0–2 No function 3–4 OFF Display Backlight 5–6 On Display Backlight 7–17 Invert Pan on (Hold 3s) 18–29 Invert Pan off (Hold 5s) 30–41 Invert Tilt on (Hold 3s) 42–53 Invert Tilt off (Hold 5s) 54–65 Fan Auto (Hold 3s) 66–77 Fan Silent (Hold 5s) 78–89 Linear Dimmer Curve (hold 3s) 90–101 Square Dimmer Curve (hold 3s) 102–113 Inv-Square Dimmer Curve (hold 3s) 114–125 S - Dimmer Curve (hold 3s) 126–137 1200 Hz (hold 3s) 138–149 3600 Hz (hold 3s) 150–161 5000 Hz (hold 3s) 162–173 10000 Hz (hold 3s) 174–185 15000 Hz (hold 3s) 186–197 20000 Hz (hold 3s) 198–209 25000 Hz (hold 3s) 210–221 Reset Pan/Tilt (Hold 3s) 222–233 Reset only Head (Hold 3s) 234–255 Reset All Functions (Hold 3s)

Extended

52 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Dimmer	0	0–254 Closed 255–255 Open
6	Dimmer Fine	0	Fine byte of Dimmer
7	Shutter / Strobe	50	0–31 Shutter closed 32–63 Shutter open1 64–94 min Strobe 95–95 max Strobe 96–127 Shutter open2 128–158 Strobe Pulse Min 159–159 Strobe Pulse Max 160–191 Shutter Open3 192–222 Random Strobe Min 223–223 Random Strobe Max 224–255 Shutter Open4
8	Cyan	0	
9	Cyan Fine	0	Fine byte of Cyan

Extended (continued)

Ch	Function	Default	DMX values
10	Magenta	0	
11	Magenta Fine	0	Fine byte of Magenta
12	Yellow	0	
13	Yellow Fine	0	Fine byte of Yellow
14	C TO	0	0–254 6500K 255–255 2400K
15	C TO Fine	0	Fine byte of C TO
16	Color Wheel	0	0–4 Open (wheel slot 1) 5–114 index 115–119 Open (wheel slot 1) 120–129 Deep Red (wheel slot 2) 130–139 Medium Blue (wheel slot 3) 140–149 Deep Green (wheel slot 4) 150–159 Amber (wheel slot 5) 160–169 Congo Blue (wheel slot 6) 170–179 CTB (wheel slot 7) 180–191 Open (wheel slot 1) 192–223 CW Rot Slow to Fast 224–224 Stop 225–255 CCW Rot Fast to Slow
17	Color Wheel Fine	0	Fine byte of Color Wheel
18	Gobo	0	0–5 Open (wheel slot 1) 6–20 Gobo 1 (wheel slot 2) 21–35 Gobo 2 (wheel slot 3) 36–50 Gobo 3 (wheel slot 4) 51–65 Gobo 4 (wheel slot 5) 66–80 Gobo 5 (wheel slot 6) 81–95 Gobo 6 (wheel slot 7) 96–110 Gobo 1 shake (slow-fast) (wheel slot 2) 111–125 Gobo 2 shake (slow-fast) (wheel slot 3) 126–140 Gobo 3 shake (slow-fast) (wheel slot 4) 141–155 Gobo 4 shake (slow-fast) (wheel slot 5) 156–170 Gobo 5 shake (slow-fast) (wheel slot 6) 171–185 Gobo 6 shake (slow-fast) (wheel slot 7) 186–192 Open (wheel slot 1) 193–223 CW Slow to Fast 224–224 Stop 225–255 CCW Fast to Slow
19	Gobo Rotation	0	0–127 Gobo Position 0 degree 128–128 Gobo Position 540 degree 129–191 Rot CW Slow to Fast 192–192 Stop 193–255 Rot CCW Fast to Slow
20	Gobo Rotation Fine	0	Fine byte of Gobo Rotation

Extended (continued)

Ch	Function	Default	DMX values
21	Gobo 2	0	0–5 Open (wheel slot 1) 6–18 Gobo 1 (wheel slot 2) 19–31 Gobo 2 (wheel slot 3) 32–44 Gobo 3 (wheel slot 4) 45–57 Gobo 4 (wheel slot 5) 58–70 Gobo 5 (wheel slot 6) 71–83 Gobo 6 (wheel slot 7) 84–96 Gobo 7 (wheel slot 8) 97–109 Gobo 1 shake (slow-fast) (wheel slot 2) 110–122 Gobo 2 shake (slow-fast) (wheel slot 3) 123–135 Gobo 3 shake (slow-fast) (wheel slot 4) 136–148 Gobo 4 shake (slow-fast) (wheel slot 5) 149–161 Gobo 5 shake (slow-fast) (wheel slot 6) 162–174 Gobo 6 shake (slow-fast) (wheel slot 7) 175–187 Gobo 7 shake (slow-fast) (wheel slot 8) 188–192 Open (wheel slot 1) 193–223 Spin CW Slow to Fast 224–224 Stop 225–255 Spin CCW Fast to Slow
22	Zoom	128	0–254 narrow 255–255 wide
23	Zoom Fine	0	Fine byte of Zoom
24	Focus	0	
25	Focus Fine	0	Fine byte of Focus
26	Iris	0	0–224 Open 225–225 Close 226–234 slow 235–235 fast 236–244 slow 245–245 fast 246–254 Slow 255–255 Fast
27	Prism	0	0–5 Open (wheel slot 1) 6–130 6 Linear Prism (wheel slot 2) 131–255 4 Facet Prism (wheel slot 3)
28	Prism Rotation	6	0–5 Rot Off 6–128 Position 0-540 degrees 129–191 Rotation CW Slow to Fast 192–192 Stop 193–255 Rotation CCW Fast to Slow
29	Frost1	0	
30	Frost2	0	
31	Animation Wheel1Pos	0	0–127 Wheel Position 0 degrees (wheel slot 1) 128–128 Wheel Position 540 degrees (wheel slot 2) 129–191 Rot CW Slow to Fast 192–192 Stop 193–255 Rot CCW Fast to Slow
32	Blade1A	0	
33	Blade1A Fine	0	Fine byte of Blade1A
34	Blade1B	0	
35	Blade1B Fine	0	Fine byte of Blade1B
36	Blade2A	0	
37	Blade2A Fine	0	Fine byte of Blade2A
38	Blade2B	0	
39	Blade2B Fine	0	Fine byte of Blade2B

Extended (continued)

Ch	Function	Default	DMX values
40	Blade3A	0	
41	Blade3A Fine	0	Fine byte of Blade3A
42	Blade3B	0	
43	Blade3B Fine	0	Fine byte of Blade3B
44	Blade4A	0	
45	Blade4A Fine	0	Fine byte of Blade4A
46	Blade4B	0	
47	Blade4B Fine	0	Fine byte of Blade4B
48	Shaper Rot	128	
49	Shaper Rot Fine	0	Fine byte of Shaper Rot
50	Position Effect Rate	0	0–254 Max Speed 255–255 Min Speed
51	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theater 101–255 Default to Unit Setting
52	Control1	0	0–2 No function 3–4 OFF Display Backlight 5–6 On Display Backlight 7–17 Invert Pan on (Hold 3s) 18–29 Invert Pan off (Hold 5s) 30–41 Invert Tilt on (Hold 3s) 42–53 Invert Tilt off (Hold 5s) 54–65 Fan Auto (Hold 3s) 66–77 Fan Silent (Hold 5s) 78–89 Linear Dimmer Curve (hold 3s) 90–101 Square Dimmer Curve (hold 3s) 102–113 Inv-Square Dimmer Curve (hold 3s) 114–125 S - Dimmer Curve (hold 3s) 126–137 1200 Hz (hold 3s) 138–149 3600 Hz (hold 3s) 150–161 5000 Hz (hold 3s) 162–173 10000 Hz (hold 3s) 174–185 15000 Hz (hold 3s) 186–197 20000 Hz (hold 3s) 198–209 25000 Hz (hold 3s) 210–221 Reset Pan/Tilt (Hold 3s) 222–233 Reset only Head (Hold 3s) 234–255 Reset All Functions (Hold 3s)