
Luxibel

B P9Z

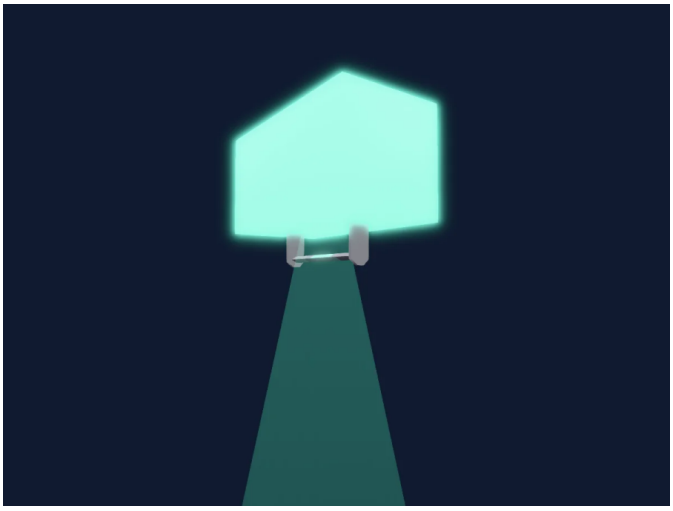

Manufacturer	**Luxibel**
Type	**PAR**
DMX modes	**4**
DMX footprint	**3, 5, 17, 24 channels**
Beam angle	**25°**
Heads / cells	**4**
Size (W × H × D)	**250 × 195 × 45 mm**
GDTF fixture type	**FA370BDF-A527-4D47-913C-C5…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Dimmer · Pixel control

Safety-relevant functions

Fixture reset

DMX modes

3-channel mode	3 ch
5-channel mode	5 ch
17-channel mode	17 ch
24-channel mode 1	24 ch

3-channel mode

3 channels

Ch	Function	Default	DMX values
1	Zoom	0	
2	Dimmer	0	
3	Color Wheel	0	0–5 Colour OFF 6–13 Red 14–21 Amber 22–29 Yellow Amber 30–37 Yellow 38–45 Green 46–53 Turquoise 54–61 Cyan 62–69 Blue 70–77 Lavender 78–85 Mauve 86–93 Magenta 94–101 Pink 102–109 Warm White 110–117 White 118–125 Cold White 126–127 Colour Jumping Stop 128–191 Colour Jumping Speed (slow to fast) Colour 1-12 192–255 Colour Fading Speed (slow to fast) Colour 1-13

5-channel mode

5 channels

Ch	Function	Default	DMX values
1	Zoom	0	
2	Red	0	
3	Green	0	
4	Blue	0	
5	White	0	

17-channel mode

17 channels

Ch	Function	Default	DMX values
1	Zoom	0	
2	Red	0	
3	Green	0	
4	Blue	0	
5	White	0	
6	Red	0	
7	Green	0	
8	Blue	0	
9	White	0	
10	Red	0	
11	Green	0	
12	Blue	0	
13	White	0	
14	Red	0	
15	Green	0	
16	Blue	0	
17	White	0	

24-channel mode 1

24 channels

Ch	Function	Default	DMX values
1	Zoom	0	
2	Zoom MSpeed	0	
3	Dimmer	0	
4	Dimmer Fine	0	Fine byte of Dimmer
5	Shutter1Strobe	0	0–5 Strobe open 6–10 Strobe closed 11–33 Random 34–56 Ramp up Random 57–79 Ramp down Random 80–102 Random Strobe effect 103–127 Strobe Break Effect 5s-1s (Short burst with break) 128–250 Strobe slow-fast 1-20Hz 251–255 Strobe open
6	Color Macro1	0	0–5 Colour OFF 6–13 Red 14–21 Amber 22–29 Yellow Amber 30–37 Yellow 38–45 Green 46–53 Turquoise 54–61 Cyan 62–69 Blue 70–77 Lavender 78–85 Mauve 86–93 Magenta 94–101 Pink 102–109 Warm White 110–117 White 118–125 Cold White 126–127 Colour Jumping Stop 128–191 Colour Jumping Speed (slow to fast) Colour 1-12 192–255 Colour Fading Speed (slow to fast) Colour 1-13
7	Dimmer Curve	0	0–5 No Function 6–63 Linear 64–127 Exponential 128–191 Logarithmic 192–255 S-Curve
8	Control1	0	0–5 No Function 6–63 Dimmer Response LED (Hold 3s) 64–127 Dimmer Response Halogen (Hold 5s) 128–191 Setting Fan High (Hold 3s) 192–205 Setting Fan Auto (Hold 3s) 206–255 Reset All Function (Hold 5s)
9	Red	0	
10	Green	0	
11	Blue	0	
12	White	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	White	0	
17	Red	0	
18	Green	0	
19	Blue	0	
20	White	0	

24-channel mode 1 (continued)

Ch	Function	Default	DMX values
21	Red	0	
22	Green	0	
23	Blue	0	
24	White	0	