
OXO Light

Colorbeam150 BFX

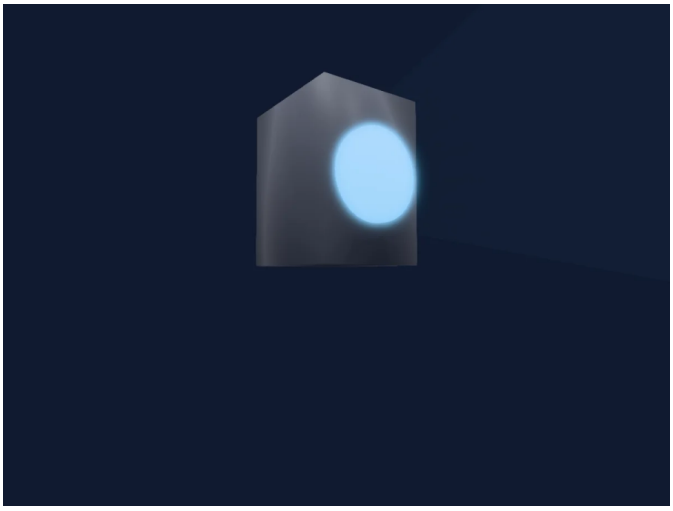

Manufacturer	**OXO Light**
Type	**Effect light**
DMX modes	**3**
DMX footprint	**7, 11, 35 channels**
Beam angle	**25°**
Size (W × H × D)	**250 × 300 × 370 mm**
GDTF fixture type	**7C751FD6-DF61-42E8-8F74-F47…**

Controls

RGB colour mixing · Dimmer

DMX modes

Mode 7 channels	7 ch
Mode 11 channels	11 ch
Mode 35 channels	35 ch

Mode 7 channels

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White Led Ring	0	
6	White Led Ring Macros	0	0–10 OFF 11–14 White LED 1/9/17 15–19 White LED 2/10/18 20–24 White LED 3/11/19 25–29 White LED 4/12/20 30–34 White LED 5/13/21 35–39 White LED 6/14/22 40–44 White LED 7/15/23 45–49 White LED 8/16/24 50–54 White LED 1/9/17 + 5/13/21 55–59 White LED 2/10/18 + 6/14/22 60–64 White LED 3/11/19 + 7/15/23 65–69 White LED 4/12/20 + 8/16/24 70–74 White LED 1 thru 8 75–79 White LED 9 thru 16 80–84 White LED 17 thru 24 85–89 White LED 1 thru 24 90–95 White LED 1 thru 24 pulse 96–100 White LED 1 thru 24 pulse up 101–105 White LED 1 thru 24 pulse down 106–110 White LED 1 thru 24 macro 1 111–115 White LED 1 thru 24 macro 2 116–120 White LED 1 thru 24 macro 3 121–125 White LED 1 thru 24 macro 4 126–130 White LED 1 thru 24 macro 5 131–135 White LED 1 thru 24 macro 6 136–140 White LED 1 thru 24 macro 7 141–145 White LED 1 thru 24 macro 8 146–150 White LED 1 thru 24 macro 9 151–155 White LED 1 thru 24 macro 10 156–160 White LED 1 thru 24 macro 11 161–165 White LED 1 thru 24 macro 12 166–170 White LED 1 thru 24 macro 13 171–175 White LED 1 thru 24 macro 14 176–180 White LED 1 thru 24 macro 15 181–185 White LED 1 thru 24 macro 16 186–190 White LED 1 thru 24 macro 17 191–195 White LED 1 thru 24 macro 18 196–200 White LED 1 thru 24 macro 19 201–205 White LED 1 thru 24 macro 20 206–210 White LED 1 thru 24 macro 21 211–215 White LED 1 thru 24 macro 22 216–220 White LED 1 thru 24 macro 23 221–225 White LED 1 thru 24 macro 24 226–230 White LED 1 thru 24 macro 25 231–239 Sound Mode 1 (chaser) 240–247 Sound Mode 2 (flash) 248–255 Full On
7	White LEDMacros Speed	0	

Mode 11 channels

11 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	Shutter1Strobe	0	0–9 Open 10–170 Single flash (from slow to fast) 171–250 Double flash (from slow to fast) 251–255 Open
6	Rgb	0	0–4 Off 5–14 RED 15–24 Green 25–34 Blue 35–44 Yellow 45–54 Purple 55–64 Cyan 65–74 White 75–97 Color Chase 98–120 Color Fade 121–143 Color Pulse 144–166 Color Pulse UP 167–189 Color Pulse Down 190–230 Blank 231–238 Sound Mode 1 239–246 Sounf Mode 2 247–255 Full On
7	Color Mix MSpeed	0	
8	White Led Ring	0	
9	White Ring Strobe	0	0–9 Open 10–170 Single flash (from slow to fast) 171–250 Double flash (from slow to fast) 251–255 Open

Mode 11 channels (continued)

Ch	Function	Default	DMX values
10	White Led Ring Macros	0	0–10 OFF 11–14 White LED 1/9/17 15–19 White LED 2/10/18 20–24 White LED 3/11/19 25–29 White LED 4/12/20 30–34 White LED 5/13/21 35–39 White LED 6/14/22 40–44 White LED 7/15/23 45–49 White LED 8/16/24 50–54 White LED 1/9/17 + 5/13/21 55–59 White LED 2/10/18 + 6/14/22 60–64 White LED 3/11/19 + 7/15/23 65–69 White LED 4/12/20 + 8/16/24 70–74 White LED 1 thru 8 75–79 White LED 9 thru 16 80–84 White LED 17 thru 24 85–89 White LED 1 thru 24 90–95 White LED 1 thru 24 pulse 96–100 White LED 1 thru 24 pulse up 101–105 White LED 1 thru 24 pulse down 106–110 White LED 1 thru 24 macro 1 111–115 White LED 1 thru 24 macro 2 116–120 White LED 1 thru 24 macro 3 121–125 White LED 1 thru 24 macro 4 126–130 White LED 1 thru 24 macro 5 131–135 White LED 1 thru 24 macro 6 136–140 White LED 1 thru 24 macro 7 141–145 White LED 1 thru 24 macro 8 146–150 White LED 1 thru 24 macro 9 151–155 White LED 1 thru 24 macro 10 156–160 White LED 1 thru 24 macro 11 161–165 White LED 1 thru 24 macro 12 166–170 White LED 1 thru 24 macro 13 171–175 White LED 1 thru 24 macro 14 176–180 White LED 1 thru 24 macro 15 181–185 White LED 1 thru 24 macro 16 186–190 White LED 1 thru 24 macro 17 191–195 White LED 1 thru 24 macro 18 196–200 White LED 1 thru 24 macro 19 201–205 White LED 1 thru 24 macro 20 206–210 White LED 1 thru 24 macro 21 211–215 White LED 1 thru 24 macro 22 216–220 White LED 1 thru 24 macro 23 221–225 White LED 1 thru 24 macro 24 226–230 White LED 1 thru 24 macro 25 231–239 Sound Mode 1 (chaser) 240–247 Sound Mode 2 (flash) 248–255 Full On
11	White LEDMacros Speed	0	

Mode 35 channels

35 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	

Mode 35 channels (continued)

Ch	Function	Default	DMX values
5	Shutter1Strobe	0	0–9 Open 10–170 Single flash (from slow to fast) 171–250 Double flash (from slow to fast) 251–255 Open
6	Rgb	0	0–4 Off 5–14 RED 15–24 Green 25–34 Blue 35–44 Yellow 45–54 Purple 55–64 Cyan 65–74 White 75–97 Color Chase 98–120 Color Fade 121–143 Color Pulse 144–166 Color Pulse UP 167–189 Color Pulse Down 190–230 Blank 231–238 Sound Mode 1 239–246 Sounf Mode 2 247–255 Full On
7	Color Mix MSpeed	0	
8	White Led Ring	0	
9	Dimmer	0	
10	Dimmer	0	
11	Dimmer	0	
12	Dimmer	0	
13	Dimmer	0	
14	Dimmer	0	
15	Dimmer	0	
16	Dimmer	0	
17	Dimmer	0	
18	Dimmer	0	
19	Dimmer	0	
20	Dimmer	0	
21	Dimmer	0	
22	Dimmer	0	
23	Dimmer	0	
24	Dimmer	0	
25	Dimmer	0	
26	Dimmer	0	
27	Dimmer	0	
28	Dimmer	0	
29	Dimmer	0	
30	Dimmer	0	
31	Dimmer	0	
32	Dimmer	0	
33	White Ring Strobe	0	0–9 Open 10–170 Single flash (from slow to fast) 171–250 Double flash (from slow to fast) 251–255 Open

Mode 35 channels (continued)

Ch	Function	Default	DMX values
34	White Led Ring Macros	0	0–10 OFF 11–14 White LED 1/9/17 15–19 White LED 2/10/18 20–24 White LED 3/11/19 25–29 White LED 4/12/20 30–34 White LED 5/13/21 35–39 White LED 6/14/22 40–44 White LED 7/15/23 45–49 White LED 8/16/24 50–54 White LED 1/9/17 + 5/13/21 55–59 White LED 2/10/18 + 6/14/22 60–64 White LED 3/11/19 + 7/15/23 65–69 White LED 4/12/20 + 8/16/24 70–74 White LED 1 thru 8 75–79 White LED 9 thru 16 80–84 White LED 17 thru 24 85–89 White LED 1 thru 24 90–95 White LED 1 thru 24 pulse 96–100 White LED 1 thru 24 pulse up 101–105 White LED 1 thru 24 pulse down 106–110 White LED 1 thru 24 macro 1 111–115 White LED 1 thru 24 macro 2 116–120 White LED 1 thru 24 macro 3 121–125 White LED 1 thru 24 macro 4 126–130 White LED 1 thru 24 macro 5 131–135 White LED 1 thru 24 macro 6 136–140 White LED 1 thru 24 macro 7 141–145 White LED 1 thru 24 macro 8 146–150 White LED 1 thru 24 macro 9 151–155 White LED 1 thru 24 macro 10 156–160 White LED 1 thru 24 macro 11 161–165 White LED 1 thru 24 macro 12 166–170 White LED 1 thru 24 macro 13 171–175 White LED 1 thru 24 macro 14 176–180 White LED 1 thru 24 macro 15 181–185 White LED 1 thru 24 macro 16 186–190 White LED 1 thru 24 macro 17 191–195 White LED 1 thru 24 macro 18 196–200 White LED 1 thru 24 macro 19 201–205 White LED 1 thru 24 macro 20 206–210 White LED 1 thru 24 macro 21 211–215 White LED 1 thru 24 macro 22 216–220 White LED 1 thru 24 macro 23 221–225 White LED 1 thru 24 macro 24 226–230 White LED 1 thru 24 macro 25 231–239 Sound Mode 1 (chaser) 240–247 Sound Mode 2 (flash) 248–255 Full On
35	White LEDMacros Speed	0	