
Prolights

EclFresnelFWXSVW

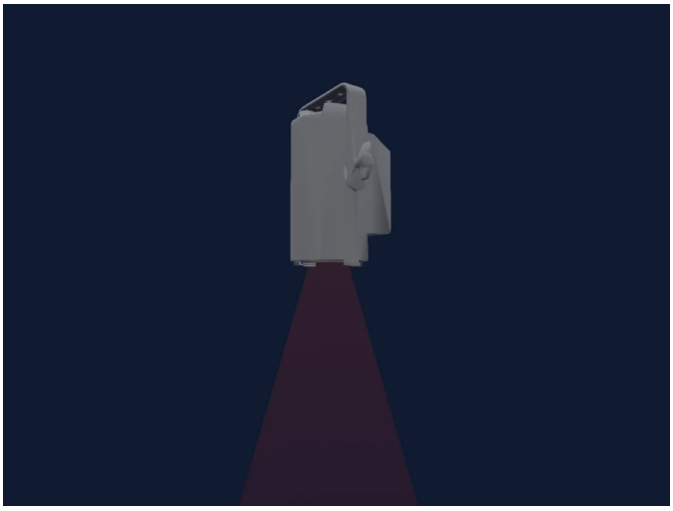

Manufacturer	**Prolights**
Type	**Spot**
DMX modes	**6**
DMX footprint	**1, 2, 6, 9, 14 channels**
Beam angle	**10-56°**
Size (W × H × D)	**216 × 200 × 40 mm**
GDTF fixture type	**E3FB3152-C2B3-4FA0-B44A-B5…**

Controls

Extra LED colours · Colour temperature · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

UNO_1ch	1 ch
DUO_2ch	2 ch
Basic_6ch	6 ch
Standard_6ch	6 ch
Extended_9ch	9 ch
Advanced_14ch	14 ch

UNO_1ch

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

DUO_2ch

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

Basic_6ch

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Color Add WW	255	
4	Color Add CW	255	
5	Shutter / Strobe	255	0–1 Open 2–62 Strobe 63–64 Open 65–125 PulseInStrobe 126–127 Closed 128–188 PulseOutStrobe 189–190 Open 191–251 RandomStrobe 252–255 Open
6	Control1	0	

Standard_6ch

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	128	0–254 2700K 255–255 6500K
4	C TC Fine	128	Fine byte of C TC
5	Shutter / Strobe	255	0–1 Open 2–62 Strobe 63–64 Open 65–125 PulseInStrobe 126–127 Closed 128–188 PulseOutStrobe 189–190 Open 191–251 RandomStrobe 252–255 Open
6	Control1	0	

Extended_9ch

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	128	0–254 2700K 255–255 6500K
4	C TC Fine	128	Fine byte of C TC
5	Control1	0	
6	Shutter / Strobe	255	0–1 Open 2–62 Strobe 63–64 Open 65–125 PulseInStrobe 126–127 Closed 128–188 PulseOutStrobe 189–190 Open 191–251 RandomStrobe 252–255 Open
7	Function	0	0–1 Safe 2–3 Preset 01 4–5 Preset 02 6–7 Preset 03 8–9 Preset 04 10–11 Preset 05 12–13 Preset 06 14–15 Preset 07 16–17 Preset 08 18–19 Preset 09 20–21 Preset 10 22–23 Preset 11 24–25 Preset 12 26–27 Preset 13 28–29 Preset 14 30–31 Preset 15 32–33 Preset 16 34–35 Preset 17 36–37 Preset 18 38–39 Preset 19 40–41 Preset 20 42–167 TBD1 168–169 CCT - 2700K 170–171 CCT - 3000K 172–173 CCT - 3200K 174–175 CCT - 3600K 176–177 CCT - 4000K 178–179 CCT - 5000K 180–181 CCT - 5600K 182–183 CCT - 6000K 184–185 CCT - 6500K 186–255 TBD2
8	Fan Mode	120	0–1 AsFormMenu 2–3 Auto 4–5 Turbo 6–107 Manual Fan Speed 108–109 Quiet 1 Dynamic Output 110–111 Quiet 2 Dynamic Output 112–113 Off Dynamic Output 114–115 Quiet 1 Contant Output 116–117 Quiet 2 Contant Output 118–119 OFF Contant Output 120–255 NoFeature
9	Dummy	0	

Advanced_14ch

14 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	128	0–254 2700K 255–255 6500K
4	C TC Fine	128	Fine byte of C TC
5	Color XFade	0	0–254 CTC 255–255 ColorMix
6	Color Add WW	255	
7	Color Add WW Fine	255	Fine byte of Color Add WW
8	Color Add CW	255	
9	Color Add CW Fine	255	Fine byte of Color Add CW
10	Control1	0	
11	Shutter / Strobe	255	0–1 Open 2–62 Strobe 63–64 Open 65–125 PulseInStrobe 126–127 Closed 128–188 PulseOutStrobe 189–190 Open 191–251 RandomStrobe 252–255 Open
12	Function	0	0–1 Safe 2–3 Preset 01 4–5 Preset 02 6–7 Preset 03 8–9 Preset 04 10–11 Preset 05 12–13 Preset 06 14–15 Preset 07 16–17 Preset 08 18–19 Preset 09 20–21 Preset 10 22–23 Preset 11 24–25 Preset 12 26–27 Preset 13 28–29 Preset 14 30–31 Preset 15 32–33 Preset 16 34–35 Preset 17 36–37 Preset 18 38–39 Preset 19 40–41 Preset 20 42–167 TBD1 168–169 CCT - 2700K 170–171 CCT - 3000K 172–173 CCT - 3200K 174–175 CCT - 3600K 176–177 CCT - 4000K 178–179 CCT - 5000K 180–181 CCT - 5600K 182–183 CCT - 6000K 184–185 CCT - 6500K 186–255 TBD2

Advanced_14ch (continued)

Ch	Function	Default	DMX values
13	Fan Mode	120	0–1 AsFormMenu 2–3 Auto 4–5 Turbo 6–107 Manual Fan Speed 108–109 Quiet 1 Dynamic Output 110–111 Quiet 2 Dynamic Output 112–113 Off Dynamic Output 114–115 Quiet 1 Contant Output 116–117 Quiet 2 Contant Output 118–119 OFF Contant Output 120–255 NoFeature
14	Dummy	0	