
Prolights

Lumipix12QIP

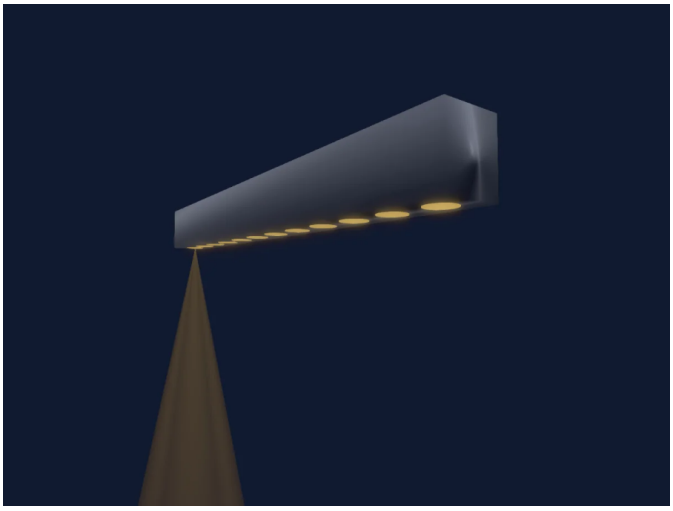

Manufacturer	**Prolights**
Type	**Blinder**
DMX modes	**5**
DMX footprint	**4, 6, 10, 53 channels**
Beam angle	**25°**
Size (W × H × D)	**995 × 105 × 91 mm**
GDTF fixture type	**F4C60B0F-6506-4816-9B51-AC…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

4 ch	4 ch
48 ch	4 ch
6 ch	6 ch
10 ch	10 ch
53 ch	53 ch

4 ch

4 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	

48 ch

4 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	

6 ch

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	0	
3	Green	0	
4	Blue	0	
5	White	0	
6	Shutter / Strobe	10	10–10 Open 11–255 Strobe · Slow2Fast 0.9–15 Hz

10 ch

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	0	
3	Green	0	
4	Blue	0	
5	White	0	
6	Shutter / Strobe	10	10–10 Open 11–255 Strobe · Slow2Fast 0.9–15 Hz

10 ch (continued)

Ch	Function	Default	DMX values
7	Color Macro1	11	0–10 No Function 11–30 Red-Yellow 31–50 Yellow-Green 51–70 Green-Cyan 71–90 Cyan-Blu 91–110 Blu-Magenta 111–130 Magenta-Red 131–150 Red-White 151–170 White 171–200 Fulll 201–205 White 1 206–210 White 2 211–215 White 3 216–220 White 4 221–225 White 5 226–230 White 6 231–235 White 7 236–240 White 8 241–245 White 9 246–250 White 10 251–255 White 11
8	Effect	0	0–10 NoFeature 11–28 Effect1 29–46 Effect2 47–64 Effect3 65–82 Effect4 83–100 Effect5 101–118 Effect6 119–136 Effect7 137–154 Effect8 155–172 Effect9 173–190 Effect10 191–226 Effect12 227–244 Effect13 245–255 Effect0
9	Effect Speed	0	0–254 Slow 255–255 Fast
10	Dimmer Mode	0	0–51 AsFromMenu 52–101 Mode OFF 102–152 Mode1 FAST 153–203 Mode2 MIDDLE 204–255 Mode3 SLOW

53 ch

53 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	

53 ch (continued)

Ch	Function	Default	DMX values
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	

53 ch (continued)

Ch	Function	Default	DMX values
49	Effect	0	0–10 NoFeature 11–28 Effect1 29–46 Effect2 47–64 Effect3 65–82 Effect4 83–100 Effect5 101–118 Effect6 119–136 Effect7 137–154 Effect8 155–172 Effect9 173–190 Effect10 191–226 Effect12 227–244 Effect13 245–255 Effect0
50	Effect Speed	0	0–254 Slow 255–255 Fast
51	Dimmer	0	0–254 Closed 255–255 Open
52	Shutter / Strobe	10	10–10 Open 11–255 Strobe · Slow2Fast 0.9–15 Hz
53	Dimmer Mode	0	0–51 AsFromMenu 52–101 Mode OFF 102–152 Mode1 FAST 153–203 Mode2 MIDDLE 204–255 Mode3 SLOW