
Prolights

LumiPix9UHE

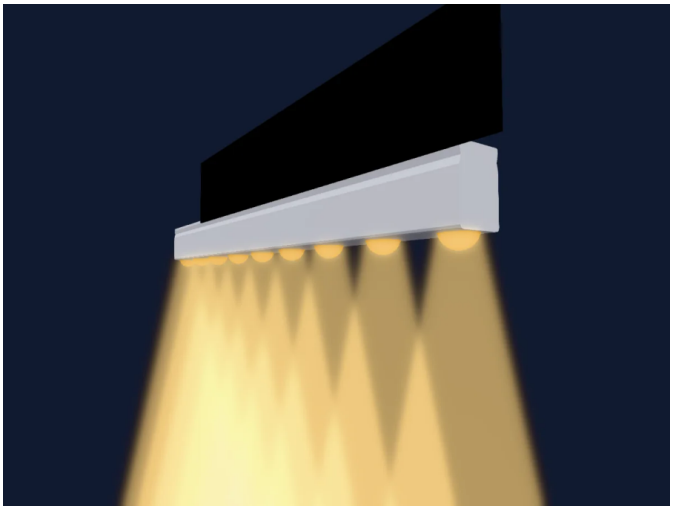

Manufacturer	**Prolights**
Type	**LED bar**
DMX modes	**5**
DMX footprint	**6, 9, 11, 18, 23 channels**
Beam angle	**23°**
Heads / cells	**3**
Size (W × H × D)	**1000 × 144 × 63 mm**
GDTF fixture type	**CAABAE80-1B9C-41CA-A076-7…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer · Pixel control

Safety-relevant functions

Built-in effect programmes

DMX modes

6ch	6 ch
9ch	9 ch
11ch	11 ch
18ch	18 ch
23ch	23 ch

6ch

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Color Add BM	255	

9ch

9 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Color Add BM	255	
7	Dimmer	0	0–254 Closed 255–255 Open
8	Shutter / Strobe	10	10–15 Open 16–255 Strobe · Slow2Fast 0.9–15 Hz
9	Dimmer Mode	0	0–51 As From Menu 52–101 DimmerSpeed OFF 102–152 Fast Speed 153–203 Mid Speed 204–255 Slow Speed

11ch

11 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Color Add BM	255	

11ch (continued)

Ch	Function	Default	DMX values
7	Color Macro1	0	0–10 NoFeature 11–30 Macro1 31–50 Macro2 51–70 Macro3 71–90 Macro4 91–110 Macro5 111–130 Macro6 131–150 Macro7 151–170 Macro8 171–200 Macro9 201–205 Macro10 206–210 Macro11 211–215 Macro12 216–220 Macro13 221–225 MAcro14 226–230 Macro15 231–235 Macro16 236–240 Macro17 241–245 Macro18 246–250 Macro19 251–255 Macro20
8	Shutter / Strobe	10	0–0 Slow 1–9 Slow2Fast 10–10 Open 11–15 SoundSensivity Values 16–254 Strobe · Slow2Fast 0.9–14.9 Hz 255–255 Fast
9	Effect	0	0–31 NoFeature 32–63 Pulse effect 0%-100% 64–95 Pulse effect 100%-0% 96–114 Pulse effect 100%-0%-100% 115–122 AutoProgram_1 123–130 AutoProgram_2 131–138 AutoProgram_3 139–146 AutoProgram_4 147–154 AutoProgram_5 155–162 AutoProgram_6 163–170 AutoProgram_7 171–178 AutoProgram_8 179–186 AutoProgram_9 187–194 AutoProgram_10 195–202 AutoProgram_11 203–210 AutoProgram_12 211–218 AutoProgram_13 219–226 AutoProgram_14 227–255 SoundProgram
10	Dimmer	0	0–254 Closed 255–255 Open
11	Dimmer Mode	0	0–51 PresetAsMenu 52–101 Off 102–152 Fast 153–203 Mid 204–255 Slow

18ch

18 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	

18ch (continued)

Ch	Function	Default	DMX values
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Color Add BM	255	
7	Red	255	
8	Green	255	
9	Blue	255	
10	Color Add RY	255	
11	White	255	
12	Color Add BM	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	Color Add RY	255	
17	White	255	
18	Color Add BM	255	

23ch

23 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	Color Add BM	255	
7	Red	255	
8	Green	255	
9	Blue	255	
10	Color Add RY	255	
11	White	255	
12	Color Add BM	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	Color Add RY	255	
17	White	255	
18	Color Add BM	255	

23ch (continued)

Ch	Function	Default	DMX values
19	Color Macro1	0	0–10 NoFeature 11–30 Macro1 31–50 Macro2 51–70 Macro3 71–90 Macro4 91–110 Macro5 111–130 Macro6 131–150 Macro7 151–170 Macro8 171–200 Macro9 201–205 Macro10 206–210 Macro11 211–215 Macro12 216–220 Macro13 221–225 MAcro14 226–230 Macro15 231–235 Macro16 236–240 Macro17 241–245 Macro18 246–250 Macro19 251–255 Macro20
20	Shutter / Strobe	10	0–0 Slow 1–9 Slow2Fast 10–10 Open 11–15 SoundSensivity Values 16–254 Strobe · Slow2Fast 0.9–14.9 Hz 255–255 Fast
21	Effect	0	0–31 NoFeature 32–63 Pulse effect 0%-100% 64–95 Pulse effect 100%-0% 96–114 Pulse effect 100%-0%-100% 115–122 AutoProgram_1 123–130 AutoProgram_2 131–138 AutoProgram_3 139–146 AutoProgram_4 147–154 AutoProgram_5 155–162 AutoProgram_6 163–170 AutoProgram_7 171–178 AutoProgram_8 179–186 AutoProgram_9 187–194 AutoProgram_10 195–202 AutoProgram_11 203–210 AutoProgram_12 211–218 AutoProgram_13 219–226 AutoProgram_14 227–255 SoundProgram
22	Dimmer	0	0–254 Closed 255–255 Open
23	Dimmer Mode	0	0–51 PresetAsMenu 52–101 Off 102–152 Fast 153–203 Mid 204–255 Slow