
Prolights

TabledC

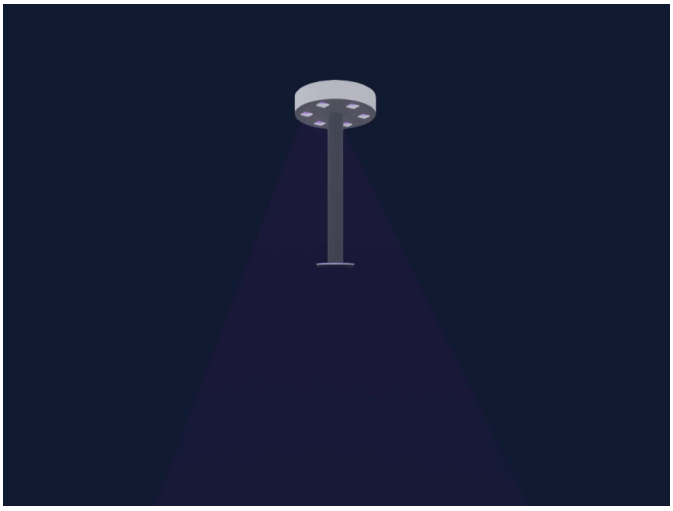

Manufacturer	**Prolights**
Type	**Effect light**
DMX modes	**4**
DMX footprint	**4, 7, 10, 12 channels**
Beam angle	**45°**
Size (W × H × D)	**140 × 30 × 140 mm**
GDTF fixture type	**E9D2367A-E386-4F3A-B96C-DF…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

Basic_4ch	4 ch
STD_7ch	7 ch
EXT_10ch	10 ch
ADV_12ch	12 ch

Basic_4ch

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	

STD_7ch

7 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Dimmer	0	0–254 Closed 255–255 Open
6	Shutter / Strobe	0	0–15 Open 16–114 Strobe · Slow 0.9–14.9 Hz 115–115 Strobe · Fast 15 Hz 116–135 Open 136–234 RandomStrobe · Slow 0.9–14.9 Hz 235–235 RandomStrobe · Fast 15 Hz 236–255 Open
7	Intensity MSpeed	0	0–0 AsFromMenu 1–254 Snap 255–255 Fade

EXT_10ch

10 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Dimmer	0	0–254 Closed 255–255 Open
6	Shutter / Strobe	0	0–15 Open 16–114 Strobe · Slow 0.9–14.9 Hz 115–115 Strobe · Fast 15 Hz 116–135 Open 136–234 RandomStrobe · Slow 0.9–14.9 Hz 235–235 RandomStrobe · Fast 15 Hz 236–255 Open

EXT_10ch (continued)

Ch	Function	Default	DMX values
7	Color Macro1	0	0–10 NoFeature 11–30 R 100 G 0-100 B 0 31–50 R 100-0 G 100 B 0 51–70 R 0 G 100 B 0-100 71–90 R 0 G 100-0 B 100 91–110 R 0-100 G 0 B 100 111–130 R 100 G 0 B 100-0 131–150 R 100 G 0-100 B 0-100 151–170 R 100-0 G 100-0 B 100 171–200 R 100 G 100 B 100 201–205 Color1 206–210 Color2 211–215 Color3 216–220 Color4 221–225 Color5 226–230 Color6 231–235 Color7 236–240 Color8 241–245 Color9 246–250 Color10 251–255 Color11
8	Effect	0	0–51 NoFeature 52–102 Effect1 103–153 Effect2 154–204 Effect3 205–255 Effect4
9	Effect Speed	0	0–254 Slow 255–255 Fast
10	Intensity MSpeed	0	0–0 NoFeature 1–254 Snap 255–255 Fade

ADV_12ch

12 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–15 Open 16–114 Strobe · Slow 0.9–14.9 Hz 115–115 Strobe · Fast 15 Hz 116–135 Open 136–234 RandomStrobe · Slow 0.9–14.9 Hz 235–235 RandomStrobe · Fast 15 Hz 236–255 Open
3	Intensity MSpeed	0	
4	Red	255	
5	Green	255	
6	Blue	255	
7	White	255	

ADV_12ch (continued)

Ch	Function	Default	DMX values
8	Color Macro1	0	0–10 NoFeature 11–30 R 100 G 0-100 B 0 31–50 R 100-0 G 100 B 0 51–70 R 0 G 100 B 0-100 71–90 R 0 G 100-0 B 100 91–110 R 0-100 G 0 B 100 111–130 R 100 G 0 B 100-0 131–150 R 100 G 0-100 B 0-100 151–170 R 100-0 G 100-0 B 100 171–200 R 100 G 100 B 100 201–205 Color1 206–210 Color2 211–215 Color3 216–220 Color4 221–225 Color5 226–230 Color6 231–235 Color7 236–240 Color8 241–245 Color9 246–250 Color10 251–255 Color11
9	Effect	0	0–51 NoFeature 52–102 Effect1 103–153 Effect2 154–204 Effect3 205–255 Effect4
10	Effect Speed	0	0–254 Slow 255–255 Fast
11	Crossfade	0	0–254 0 255–255 100
12	Color Control	0	0–254 CTO On Colors 0 255–255 CTO On Colors 100