
ROXX

Cluster S2

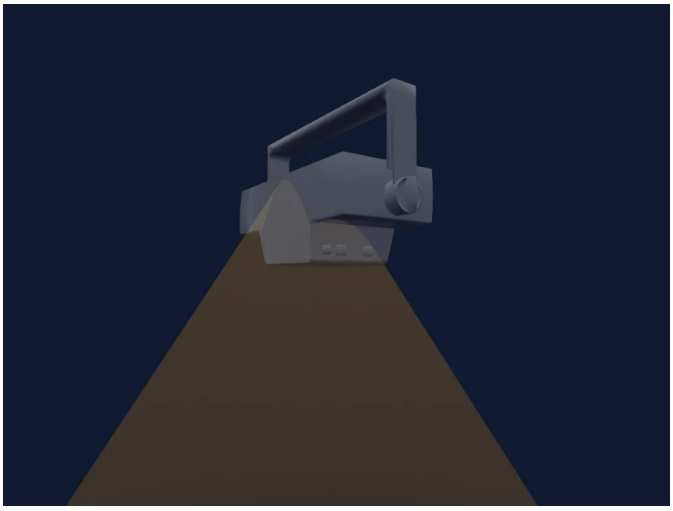

Manufacturer	**ROXX**
Type	**PAR**
DMX modes	**7**
DMX footprint	**15, 39, 71, 112, 178, 209, 275 channels**
Beam angle	**66°**
Heads / cells	**2**
Size (W × H × D)	**500 × 395 × 201 mm**
GDTF fixture type	**93F60B6A-B426-4ABE-BB9C-48…**

Controls

RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer · Pixel control

DMX modes

15CH Simple Mode	15 ch
39CH Easy Mode	39 ch
71CH Standard Mode	71 ch
112CH Pure Mode 8 Bit	112 ch
178CH Full Access Mode	178 ch
209CH Pure Extended Mode 16 Bit	209 ch
275CH Full Access Extended Mode	275 ch

15CH Simple Mode

15 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer	0	
3	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
4	Strobe Duration	0	
5	Dimmer	0	

15CH Simple Mode (continued)

Ch	Function	Default	DMX values
6	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
7	Strobe Duration	0	
8	Dimmer	255	

15CH Simple Mode (continued)

Ch	Function	Default	DMX values
9	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
10	Strobe Duration	0	
11	Red	255	
12	Green	255	
13	Blue	255	
14	C TC	2	
15	Control1	3	

39CH Easy Mode

39 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer	0	

39CH Easy Mode (continued)

Ch	Function	Default	DMX values
3	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
4	Strobe Duration	0	
5	Pattern Dimmer	255	
6	Tube Pattern Selection	3	
7	Pattern Selection XFade	0	
8	Pattern Speed	3	0–5 No Function 6–123 Fast Speed 124–124 Slow Speed 125–130 No Function 131–248 Slow Speed 249–249 Fast Speed 250–255 No Function
9	Pattern XFade	3	0–5 Snap from Cell to Cell 6–254 Short Fade 255–255 Long Fade
10	Pattern Space	0	0–41 1-Segment Space 42–84 2-Segment Spaces 85–127 3-Segment Spaces 128–170 4-Segment Spaces 171–213 5-Segment Spaces 214–255 6-Segment Spaces
11	Dimmer	0	

39CH Easy Mode (continued)

Ch	Function	Default	DMX values
12	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
13	Strobe Duration	0	
14	Pattern Dimmer	255	
15	Tube Pattern Selection	3	
16	Pattern Selection XFade	0	
17	Tube Group Pattern Selection	3	
18	Group Pattern Selection XFade	0	
19	Pattern Speed	3	0–5 No Function 6–123 Fast Speed 124–124 Slow Speed 125–130 No Function 131–248 Slow Speed 249–249 Fast Speed 250–255 No Function
20	Pattern XFade	3	0–5 Snap from Cell to Cell 6–254 Short Fade 255–255 Long Fade
21	Pattern Space	0	0–41 1-Segment Space 42–84 2-Segment Spaces 85–127 3-Segment Spaces 128–170 4-Segment Spaces 171–213 5-Segment Spaces 214–255 6-Segment Spaces
22	Dimmer	255	

39CH Easy Mode (continued)

Ch	Function	Default	DMX values
23	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
24	Strobe Duration	0	
25	Red	255	
26	Green	255	
27	Blue	255	
28	C TC	2	
29	Pattern Dimmer	255	
30	R GBPanel Pattern Selection	3	
31	Pattern Selection XFade	0	
32	Pattern Speed	3	0–5 No Function 6–123 Fast Speed 124–124 Slow Speed 125–130 No Function 131–248 Slow Speed 249–249 Fast Speed 250–255 No Function
33	Pattern XFade	3	0–5 Snap from Cell to Cell 6–254 Short Fade 255–255 Long Fade
34	Pattern Space	0	0–41 1-Segment Space 42–84 2-Segment Spaces 85–127 3-Segment Spaces 128–170 4-Segment Spaces 171–213 5-Segment Spaces 214–255 6-Segment Spaces
35	Pattern Color R	255	
36	Pattern Color G	255	

39CH Easy Mode (continued)

Ch	Function	Default	DMX values
37	Pattern Color B	255	
38	Pattern CTC	2	
39	Control1	3	

71CH Standard Mode

71 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer	0	
3	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
4	Strobe Duration	0	
5	Pattern Dimmer	255	
6	Tube Pattern Selection	3	
7	Pattern Selection XFade	0	
8	Pattern Speed	3	
9	Pattern XFade	3	
10	Pattern Space	0	
11	Dimmer	0	

71CH Standard Mode (continued)

Ch	Function	Default	DMX values
12	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
13	Strobe Duration	0	
14	Pattern Dimmer	255	
15	Tube Pattern Selection	3	
16	Pattern Selection XFade	0	
17	Pattern Speed	3	
18	Pattern XFade	3	
19	Pattern Space	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	

71CH Standard Mode (continued)

Ch	Function	Default	DMX values
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Group Pattern Dimmer	255	
48	Tube Group Pattern Selection	3	
49	Group Pattern Selection XFade	0	
50	Group Pattern Speed	3	
51	Group Pattern XFade	3	
52	Group Pattern Space	0	
53	Dimmer	255	
54	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
55	Strobe Duration	0	
56	Red	255	
57	Green	255	

71CH Standard Mode (continued)

Ch	Function	Default	DMX values
58	Blue	255	
59	C TC	2	
60	Color Macro1	3	
61	Color Macro XFade	3	
62	Group Pattern Dimmer	255	
63	R GBPanel Pattern Selection	3	
64	Group Pattern Selection XFade	0	
65	Group Pattern Speed	3	
66	Group Pattern XFade	3	
67	Group Pattern Space	0	
68	Pattern Color R	255	
69	Pattern Color G	255	
70	Pattern Color B	255	
71	Control1	3	

112CH Pure Mode 8 Bit

112 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
3	Strobe Duration	0	
4	Dimmer	0	
5	Reserved 5	0	

112CH Pure Mode 8 Bit (continued)

Ch	Function	Default	DMX values
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
17	Strobe Duration	0	
18	Dimmer	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	

112CH Pure Mode 8 Bit (continued)

Ch	Function	Default	DMX values
29	Reserved 29	0	
30	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
31	Strobe Duration	0	
32	Dimmer	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	

112CH Pure Mode 8 Bit (continued)

Ch	Function	Default	DMX values
44	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
45	Strobe Duration	0	
46	Dimmer	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	

112CH Pure Mode 8 Bit (continued)

Ch	Function	Default	DMX values
58	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
59	Strobe Duration	0	
60	Dimmer	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	

112CH Pure Mode 8 Bit (continued)

Ch	Function	Default	DMX values
72	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
73	Strobe Duration	0	
74	Red	255	
75	Green	255	
76	Blue	255	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	

112CH Pure Mode 8 Bit (continued)

Ch	Function	Default	DMX values
92	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
93	Strobe Duration	0	
94	Red	255	
95	Green	255	
96	Blue	255	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Control1	3	

178CH Full Access Mode

178 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer	0	
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
15	Strobe Duration	0	
16	Pattern Dimmer	255	
17	Tube Pattern Selection	3	
18	Pattern Selection XFade	0	
19	Pattern Speed	3	
20	Pattern XFade	3	
21	Pattern Space	0	
22	Dimmer	0	
23	Reserved 23	0	

178CH Full Access Mode (continued)

Ch	Function	Default	DMX values
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
35	Strobe Duration	0	
36	Pattern Dimmer	255	
37	Tube Pattern Selection	3	
38	Pattern Selection XFade	0	
39	Pattern Speed	3	
40	Pattern XFade	3	
41	Pattern Space	0	
42	Dimmer	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	

178CH Full Access Mode (continued)

Ch	Function	Default	DMX values
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
55	Strobe Duration	0	
56	Pattern Dimmer	255	
57	Tube Pattern Selection	3	
58	Pattern Selection XFade	0	
59	Pattern Speed	3	
60	Pattern XFade	3	
61	Pattern Space	0	
62	Dimmer	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	

178CH Full Access Mode (continued)

Ch	Function	Default	DMX values
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
75	Strobe Duration	0	
76	Pattern Dimmer	255	
77	Tube Pattern Selection	3	
78	Pattern Selection XFade	0	
79	Pattern Speed	3	
80	Pattern XFade	3	
81	Pattern Space	0	
82	Dimmer	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	

178CH Full Access Mode (continued)

Ch	Function	Default	DMX values
93	Reserved 93	0	
94	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
95	Strobe Duration	0	
96	Pattern Dimmer	255	
97	Tube Pattern Selection	3	
98	Pattern Selection XFade	0	
99	Pattern Speed	0	
100	Pattern XFade	3	
101	Pattern Space	0	
102	Group Pattern Dimmer	255	
103	Tube Group Pattern Selection	3	
104	Group Pattern Selection XFade	0	
105	Group Pattern Speed	3	
106	Group Pattern XFade	3	
107	Group Pattern Space	0	

178CH Full Access Mode (continued)

Ch	Function	Default	DMX values
108	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
109	Strobe Duration	0	
110	Pattern Dimmer	255	
111	R GBPanel Pattern Selection	3	
112	Pattern Selection XFade	0	
113	Pattern Speed	3	
114	Pattern XFade	3	
115	Pattern Space	0	
116	Pattern Color R	255	
117	Pattern Color G	255	
118	Pattern Color B	255	
119	C TC	2	
120	Red	255	
121	Green	255	
122	Blue	255	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	

178CH Full Access Mode (continued)

Ch	Function	Default	DMX values
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
139	Strobe Duration	0	
140	Pattern Dimmer	255	
141	R GBPanel Pattern Selection	3	
142	Pattern Selection XFade	0	
143	Pattern Speed	3	
144	Pattern XFade	3	
145	Pattern Space	0	
146	Pattern Color R	255	
147	Pattern Color G	255	
148	Pattern Color B	255	
149	C TC	2	
150	Red	255	
151	Green	255	
152	Blue	255	
153	Reserved 153	0	

178CH Full Access Mode (continued)

Ch	Function	Default	DMX values
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	
166	Reserved 166	0	
167	Reserved 167	0	
168	Group Pattern Dimmer	255	
169	R GBGroup Panel Pattern Selection	3	
170	Group Pattern Selection XFade	0	
171	Group Pattern Speed	3	
172	Group Pattern XFade	3	
173	Group Pattern Space	0	
174	Pattern Color R	255	
175	Pattern Color G	255	
176	Pattern Color B	255	
177	Pattern CTC	2	
178	Control1	3	

209CH Pure Extended Mode 16 Bit

209 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer

209CH Pure Extended Mode 16 Bit (continued)

Ch	Function	Default	DMX values
3	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
4	Strobe Duration	0	
5	Dimmer	0	
6	Dimmer Fine	0	Fine byte of Dimmer
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	

209CH Pure Extended Mode 16 Bit (continued)

Ch	Function	Default	DMX values
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
30	Strobe Duration	0	
31	Dimmer	0	
32	Dimmer Fine	0	Fine byte of Dimmer
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	

209CH Pure Extended Mode 16 Bit (continued)

Ch	Function	Default	DMX values
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
56	Strobe Duration	0	
57	Dimmer	0	
58	Dimmer Fine	0	Fine byte of Dimmer
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	

209CH Pure Extended Mode 16 Bit (continued)

Ch	Function	Default	DMX values
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
82	Strobe Duration	0	
83	Dimmer	0	
84	Dimmer Fine	0	Fine byte of Dimmer
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	

209CH Pure Extended Mode 16 Bit (continued)

Ch	Function	Default	DMX values
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
108	Strobe Duration	0	
109	Dimmer	0	
110	Dimmer Fine	0	Fine byte of Dimmer
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	

209CH Pure Extended Mode 16 Bit (continued)

Ch	Function	Default	DMX values
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
134	Strobe Duration	0	
135	Red	255	
136	Red Fine	255	Fine byte of Red
137	Green	255	
138	Green Fine	255	Fine byte of Green
139	Blue	255	
140	Blue Fine	255	Fine byte of Blue

209CH Pure Extended Mode 16 Bit (continued)

Ch	Function	Default	DMX values
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	
166	Reserved 166	0	
167	Reserved 167	0	
168	Reserved 168	0	
169	Reserved 169	0	
170	Reserved 170	0	

209CH Pure Extended Mode 16 Bit (continued)

Ch	Function	Default	DMX values
171	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
172	Strobe Duration	0	
173	Red	255	
174	Red Fine	255	Fine byte of Red
175	Green	255	
176	Green Fine	255	Fine byte of Green
177	Blue	255	
178	Blue Fine	255	Fine byte of Blue
179	Reserved 179	0	
180	Reserved 180	0	
181	Reserved 181	0	
182	Reserved 182	0	
183	Reserved 183	0	
184	Reserved 184	0	
185	Reserved 185	0	
186	Reserved 186	0	
187	Reserved 187	0	
188	Reserved 188	0	
189	Reserved 189	0	
190	Reserved 190	0	
191	Reserved 191	0	
192	Reserved 192	0	
193	Reserved 193	0	

209CH Pure Extended Mode 16 Bit (continued)

Ch	Function	Default	DMX values
194	Reserved 194	0	
195	Reserved 195	0	
196	Reserved 196	0	
197	Reserved 197	0	
198	Reserved 198	0	
199	Reserved 199	0	
200	Reserved 200	0	
201	Reserved 201	0	
202	Reserved 202	0	
203	Reserved 203	0	
204	Reserved 204	0	
205	Reserved 205	0	
206	Reserved 206	0	
207	Reserved 207	0	
208	Reserved 208	0	
209	Control1	3	

275CH Full Access Extended Mode

275 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer Fine	0	Fine byte of Dimmer
3	Dimmer	0	
4	Dimmer Fine	0	Fine byte of Dimmer
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	

275CH Full Access Extended Mode (continued)

Ch	Function	Default	DMX values
26	Reserved 26	0	
27	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
28	Strobe Duration	0	
29	Pattern Dimmer	255	
30	Tube Pattern Selection	3	
31	Pattern Selection XFade	0	
32	Pattern Speed	0	
33	Pattern XFade	3	
34	Pattern Space	0	
35	Dimmer	0	
36	Dimmer Fine	0	Fine byte of Dimmer
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	

275CH Full Access Extended Mode (continued)

Ch	Function	Default	DMX values
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
60	Strobe Duration	0	
61	Pattern Dimmer	255	
62	Tube Pattern Selection	3	
63	Pattern Selection XFade	0	
64	Pattern Speed	0	
65	Pattern XFade	3	
66	Pattern Space	0	
67	Dimmer	0	
68	Dimmer Fine	0	Fine byte of Dimmer
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	

275CH Full Access Extended Mode (continued)

Ch	Function	Default	DMX values
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
92	Strobe Duration	0	
93	Pattern Dimmer	255	
94	Tube Pattern Selection	3	

275CH Full Access Extended Mode (continued)

Ch	Function	Default	DMX values
95	Pattern Selection XFade	0	
96	Pattern Speed	0	
97	Pattern XFade	3	
98	Pattern Space	0	
99	Dimmer	0	
100	Dimmer Fine	0	Fine byte of Dimmer
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	

275CH Full Access Extended Mode (continued)

Ch	Function	Default	DMX values
123	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
124	Strobe Duration	0	
125	Pattern Dimmer	255	
126	Tube Pattern Selection	3	
127	Pattern Selection XFade	0	
128	Pattern Speed	0	
129	Pattern XFade	3	
130	Pattern Space	0	
131	Dimmer	0	
132	Dimmer Fine	0	Fine byte of Dimmer
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	

275CH Full Access Extended Mode (continued)

Ch	Function	Default	DMX values
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
156	Strobe Duration	0	
157	Pattern Dimmer	255	
158	Tube Pattern Selection	3	
159	Pattern Selection XFade	0	
160	Pattern Speed	0	
161	Pattern XFade	3	
162	Pattern Space	0	
163	Group Pattern Dimmer	255	
164	Tube Group Pattern Selection	3	
165	Group Pattern Selection XFade	0	
166	Group Pattern Speed	0	
167	Group Pattern XFade	3	
168	Group Pattern Space	0	

275CH Full Access Extended Mode (continued)

Ch	Function	Default	DMX values
169	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
170	Strobe Duration	0	
171	Pattern Dimmer	255	
172	R GBPanel Pattern Selection	3	
173	Pattern Selection XFade	0	
174	Pattern Speed	3	
175	Pattern XFade	3	
176	Pattern Space	0	
177	Pattern Color R	255	
178	Pattern Color G	255	
179	Pattern Color B	255	
180	C TC	2	
181	Red	255	
182	Red Fine	255	Fine byte of Red
183	Green	255	
184	Green Fine	255	Fine byte of Green
185	Blue	255	
186	Blue Fine	255	Fine byte of Blue
187	Reserved 187	0	
188	Reserved 188	0	
189	Reserved 189	0	
190	Reserved 190	0	
191	Reserved 191	0	

275CH Full Access Extended Mode (continued)

Ch	Function	Default	DMX values
192	Reserved 192	0	
193	Reserved 193	0	
194	Reserved 194	0	
195	Reserved 195	0	
196	Reserved 196	0	
197	Reserved 197	0	
198	Reserved 198	0	
199	Reserved 199	0	
200	Reserved 200	0	
201	Reserved 201	0	
202	Reserved 202	0	
203	Reserved 203	0	
204	Reserved 204	0	
205	Reserved 205	0	
206	Reserved 206	0	
207	Reserved 207	0	
208	Reserved 208	0	
209	Reserved 209	0	
210	Reserved 210	0	
211	Reserved 211	0	
212	Reserved 212	0	
213	Reserved 213	0	
214	Reserved 214	0	
215	Reserved 215	0	
216	Reserved 216	0	

275CH Full Access Extended Mode (continued)

Ch	Function	Default	DMX values
217	Shutter / Strobe	22	0–19 Shutter Close 20–24 Shutter Open 25–63 Fast Strobe 64–64 Slow Strobe 65–69 Open 70–83 Fast Pulse 84–84 Slow Pulse 85–89 Open 90–103 Fast Pulse 104–104 Slow Pulse 105–109 Open 110–123 Fast Strobe 124–124 Slow Strobe 125–129 Open 130–143 Fast Pulse 144–144 Slow Pulse 145–149 Open 150–163 Fast Pulse 164–164 Slow Pulse 165–169 Open 170–183 Fast Pulse 184–184 Slow Pulse 185–189 Open 190–203 Fast Pulse 204–204 Slow Pulse 205–209 Open 210–223 Fast Sin Wave 224–224 Slow Sin Wave 225–229 Open 230–243 Fast Burst 244–244 Slow Burst 245–255 Open
218	Strobe Duration	0	
219	Pattern Dimmer	255	
220	R GBPanel Pattern Selection	3	
221	Pattern Selection XFade	0	
222	Pattern Speed	3	
223	Pattern XFade	3	
224	Pattern Space	0	
225	Pattern Color R	255	
226	Pattern Color G	255	
227	Pattern Color B	255	
228	C TC	2	
229	Red	255	
230	Red Fine	255	Fine byte of Red
231	Green	255	
232	Green Fine	255	Fine byte of Green
233	Blue	255	
234	Blue Fine	255	Fine byte of Blue
235	Reserved 235	0	
236	Reserved 236	0	
237	Reserved 237	0	
238	Reserved 238	0	
239	Reserved 239	0	

275CH Full Access Extended Mode (continued)

Ch	Function	Default	DMX values
240	Reserved 240	0	
241	Reserved 241	0	
242	Reserved 242	0	
243	Reserved 243	0	
244	Reserved 244	0	
245	Reserved 245	0	
246	Reserved 246	0	
247	Reserved 247	0	
248	Reserved 248	0	
249	Reserved 249	0	
250	Reserved 250	0	
251	Reserved 251	0	
252	Reserved 252	0	
253	Reserved 253	0	
254	Reserved 254	0	
255	Reserved 255	0	
256	Reserved 256	0	
257	Reserved 257	0	
258	Reserved 258	0	
259	Reserved 259	0	
260	Reserved 260	0	
261	Reserved 261	0	
262	Reserved 262	0	
263	Reserved 263	0	
264	Reserved 264	0	
265	Group Pattern Dimmer	255	
266	R GBGroup Panel Pattern Selection	3	
267	Group Pattern Selection XFade	0	
268	Group Pattern Speed	0	
269	Group Pattern XFade	3	
270	Group Pattern Space	0	
271	Pattern Color R	255	
272	Pattern Color G	255	
273	Pattern Color B	255	
274	Pattern CTC	2	
275	Control1	3	