
Showtec

Kanjo Spot 60

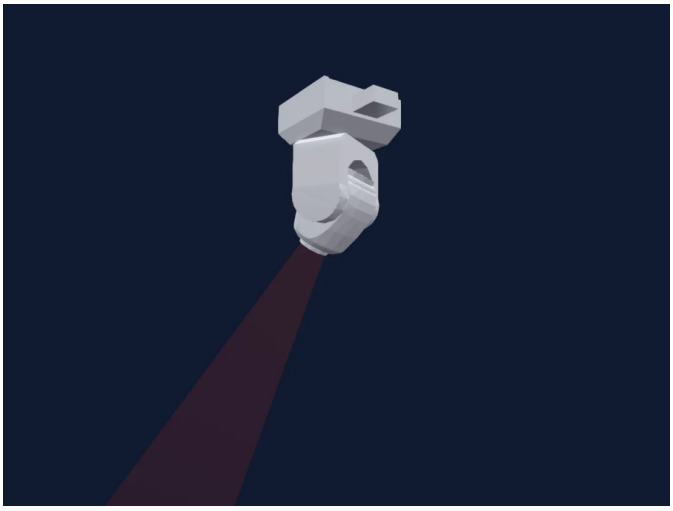

Manufacturer	**Showtec**
Type	**Moving head**
DMX modes	**2**
DMX footprint	**8, 10 channels**
Beam angle	**18°**
Pan range	**540°**
Tilt range	**225°**
Size (W × H × D)	**97 × 150 × 128 mm**
GDTF fixture type	**CB54A359-3247-4F55-9164-3F5…**

Controls

Colour wheel · Dimmer · Movement speed · Gobos

Safety-relevant functions

Fixture reset

DMX modes

8 Channel	8 ch
10 Channel	10 ch

8 Channel

8 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Tilt	128	
3	Position MSpeed	0	
4	Color Wheel	0	0–15 Open (wheel slot 1) 16–31 Red (wheel slot 2) 32–47 Green (wheel slot 3) 48–63 Blue (wheel slot 4) 64–79 Yellow (wheel slot 5) 80–95 Magenta (wheel slot 6) 96–111 Cyan (wheel slot 7) 112–127 Orange (wheel slot 8) 128–255 Rotation Slow to Fast
5	Gobo	0	0–7 Open (wheel slot 1) 8–15 Gobo 1 (wheel slot 2) 16–23 Gobo 2 (wheel slot 3) 24–31 Gobo 3 (wheel slot 4) 32–39 Gobo 4 (wheel slot 5) 40–47 Gobo 5 (wheel slot 6) 48–55 Gobo 6 (wheel slot 7) 56–63 Gobo 7 (wheel slot 8) 64–127 Rotation Slow to Fast 128–143 No Function 144–159 Gobo 1 (wheel slot 2) 160–175 Gobo 2 (wheel slot 3) 176–191 Gobo 3 (wheel slot 4) 192–207 Gobo 4 (wheel slot 5) 208–223 Gobo 5 (wheel slot 6) 224–239 Gobo 6 (wheel slot 7) 240–255 Gobo 7 (wheel slot 8)
6	Dimmer	0	0–254 Closed 255–255 Open
7	Shutter1Strobe	0	0–7 Off 8–127 Strobe Low to High Freq 128–255 Random Strobe
8	Function	0	0–93 No function 94–94 Reset Settings 95–95 Factory Settings 96–255 Sound Control

10 Channel

10 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Color Wheel	0	0–15 Open (wheel slot 1) 16–31 Red (wheel slot 2) 32–47 Green (wheel slot 3) 48–63 Blue (wheel slot 4) 64–79 Yellow (wheel slot 5) 80–95 Magenta (wheel slot 6) 96–111 Cyan (wheel slot 7) 112–127 Orange (wheel slot 8) 128–255 Rotation Slow to Fast

10 Channel (continued)

Ch	Function	Default	DMX values
7	Gobo	0	0–7 Open (wheel slot 1) 8–15 Gobo 1 (wheel slot 2) 16–23 Gobo 2 (wheel slot 3) 24–31 Gobo 3 (wheel slot 4) 32–39 Gobo 4 (wheel slot 5) 40–47 Gobo 5 (wheel slot 6) 48–55 Gobo 6 (wheel slot 7) 56–63 Gobo 7 (wheel slot 8) 64–127 Rotation Slow to Fast 128–143 No Function 144–159 Gobo 1 (wheel slot 2) 160–175 Gobo 2 (wheel slot 3) 176–191 Gobo 3 (wheel slot 4) 192–207 Gobo 4 (wheel slot 5) 208–223 Gobo 5 (wheel slot 6) 224–239 Gobo 6 (wheel slot 7) 240–255 Gobo 7 (wheel slot 8)
8	Dimmer	0	0–254 Closed 255–255 Open
9	Shutter1Strobe	0	0–7 Off 8–127 Strobe Low to High Freq 128–255 Random Strobe
10	Function	0	0–93 No function 94–94 Reset Settings 95–95 Factory Settings 96–255 Sound Control