
Showtec

Showtec Octostrip MK II 100cm

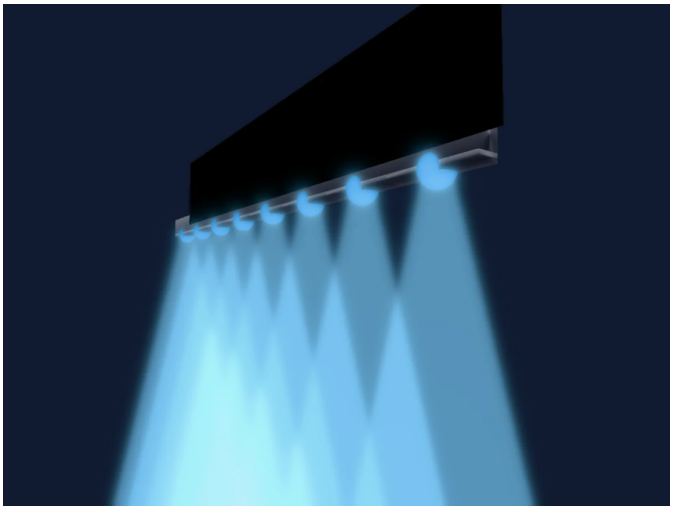

Manufacturer	**Showtec**
Type	**LED bar**
DMX modes	**12**
DMX footprint	**6, 8, 24, 40, 62, 84, 106, 128, 150, 172, 194 channels**
Beam angle	**25°**
Heads / cells	**8**
Size (W × H × D)	**1025 × 40 × 30 mm**
GDTF fixture type	**DAF0E297-88FF-4386-9F58-3B7…**

Controls

RGB colour mixing · Colour wheel · Strobe · Dimmer · Pixel control

DMX modes

6ch mode	6 ch
8ch mode	8 ch
192ch mode (single Strip)	24 ch
24ch mode	24 ch
208ch mode (Strip 1)	40 ch
208ch mode (Strip 2)	62 ch
208ch mode (Strip 3)	84 ch
208ch mode (Strip 4)	106 ch
208ch mode (Strip 5)	128 ch
208ch mode (Strip 6)	150 ch
208ch mode (Strip 7)	172 ch
208ch mode (Strip 8)	194 ch

6ch mode

6 channels

Ch	Function	Default	DMX values
1	Color Wheel	0	0–5 Open (wheel slot 1) 6–11 Color 1 (wheel slot 2) 12–17 Color 2 (wheel slot 3) 18–23 Color 3 (wheel slot 4) 24–29 Color 4 (wheel slot 5) 30–35 Color 5 (wheel slot 6) 36–41 Color 6 (wheel slot 7) 42–47 Color 7 (wheel slot 8) 48–53 Color 8 (wheel slot 9) 54–59 Color 9 (wheel slot 10) 60–65 Color 10 (wheel slot 11) 66–71 Color 11 (wheel slot 12) 72–77 Color 12 (wheel slot 13) 78–83 Color 13 (wheel slot 14) 84–89 Color 14 (wheel slot 15) 90–95 Color 15 (wheel slot 16) 96–101 Color 16 (wheel slot 17) 102–107 Color 17 (wheel slot 18) 108–113 Color 18 (wheel slot 19) 114–119 Color 19 (wheel slot 20) 120–125 Color 20 (wheel slot 21) 126–131 Color 21 (wheel slot 22) 132–137 Color 22 (wheel slot 23) 138–143 Color 23 (wheel slot 24) 144–149 Color 24 (wheel slot 25) 150–155 Color 25 (wheel slot 26) 156–161 Color 26 (wheel slot 27) 162–167 Color 27 (wheel slot 28) 168–173 Color 28 (wheel slot 29) 174–179 Color 29 (wheel slot 30) 180–185 Color 30 (wheel slot 31) 186–191 Color 31 (wheel slot 32) 192–197 Color 32 (wheel slot 33) 198–203 Color 33 (wheel slot 34) 204–209 Color 34 (wheel slot 35) 210–215 Color 35 (wheel slot 36) 216–221 Color 36 (wheel slot 37) 222–227 Color 37 (wheel slot 38) 228–233 Color 38 (wheel slot 39) 234–255 Color 39 (wheel slot 40)
2	Red	0	
3	Green	0	
4	Blue	0	
5	Shutter / Strobe	0	0–4 Open 5–254 ShutterStrobe · Min 0.1–19.9 Hz 255–255 ShutterStrobe · Max 20 Hz
6	Color Control	0	0–0 Audiosensity Off 1–254 Audiosensity Low 255–255 Audiosensity High

8ch mode

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–4 Open 5–254 ShutterStrobe · Min 0.1–19.9 Hz 255–255 ShutterStrobe · Max 20 Hz

8ch mode (continued)

Ch	Function	Default	DMX values
3	Custom Color	0	0–10 No Function 11–22 Programm 1 23–34 Programm 2 35–46 Programm 3 47–58 Programm 4 59–70 Programm 5 71–82 Programm 6 83–94 Programm 7 95–106 Programm 8 107–118 Programm 9 119–130 Programm 10 131–142 Programm 11 143–154 Programm 12 155–166 Programm 13 167–178 Programm 14 179–190 Programm 15 191–202 Programm 16 203–214 Programm 17 215–226 Programm 18 227–238 Programm 19 239–250 Programm 20 251–255 Music Control
4	Color Control	0	0–0 Audiosensity Off 1–254 Audiosensity Low 255–255 Audiosensity High

8ch mode (continued)

Ch	Function	Default	DMX values
5	Color Wheel	0	0–5 Open (wheel slot 1) 6–11 Color 1 (wheel slot 2) 12–17 Color 2 (wheel slot 3) 18–23 Color 3 (wheel slot 4) 24–29 Color 4 (wheel slot 5) 30–35 Color 5 (wheel slot 6) 36–41 Color 6 (wheel slot 7) 42–47 Color 7 (wheel slot 8) 48–53 Color 8 (wheel slot 9) 54–59 Color 9 (wheel slot 10) 60–65 Color 10 (wheel slot 11) 66–71 Color 11 (wheel slot 12) 72–77 Color 12 (wheel slot 13) 78–83 Color 13 (wheel slot 14) 84–89 Color 14 (wheel slot 15) 90–95 Color 15 (wheel slot 16) 96–101 Color 16 (wheel slot 17) 102–107 Color 17 (wheel slot 18) 108–113 Color 18 (wheel slot 19) 114–119 Color 19 (wheel slot 20) 120–125 Color 20 (wheel slot 21) 126–131 Color 21 (wheel slot 22) 132–137 Color 22 (wheel slot 23) 138–143 Color 23 (wheel slot 24) 144–149 Color 24 (wheel slot 25) 150–155 Color 25 (wheel slot 26) 156–161 Color 26 (wheel slot 27) 162–167 Color 27 (wheel slot 28) 168–173 Color 28 (wheel slot 29) 174–179 Color 29 (wheel slot 30) 180–185 Color 30 (wheel slot 31) 186–191 Color 31 (wheel slot 32) 192–197 Color 32 (wheel slot 33) 198–203 Color 33 (wheel slot 34) 204–209 Color 34 (wheel slot 35) 210–215 Color 35 (wheel slot 36) 216–221 Color 36 (wheel slot 37) 222–227 Color 37 (wheel slot 38) 228–233 Color 38 (wheel slot 39) 234–255 Color 39 (wheel slot 40)
6	Red	0	
7	Green	0	
8	Blue	0	

192ch mode (single Strip)

24 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Red	255	
5	Green	255	
6	Blue	255	
7	Red	255	
8	Green	255	
9	Blue	255	
10	Red	255	

192ch mode (single Strip) (continued)

Ch	Function	Default	DMX values
11	Green	255	
12	Blue	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	Red	255	
17	Green	255	
18	Blue	255	
19	Red	255	
20	Green	255	
21	Blue	255	
22	Red	255	
23	Green	255	
24	Blue	255	

24ch mode

24 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Red	255	
5	Green	255	
6	Blue	255	
7	Red	255	
8	Green	255	
9	Blue	255	
10	Red	255	
11	Green	255	
12	Blue	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	Red	255	
17	Green	255	
18	Blue	255	
19	Red	255	
20	Green	255	
21	Blue	255	
22	Red	255	
23	Green	255	
24	Blue	255	

208ch mode (Strip 1)

40 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–253 Closed 254–255 Open
2	Shutter / Strobe	0	0–4 Open 5–254 ShutterStrobe · Min 0.1–19.9 Hz 255–255 ShutterStrobe · Max 20 Hz
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Red	255	
18	Green	255	
19	Blue	255	
20	Red	255	
21	Green	255	
22	Blue	255	
23	Red	255	
24	Green	255	
25	Blue	255	
26	Red	255	
27	Green	255	
28	Blue	255	
29	Red	255	
30	Green	255	
31	Blue	255	
32	Red	255	
33	Green	255	
34	Blue	255	
35	Red	255	
36	Green	255	
37	Blue	255	
38	Red	255	
39	Green	255	
40	Blue	255	

208ch mode (Strip 2)

62 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–253 Closed 254–255 Open
2	Shutter / Strobe	0	0–4 Open 5–254 ShutterStrobe · Min 0.1–19.9 Hz 255–255 ShutterStrobe · Max 20 Hz
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Red	255	
40	Green	255	
41	Blue	255	
42	Red	255	
43	Green	255	

208ch mode (Strip 2) (continued)

Ch	Function	Default	DMX values
44	Blue	255	
45	Red	255	
46	Green	255	
47	Blue	255	
48	Red	255	
49	Green	255	
50	Blue	255	
51	Red	255	
52	Green	255	
53	Blue	255	
54	Red	255	
55	Green	255	
56	Blue	255	
57	Red	255	
58	Green	255	
59	Blue	255	
60	Red	255	
61	Green	255	
62	Blue	255	

208ch mode (Strip 3)

84 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–4 Open 5–254 ShutterStrobe · Min 0.1–19.9 Hz 255–255 ShutterStrobe · Max 20 Hz
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	

208ch mode (Strip 3) (continued)

Ch	Function	Default	DMX values
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Red	255	
62	Green	255	
63	Blue	255	
64	Red	255	
65	Green	255	
66	Blue	255	

208ch mode (Strip 3) (continued)

Ch	Function	Default	DMX values
67	Red	255	
68	Green	255	
69	Blue	255	
70	Red	255	
71	Green	255	
72	Blue	255	
73	Red	255	
74	Green	255	
75	Blue	255	
76	Red	255	
77	Green	255	
78	Blue	255	
79	Red	255	
80	Green	255	
81	Blue	255	
82	Red	255	
83	Green	255	
84	Blue	255	

208ch mode (Strip 4)

106 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–4 Open 5–254 ShutterStrobe · Min 0.1–19.9 Hz 255–255 ShutterStrobe · Max 20 Hz
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	

208ch mode (Strip 4) (continued)

Ch	Function	Default	DMX values
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	

208ch mode (Strip 4) (continued)

Ch	Function	Default	DMX values
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Red	255	
84	Green	255	
85	Blue	255	
86	Red	255	
87	Green	255	
88	Blue	255	
89	Red	255	
90	Green	255	
91	Blue	255	
92	Red	255	
93	Green	255	
94	Blue	255	
95	Red	255	
96	Green	255	
97	Blue	255	
98	Red	255	
99	Green	255	
100	Blue	255	
101	Red	255	
102	Green	255	
103	Blue	255	
104	Red	255	
105	Green	255	
106	Blue	255	

208ch mode (Strip 5)

128 channels

Ch	Function	Default	DMX values
1	Dimmer	0	

208ch mode (Strip 5) (continued)

Ch	Function	Default	DMX values
2	Shutter / Strobe	0	0–4 Open 5–254 ShutterStrobe · Min 0.1–19.9 Hz 255–255 ShutterStrobe · Max 20 Hz
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	

208ch mode (Strip 5) (continued)

Ch	Function	Default	DMX values
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	

208ch mode (Strip 5) (continued)

Ch	Function	Default	DMX values
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Red	255	
106	Green	255	
107	Blue	255	
108	Red	255	
109	Green	255	
110	Blue	255	
111	Red	255	
112	Green	255	
113	Blue	255	
114	Red	255	
115	Green	255	
116	Blue	255	
117	Red	255	
118	Green	255	
119	Blue	255	
120	Red	255	
121	Green	255	
122	Blue	255	
123	Red	255	
124	Green	255	
125	Blue	255	
126	Red	255	
127	Green	255	
128	Blue	255	

208ch mode (Strip 6)

150 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–4 Open 5–254 ShutterStrobe · Min 0.1–19.9 Hz 255–255 ShutterStrobe · Max 20 Hz

208ch mode (Strip 6) (continued)

Ch	Function	Default	DMX values
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	

208ch mode (Strip 6) (continued)

Ch	Function	Default	DMX values
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	

208ch mode (Strip 6) (continued)

Ch	Function	Default	DMX values
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Red	255	
128	Green	255	
129	Blue	255	
130	Red	255	
131	Green	255	
132	Blue	255	
133	Red	255	
134	Green	255	
135	Blue	255	
136	Red	255	
137	Green	255	

208ch mode (Strip 6) (continued)

Ch	Function	Default	DMX values
138	Blue	255	
139	Red	255	
140	Green	255	
141	Blue	255	
142	Red	255	
143	Green	255	
144	Blue	255	
145	Red	255	
146	Green	255	
147	Blue	255	
148	Red	255	
149	Green	255	
150	Blue	255	

208ch mode (Strip 7)

172 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–4 Open 5–254 ShutterStrobe · Min 0.1–19.9 Hz 255–255 ShutterStrobe · Max 20 Hz
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	

208ch mode (Strip 7) (continued)

Ch	Function	Default	DMX values
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	

208ch mode (Strip 7) (continued)

Ch	Function	Default	DMX values
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	

208ch mode (Strip 7) (continued)

Ch	Function	Default	DMX values
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Red	255	
150	Green	255	
151	Blue	255	
152	Red	255	
153	Green	255	
154	Blue	255	
155	Red	255	
156	Green	255	
157	Blue	255	
158	Red	255	
159	Green	255	
160	Blue	255	
161	Red	255	
162	Green	255	

208ch mode (Strip 7) (continued)

Ch	Function	Default	DMX values
163	Blue	255	
164	Red	255	
165	Green	255	
166	Blue	255	
167	Red	255	
168	Green	255	
169	Blue	255	
170	Red	255	
171	Green	255	
172	Blue	255	

208ch mode (Strip 8)

194 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–4 Open 5–254 ShutterStrobe · Min 0.1–19.9 Hz 255–255 ShutterStrobe · Max 20 Hz
3	Reserved 3	0	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Reserved 25	0	
26	Reserved 26	0	
27	Reserved 27	0	
28	Reserved 28	0	
29	Reserved 29	0	
30	Reserved 30	0	

208ch mode (Strip 8) (continued)

Ch	Function	Default	DMX values
31	Reserved 31	0	
32	Reserved 32	0	
33	Reserved 33	0	
34	Reserved 34	0	
35	Reserved 35	0	
36	Reserved 36	0	
37	Reserved 37	0	
38	Reserved 38	0	
39	Reserved 39	0	
40	Reserved 40	0	
41	Reserved 41	0	
42	Reserved 42	0	
43	Reserved 43	0	
44	Reserved 44	0	
45	Reserved 45	0	
46	Reserved 46	0	
47	Reserved 47	0	
48	Reserved 48	0	
49	Reserved 49	0	
50	Reserved 50	0	
51	Reserved 51	0	
52	Reserved 52	0	
53	Reserved 53	0	
54	Reserved 54	0	
55	Reserved 55	0	
56	Reserved 56	0	
57	Reserved 57	0	
58	Reserved 58	0	
59	Reserved 59	0	
60	Reserved 60	0	
61	Reserved 61	0	
62	Reserved 62	0	
63	Reserved 63	0	
64	Reserved 64	0	
65	Reserved 65	0	
66	Reserved 66	0	
67	Reserved 67	0	
68	Reserved 68	0	
69	Reserved 69	0	
70	Reserved 70	0	
71	Reserved 71	0	
72	Reserved 72	0	
73	Reserved 73	0	
74	Reserved 74	0	
75	Reserved 75	0	

208ch mode (Strip 8) (continued)

Ch	Function	Default	DMX values
76	Reserved 76	0	
77	Reserved 77	0	
78	Reserved 78	0	
79	Reserved 79	0	
80	Reserved 80	0	
81	Reserved 81	0	
82	Reserved 82	0	
83	Reserved 83	0	
84	Reserved 84	0	
85	Reserved 85	0	
86	Reserved 86	0	
87	Reserved 87	0	
88	Reserved 88	0	
89	Reserved 89	0	
90	Reserved 90	0	
91	Reserved 91	0	
92	Reserved 92	0	
93	Reserved 93	0	
94	Reserved 94	0	
95	Reserved 95	0	
96	Reserved 96	0	
97	Reserved 97	0	
98	Reserved 98	0	
99	Reserved 99	0	
100	Reserved 100	0	
101	Reserved 101	0	
102	Reserved 102	0	
103	Reserved 103	0	
104	Reserved 104	0	
105	Reserved 105	0	
106	Reserved 106	0	
107	Reserved 107	0	
108	Reserved 108	0	
109	Reserved 109	0	
110	Reserved 110	0	
111	Reserved 111	0	
112	Reserved 112	0	
113	Reserved 113	0	
114	Reserved 114	0	
115	Reserved 115	0	
116	Reserved 116	0	
117	Reserved 117	0	
118	Reserved 118	0	
119	Reserved 119	0	
120	Reserved 120	0	

208ch mode (Strip 8) (continued)

Ch	Function	Default	DMX values
121	Reserved 121	0	
122	Reserved 122	0	
123	Reserved 123	0	
124	Reserved 124	0	
125	Reserved 125	0	
126	Reserved 126	0	
127	Reserved 127	0	
128	Reserved 128	0	
129	Reserved 129	0	
130	Reserved 130	0	
131	Reserved 131	0	
132	Reserved 132	0	
133	Reserved 133	0	
134	Reserved 134	0	
135	Reserved 135	0	
136	Reserved 136	0	
137	Reserved 137	0	
138	Reserved 138	0	
139	Reserved 139	0	
140	Reserved 140	0	
141	Reserved 141	0	
142	Reserved 142	0	
143	Reserved 143	0	
144	Reserved 144	0	
145	Reserved 145	0	
146	Reserved 146	0	
147	Reserved 147	0	
148	Reserved 148	0	
149	Reserved 149	0	
150	Reserved 150	0	
151	Reserved 151	0	
152	Reserved 152	0	
153	Reserved 153	0	
154	Reserved 154	0	
155	Reserved 155	0	
156	Reserved 156	0	
157	Reserved 157	0	
158	Reserved 158	0	
159	Reserved 159	0	
160	Reserved 160	0	
161	Reserved 161	0	
162	Reserved 162	0	
163	Reserved 163	0	
164	Reserved 164	0	
165	Reserved 165	0	

208ch mode (Strip 8) (continued)

Ch	Function	Default	DMX values
166	Reserved 166	0	
167	Reserved 167	0	
168	Reserved 168	0	
169	Reserved 169	0	
170	Reserved 170	0	
171	Red	255	
172	Green	255	
173	Blue	255	
174	Red	255	
175	Green	255	
176	Blue	255	
177	Red	255	
178	Green	255	
179	Blue	255	
180	Red	255	
181	Green	255	
182	Blue	255	
183	Red	255	
184	Green	255	
185	Blue	255	
186	Red	255	
187	Green	255	
188	Blue	255	
189	Red	255	
190	Green	255	
191	Blue	255	
192	Red	255	
193	Green	255	
194	Blue	255	