
Snow Lighting

SnowARC

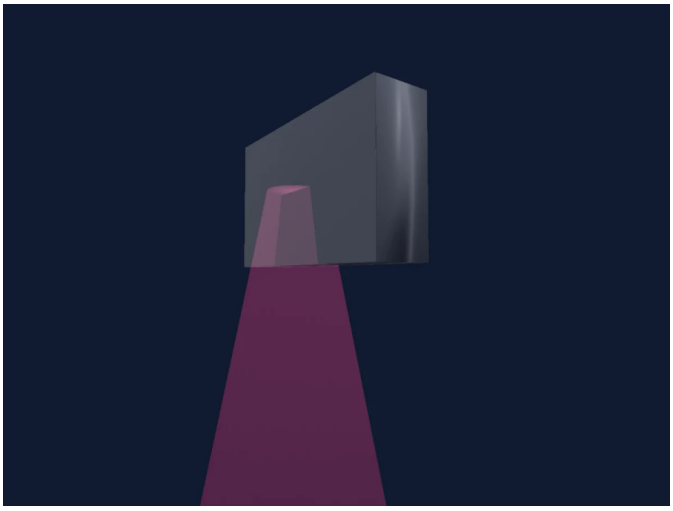

Manufacturer	**Snow Lighting**
Type	**PAR**
DMX modes	**4**
DMX footprint	**4, 6, 9, 25 channels**
Beam angle	**25°**
Size (W × H × D)	**532 × 320 × 122 mm**
GDTF fixture type	**969E8D57-6F28-4E49-9CB8-D7…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Dimmer

DMX modes

4 CH Mode	4 ch
6 CH Mode	6 ch
9 CH Mode	9 ch
25 CH Mode	25 ch

4 CH Mode

4 channels

Ch	Function	Default	DMX values
1	Color RGBRed	0	
2	Color RGBGreen	0	
3	Color RGBBlue	0	
4	White	0	

6 CH Mode

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	0	
6	Shutter1Strobe	0	0–10 Shutter Open 11–255 Strobe speed

9 CH Mode

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Color RGBRed	0	
3	Color RGBGreen	0	
4	Color RGBBlue	0	
5	White	0	
6	Color Wheel	0	1–15 No Color 16–31 Color 1 32–47 Color 2 48–63 Color 3 64–79 Color 4 80–95 Color 5 96–111 Color 6 112–127 Color 7 128–143 Color 8 144–159 Color 9 160–175 Color 10 176–191 Color 11 192–207 Color 12 208–223 Color 13 224–239 Color 14 240–255 Color 15

9 CH Mode (continued)

Ch	Function	Default	DMX values
7	Color Macro1	0	0–15 No function 16–31 Body change 1 32–47 Body change 2 48–63 Body change 3 64–79 Body change 4 80–95 Body change 5 96–111 Segment change 1 112–127 Segment change 2 128–143 Segment change 3 144–159 Segment change 4 160–175 Segment change 5 176–191 Segment change 6 192–207 Segment change 7 208–223 Segment change 8 224–239 Segment change 9 240–255 Segment change 10
8	Color Macro1Rate	0	
9	Shutter1Strobe	0	0–10 Shutter Open 11–255 Strobe speed

25 CH Mode

25 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Color RGBRed	0	
3	Color RGBGreen	0	
4	Color RGBBlue	0	
5	White	0	
6	Color RGBRed	0	
7	Color RGBGreen	0	
8	Color RGBBlue	0	
9	White	0	
10	Color RGBRed	0	
11	Color RGBGreen	0	
12	Color RGBBlue	0	
13	White	0	
14	Color RGBRed	0	
15	Color RGBGreen	0	
16	Color RGBBlue	0	
17	White	0	
18	Color RGBRed	0	
19	Color RGBGreen	0	
20	Color RGBBlue	0	
21	White	0	

25 CH Mode (continued)

Ch	Function	Default	DMX values
22	Color Wheel	0	1–15 No Color 16–31 Color 1 32–47 Color 2 48–63 Color 3 64–79 Color 4 80–95 Color 5 96–111 Color 6 112–127 Color 7 128–143 Color 8 144–159 Color 9 160–175 Color 10 176–191 Color 11 192–207 Color 12 208–223 Color 13 224–239 Color 14 240–255 Color 15
23	Color Macro1	0	0–15 No function 16–31 Body change 1 32–47 Body change 2 48–63 Body change 3 64–79 Body change 4 80–95 Body change 5 96–111 Segment change 1 112–127 Segment change 2 128–143 Segment change 3 144–159 Segment change 4 160–175 Segment change 5 176–191 Segment change 6 192–207 Segment change 7 208–223 Segment change 8 224–239 Segment change 9 240–255 Segment change 10
24	Color Macro1Rate	0	
25	Shutter1Strobe	0	0–10 Shutter Open 11–255 Strobe speed