
StairVille

Wild Wash 132 RGB

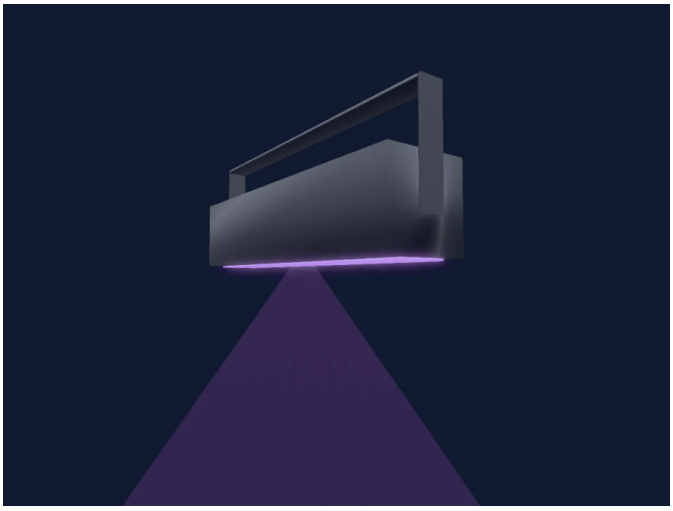

Manufacturer	**StairVille**
Type	**PAR**
DMX modes	**8**
DMX footprint	**1, 2, 3, 4, 6 channels**
Beam angle	**70°**
Size (W × H × D)	**316 × 4 × 20 mm**
GDTF fixture type	**841BA86F-5055-4A36-90BB-66…**

Controls

RGB colour mixing · Colour wheel · Strobe · Dimmer

DMX modes

1Ch	1 ch
2Ch1	2 ch
2Ch2	2 ch
3Ch1	3 ch
3Ch2	3 ch
3Ch3	3 ch
4Ch	4 ch
6CH	6 ch

1Ch

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–10 LED Off 11–254 Slow 255–255 Fast

2Ch1

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Color Effects1	0	0–5 LED Off 6–13 Red 14–21 Amber 22–29 Warm Yellow 30–37 Yellow 38–45 Green 46–53 Turquoise 54–61 Cyan 62–69 Blue 70–77 Lavender 78–85 Mauve 86–93 Magenta 94–101 Pink 102–109 Warm White 110–117 White 118–125 Cold White 126–128 Ending Colour Change 129–192 Col Switch 193–255 Col Fade

2Ch2

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–5 Open 6–10 Closed 11–249 Min Strobe 250–250 Max Strobe 251–255 Open

3Ch1

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–5 Open 6–10 Closed 11–249 Min Strobe 250–250 Max Strobe 251–255 Open
3	Strobe Duration	0	0–254 Min Duration 255–255 Max Duration

3Ch2

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–5 Open 6–10 Closed 11–249 Min Strobe 250–250 Max Strobe 251–255 Open
3	Color Effects1	0	0–5 LED Off 6–13 Red 14–21 Amber 22–29 Warm Yellow 30–37 Yellow 38–45 Green 46–53 Turquoise 54–61 Cyan 62–69 Blue 70–77 Lavender 78–85 Mauve 86–93 Magenta 94–101 Pink 102–109 Warm White 110–117 White 118–125 Cold White 126–128 Ending Colour Change 129–192 Col Switch 193–255 Col Fade

3Ch3

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	

4Ch

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–5 Open 6–10 Closed 11–32 Min Rand Pulse 33–33 Max Rand Pulse 34–55 Min Rand Pulse Open 56–56 Max Rand Puse Closed 57–78 Min Rand Pulse Close 79–79 Max Rand Pulse Closed 80–101 Random · Min Rand 0–14.3 Hz 102–102 Random · Max Rand 15 Hz 103–126 Interrupt strobe · Min Interrupt 0–28.8 Hz 127–127 Interrupt strobe · Max Interrupt 30 Hz 128–249 Min Strobe 250–250 Max Strobe 251–255 Open

4Ch (continued)

Ch	Function	Default	DMX values
3	Color Effects1	0	0–5 LED Off 6–13 Red 14–21 Amber 22–29 Warm Yellow 30–37 Yellow 38–45 Green 46–53 Turquoise 54–61 Cyan 62–69 Blue 70–77 Lavender 78–85 Mauve 86–93 Magenta 94–101 Pink 102–109 Warm White 110–117 White 118–125 Cold White 126–128 Ending Colour Change 129–192 Col Switch 193–255 Col Fade
4	Control1	0	0–5 Sound Off 6–254 Min Sound 255–255 Max Sound

6CH

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–5 Open 6–10 Closed 11–32 Min Rand Pulse 33–33 Max Rand Pulse 34–55 Min Rand Pulse Open 56–56 Max Rand Puse Closed 57–78 Min Rand Pulse Close 79–79 Max Rand Pulse Closed 80–101 Random · Min Rand 0–14.3 Hz 102–102 Random · Max Rand 15 Hz 103–126 Interrupt strobe · Min Interrupt 0–28.8 Hz 127–127 Interrupt strobe · Max Interrupt 30 Hz 128–249 Min Strobe 250–250 Max Strobe 251–255 Open
3	Red	255	
4	Green	255	
5	Blue	255	
6	Control1	0	0–5 Sound Off 6–254 Min Sound 255–255 Max Sound