
Terbly

C5

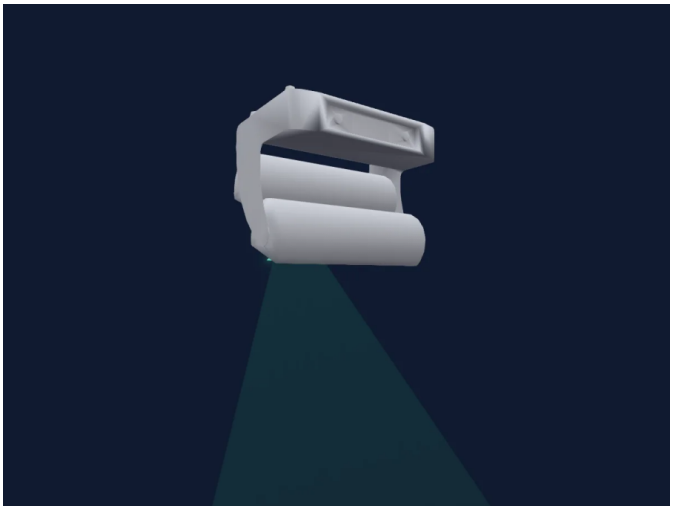

Manufacturer	**Terbly**
Type	**Effect light**
DMX modes	**3**
DMX footprint	**12, 20, 28 channels**
Beam angle	**45°**
Heads / cells	**2**
Size (W × H × D)	**426 × 367 × 309 mm**
GDTF fixture type	**90670023-E19A-412D-9747-71…**

Controls

Extra LED colours · RGB colour mixing · Strobe · Dimmer · Pixel control

DMX modes

12Channel	12 ch
20Channel	20 ch
28Channel	28 ch

12Channel

12 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color RGBBlue	0	
5	Color RGBRed	0	
6	Color Add RY	0	
7	Color Add GC	0	
8	White	0	
9	Control1	0	0–0 No function 1–30 Program 1 31–60 Program 2 61–90 Program 3 91–120 Program 4 121–150 Program 5 151–180 Program 6 181–210 Program 7 211–255 Program 8
10	Shutter / Strobe	40	0–31 Closed 32–63 Open 64–94 min Strobe 95–95 max Strobe 96–127 Open 2 128–158 min Pulse 159–159 max Pulse 160–191 Open 3 192–222 Random · min Rnd 1–24.2 Hz 223–223 Random · max Rnd 25 Hz 224–255 Open 4
11	Dimmer	0	0–254 Closed 255–255 Open
12	Dimmer Curve	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default

20Channel

20 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color RGBBlue	0	
5	Color RGBRed	0	
6	Color Add RY	0	
7	Color Add GC	0	
8	White	0	
9	Red	255	
10	Green	255	
11	Blue	255	
12	Color RGBBlue	0	

20Channel (continued)

Ch	Function	Default	DMX values
13	Color RGBRed	0	
14	Color Add RY	0	
15	Color Add GC	0	
16	White	0	
17	Control1	0	0–0 No function 1–30 Program 1 31–60 Program 2 61–90 Program 3 91–120 Program 4 121–150 Program 5 151–180 Program 6 181–210 Program 7 211–255 Program 8
18	Shutter / Strobe	40	0–31 Closed 32–63 Open 64–94 min Strobe 95–95 max Strobe 96–127 Open 2 128–158 min Pulse 159–159 max Pulse 160–191 Open 3 192–222 Random · min Rnd 1–24.2 Hz 223–223 Random · max Rnd 25 Hz 224–255 Open 4
19	Dimmer	0	0–254 Closed 255–255 Open
20	Dimmer Curve	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default

28Channel

28 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color RGBBlue	0	
5	Color RGBRed	0	
6	Color Add RY	0	
7	Color Add GC	0	
8	White	0	
9	Red	0	
10	Green	0	
11	Blue	0	
12	Color RGBBlue	0	
13	Color RGBRed	0	
14	Color Add RY	0	
15	Color Add GC	0	
16	White	0	

28Channel (continued)

Ch	Function	Default	DMX values
17	Red	0	
18	Green	0	
19	Blue	0	
20	Color RGBBlue	0	
21	Color RGBRed	0	
22	Color Add RY	0	
23	Color Add GC	0	
24	White	0	
25	Control1	0	0–0 No function 1–30 Program 1 31–60 Program 2 61–90 Program 3 91–120 Program 4 121–150 Program 5 151–180 Program 6 181–210 Program 7 211–255 Program 8
26	Shutter / Strobe	40	0–31 Closed 32–63 Open 64–94 min Strobe 95–95 max Strobe 96–127 Open 2 128–158 min Pulse 159–159 max Pulse 160–191 Open 3 192–222 Random · min Rnd 1–24.2 Hz 223–223 Random · max Rnd 25 Hz 224–255 Open 4
27	Dimmer	0	0–254 Closed 255–255 Open
28	Dimmer Curve	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default