
UKing

ZQ02376 200W LED Moving Head Beam with LED halo v2

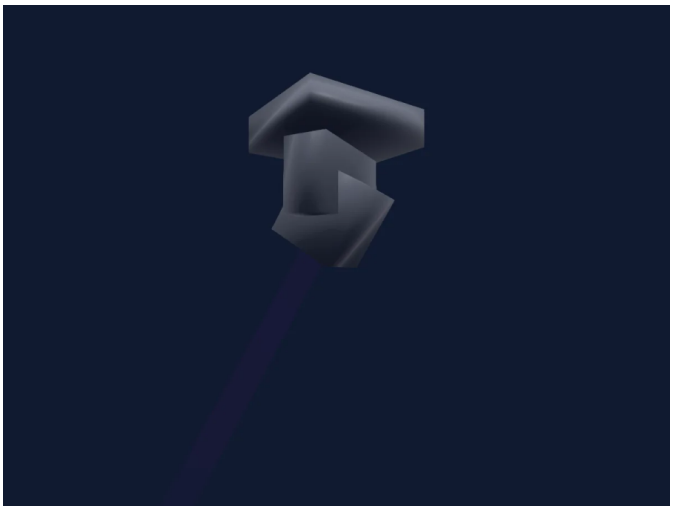

Manufacturer	**UKing**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**14 channels**
Beam angle	**2.3°**
Pan range	**540°**
Tilt range	**240°**
Size (W × H × D)	**130 × 150 × 130 mm**
GDTF fixture type	**32B41AC3-CA3F-44C8-96E7-E9…**

Controls

Prism · Colour wheel · Effect speed · Strobe · Dimmer · Pan and tilt · Movement speed · Gobos

Safety-relevant functions

Fixture reset · Strobe · Built-in effect programmes

DMX modes

14Ch — 14 ch

14Ch

14 channels

Ch	Function	Default	DMX values
1	Pan	128	0–127 Min CCW 128–254 Center 255–255 Max CW
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Dimmer	0	0–126 Closed 127–254 50% 255–255 Max
7	Shutter / Strobe	0	0–9 Strobe Disabled 10–255 Strobe effect slow to fast
8	Color Wheel	0	0–15 White (wheel slot 1) 16–31 Red (wheel slot 2) 32–47 Yellow (wheel slot 3) 48–63 Blue (wheel slot 4) 64–79 Green (wheel slot 5) 80–95 Magenta (wheel slot 6) 96–111 Orange (wheel slot 7) 112–127 Cyan (wheel slot 8) 128–255 CW slow to fast
9	Gobo	0	0–7 Open (wheel slot 1) 8–15 Flower 1 (wheel slot 2) 16–23 Tri Beam (wheel slot 3) 24–31 Jax (wheel slot 4) 32–39 Flower 2 (wheel slot 5) 40–47 Star (wheel slot 6) 48–55 Window (wheel slot 7) 56–127 Spot (wheel slot 8) 128–255 CW Fast to Slow
10	Prism	0	0–7 Prism OUT (wheel slot 1) 8–127 Prism IN (wheel slot 2) 128–255 CW rotation slow to fast
11	Effect 2	0	0–15 No program 16–127 Automatic operation 128–255 Sound-activated operation
12	Fixture Global Reset	0	0–239 Off 240–255 Reset - MUST HOLD FOR 5 SECONDS

14Ch (continued)

Ch	Function	Default	DMX values
13	Effect	0	0–4 Off 5–5 Red 6–9 Green 10–13 Blue 14–17 Yellow 18–21 Magenta 22–25 Cyan 26–29 White 30–30 Red Rotating 1 31–31 Green Rotating 1 32–32 Blue Rotating 1 33–33 Yellow Rotating 1 34–34 Magenta Rotating 1 35–35 Cyan Rotating 1 36–36 White Rotating 1 37–37 Red Rotating 2 38–38 Green Rotating 2 39–39 Blue Rotating 2 40–40 Yellow Rotating 2 41–41 Magenta Rotating 2 42–42 Cyan Rotating 2 43–43 White Rotating 2 44–44 Red Rotating 3 45–45 Green Rotating 3 46–46 Blue Rotating 3 47–47 Yellow Rotating 3 48–48 Magenta Rotating 3 49–49 Cyan Rotating 3 50–50 White Rotating 3 51–51 Red 1/4 52–52 Green 1/4 53–53 Blue 1/4 54–54 Yellow 1/4 55–55 Magenta 1/4 56–56 Cyan 1/4 57–57 White 1/4 58–58 Red 1/2 59–59 Green 1/2 60–60 Blue 1/2 61–61 Yellow 1/2 62–62 Magenta 1/2 63–63 Cyan 1/2 64–64 White 1/2 65–65 Red 3/4 66–66 Green 3/4 67–67 Blue 3/4 68–68 Yellow 3/4 69–69 Magenta 3/4 70–70 Cyan 3/4 71–71 White 3/4 72–72 Red Fill Unfill 73–73 Green Fill Unfill 74–74 Blue Fill Unfill 75–75 Yellow Fill Unfill 76–76 Magenta Fill Unfill 77–77 Cyan Fill Unfill 78–78 White Fill Unfill 79–79 Red Rotate 80–80 Green Rotate 81–81 Blue Rotate 82–82 Yellow Rotate 83–83 Magenta Rotate 84–84 Cyan Rotate 85–85 White Rotate

14Ch (continued)

Ch	Function	Default	DMX values
14	Effect Speed	0	0–0 Stop 1–255 Slow to fast