
UKing

ZQ02376 200W LED Moving Head Beam with LED halo v6

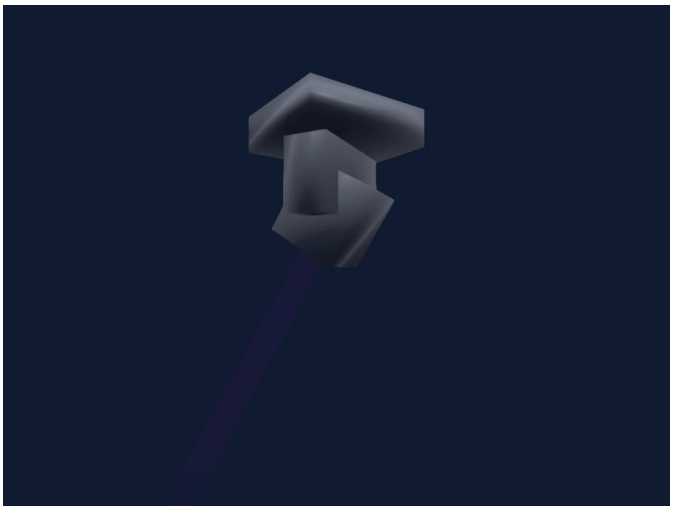

Manufacturer	**UKing**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**14 channels**
Beam angle	**2.3°**
Pan range	**540°**
Tilt range	**240°**
Size (W × H × D)	**130 × 150 × 130 mm**
GDTF fixture type	**39ABA1B9-6E08-4F31-88EE-E1…**

Controls

Prism · Colour wheel · Effect speed · Strobe · Dimmer · Pan and tilt · Movement speed · Gobos

Safety-relevant functions

Fixture reset · Strobe · Built-in effect programmes

DMX modes

14Ch — 14 ch

14Ch

14 channels

Ch	Function	Default	DMX values
1	Pan	128	0–127 Min CCW 128–254 Center 255–255 Max CW
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Dimmer	0	0–126 Closed 127–254 50% 255–255 Max
7	Shutter / Strobe	0	0–9 Strobe Disabled 10–255 Strobe effect slow to fast
8	Color Wheel	0	0–15 White (wheel slot 1) 16–31 Red (wheel slot 2) 32–47 Yellow (wheel slot 3) 48–63 Blue (wheel slot 4) 64–79 Green (wheel slot 5) 80–95 Magenta (wheel slot 6) 96–111 Orange (wheel slot 7) 112–127 Cyan (wheel slot 8) 128–255 CW slow to fast
9	Gobo	0	0–7 Open (wheel slot 1) 8–15 Flower 1 (wheel slot 2) 16–23 Tri Beam (wheel slot 3) 24–31 Jax (wheel slot 4) 32–39 Flower 2 (wheel slot 5) 40–47 Star (wheel slot 6) 48–55 Window (wheel slot 7) 56–127 Spot (wheel slot 8) 128–255 CW Fast to Slow
10	Prism	0	0–7 Prism OUT (wheel slot 1) 8–127 Prism IN (wheel slot 2) 128–255 CW rotation slow to fast
11	Effect 2	0	0–15 No program 16–127 Automatic operation 128–255 Sound-activated operation
12	Fixture Global Reset	0	0–239 Off 240–255 Reset - MUST HOLD FOR 5 SECONDS

14Ch (continued)

Ch	Function	Default	DMX values
13	Effect	0	0–4 Off 5–14 Red 15–23 Green 24–34 Blue 35–43 Yellow 44–54 Magenta 55–63 Cyan 64–75 White 76–76 Red Rotating 1 77–78 Green Rotating 1 79–80 Blue Rotating 1 81–82 Yellow Rotating 1 83–83 Magenta Rotating 1 84–86 Cyan Rotating 1 87–88 White Rotating 1 89–90 Red Rotating 2 91–92 Green Rotating 2 93–94 Blue Rotating 2 95–96 Yellow Rotating 2 97–97 Magenta Rotating 2 98–100 Cyan Rotating 2 101–102 White Rotating 2 103–104 Red Rotating 3 105–105 Green Rotating 3 106–108 Blue Rotating 3 109–110 Yellow Rotating 3 111–112 Magenta Rotating 3 113–114 Cyan Rotating 3 115–116 White Rotating 3 117–118 Red 1/4 119–119 Green 1/4 120–122 Blue 1/4 123–124 Yellow 1/4 125–126 Magenta 1/4 127–127 Cyan 1/4 128–129 White 1/4 130–131 Red 1/2 132–133 Green 1/2 134–136 Blue 1/2 137–137 Yellow 1/2 138–139 Magenta 1/2 140–141 Cyan 1/2 142–143 White 1/2 144–145 Red 3/4 146–147 Green 3/4 148–149 Blue 3/4 150–151 Yellow 3/4 152–153 Magenta 3/4 154–155 Cyan 3/4 156–157 White 3/4 158–159 Red Fill Unfill 160–161 Green Fill Unfill 162–163 Blue Fill Unfill 164–165 Yellow Fill Unfill 166–167 Magenta Fill Unfill 168–169 Cyan Fill Unfill 170–171 White Fill Unfill 172–173 Red Rotate 174–175 Green Rotate 176–177 Blue Rotate 178–179 Yellow Rotate 180–181 Magenta Rotate 182–183 Cyan Rotate 184–185 White Rotate

14Ch (continued)

Ch	Function	Default	DMX values
14	Effect Speed	0	0–0 Rate Off 1–255 Fast to Slow