
ACME

ACME ANIMA C (PANEL 36 RGB)

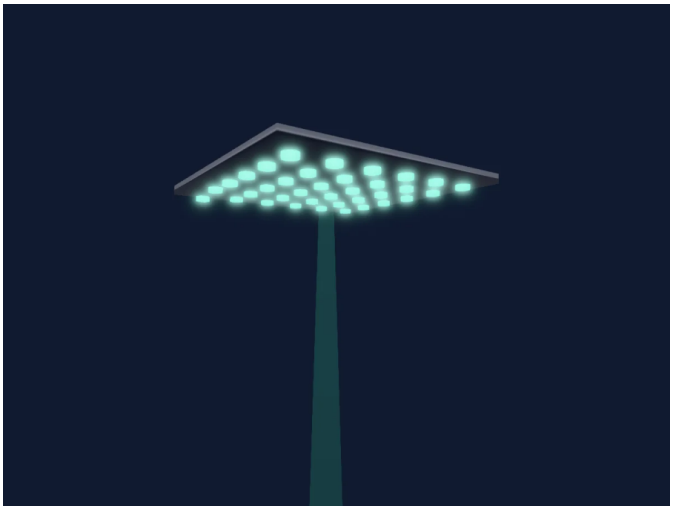

Manufacturer	**ACME**
Type	**PAR**
DMX modes	**5**
DMX footprint	**3, 11, 15, 44, 108 channels**
Beam angle	**4°**
Heads / cells	**36**
Size (W × H × D)	**500 × 20 × 500 mm**
GDTF fixture type	**B817E9F4-D720-4992-9CCB-1C…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer · Pixel control

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

Mode 4 3 DMX	3 ch
Mode 3 11DMX	11 ch
Mode 2 15 DMX	15 ch
Mode 5 44DMX	44 ch
Mode 1 108 DMX	108 ch

Mode 4 3 DMX

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	

Mode 3 11DMX

11 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Wheel	0	0–9 Open (wheel slot 1) 10–14 Color 1 (wheel slot 2) 15–19 Color 2 (wheel slot 3) 20–24 Color 3 (wheel slot 4) 25–29 Color 4 (wheel slot 5) 30–34 Color 5 (wheel slot 6) 35–39 Color 6 (wheel slot 7) 40–44 Color 7 (wheel slot 8) 45–49 Color 8 (wheel slot 9) 50–54 Color 9 (wheel slot 10) 55–59 Color 10 (wheel slot 11) 60–64 Color 11 (wheel slot 12) 65–69 Color 12 (wheel slot 13) 70–74 Color 13 (wheel slot 14) 75–79 Color 14 (wheel slot 15) 80–84 Color 15 (wheel slot 16) 85–89 Color 16 (wheel slot 17) 90–94 Color 17 (wheel slot 18) 95–99 Color 18 (wheel slot 19) 100–104 Color 19 (wheel slot 20) 105–109 Color 20 (wheel slot 21) 110–114 Color 21 (wheel slot 22) 115–119 Color 22 (wheel slot 23) 120–124 Color 23 (wheel slot 24) 125–129 Color 24 (wheel slot 25) 130–134 Color 25 (wheel slot 26) 135–139 Color 26 (wheel slot 27) 140–144 Color 27 (wheel slot 28) 145–149 Color 28 (wheel slot 29) 150–154 Color 29 (wheel slot 30) 155–159 Color 30 (wheel slot 31) 160–164 Color 31 (wheel slot 32) 165–169 Color 32 (wheel slot 33) 170–174 Color 33 (wheel slot 34) 175–179 Open 180–200 Max CW 201–201 Min CW 202–207 Stop 208–228 Min CCW 229–229 Max CCW 230–234 Open 1 235–239 Fast 240–244 Medium 245–249 Slow 250–255 Open 2

Mode 3 11DMX (continued)

Ch	Function	Default	DMX values
6	Effect Macro Mode	0	0–14 Blackout 15–47 Full On 48–95 Line Effect 96–135 Number 1 to 9 136–175 Letter A to Z 176–215 Letter a to z 216–255 Blackout 1
7	Effect Macro	0	
8	Shutter / Strobe	15	0–7 Closed 8–15 Open 16–130 min Strobe 131–131 max Strobe 132–139 Open 2 140–180 Min Pulse Close 181–181 Max Pulse Close 182–189 Open 3 190–230 Min Pulse Open 231–231 Max Pulse Open 232–239 Open 4 240–247 Strobe Ran 248–255 Open 5
9	Dimmer	0	
10	Dimmer Fine	0	Fine byte of Dimmer
11	Function	0	0–29 Null 30–39 Dimmer Curve Linear 40–49 Dimmer Curve Square Law 50–59 Dimmer Curve Inv SQ Law 60–69 Dimmer Curve S 70–179 Null 2 180–189 Fast 190–199 Smooth 200–255 Null

Mode 2 15 DMX

15 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Red	255	
5	Green	255	
6	Blue	255	
7	Red	255	
8	Green	255	
9	Blue	255	
10	C TO	0	

Mode 2 15 DMX (continued)

Ch	Function	Default	DMX values
11	Color Wheel	0	0–9 Open (wheel slot 1) 10–14 Color 1 (wheel slot 2) 15–19 Color 2 (wheel slot 3) 20–24 Color 3 (wheel slot 4) 25–29 Color 4 (wheel slot 5) 30–34 Color 5 (wheel slot 6) 35–39 Color 6 (wheel slot 7) 40–44 Color 7 (wheel slot 8) 45–49 Color 8 (wheel slot 9) 50–54 Color 9 (wheel slot 10) 55–59 Color 10 (wheel slot 11) 60–64 Color 11 (wheel slot 12) 65–69 Color 12 (wheel slot 13) 70–74 Color 13 (wheel slot 14) 75–79 Color 14 (wheel slot 15) 80–84 Color 15 (wheel slot 16) 85–89 Color 16 (wheel slot 17) 90–94 Color 17 (wheel slot 18) 95–99 Color 18 (wheel slot 19) 100–104 Color 19 (wheel slot 20) 105–109 Color 20 (wheel slot 21) 110–114 Color 21 (wheel slot 22) 115–119 Color 22 (wheel slot 23) 120–124 Color 23 (wheel slot 24) 125–129 Color 24 (wheel slot 25) 130–134 Color 25 (wheel slot 26) 135–139 Color 26 (wheel slot 27) 140–144 Color 27 (wheel slot 28) 145–149 Color 28 (wheel slot 29) 150–154 Color 29 (wheel slot 30) 155–159 Color 30 (wheel slot 31) 160–164 Color 31 (wheel slot 32) 165–169 Color 32 (wheel slot 33) 170–174 Color 33 (wheel slot 34) 175–179 Open 180–200 Max CW 201–201 Min CW 202–207 Stop 208–228 Min CCW 229–229 Max CCW 230–234 Open 1 235–239 Fast 240–244 Medium 245–249 Slow 250–255 Open 2
12	Shutter / Strobe	8	0–7 Closed 8–15 Open 16–130 min Strobe 131–131 max Strobe 132–139 Open 2 140–180 Min Pulse Close 181–181 Max Pulse Close 182–189 Open 3 190–230 Min Pulse Open 231–231 Max Pulse Open 232–239 Open 4 240–247 Strobe Ran 248–255 Open 5
13	Dimmer	0	
14	Dimmer Fine	0	Fine byte of Dimmer

Mode 2 15 DMX (continued)

Ch	Function	Default	DMX values
15	Function	0	0–29 Null 30–39 Dimmer Curve Linear 40–49 Dimmer Curve Square Law 50–59 Dimmer Curve Inv SQ Law 60–69 Dimmer Curve S 70–179 Null 2 180–189 Fast 190–199 Smooth 200–255 Null

Mode 5 44DMX

44 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Dimmer	0	
3	Dimmer	0	
4	Dimmer	0	
5	Dimmer	0	
6	Dimmer	0	
7	Dimmer	0	
8	Dimmer	0	
9	Dimmer	0	
10	Dimmer	0	
11	Dimmer	0	
12	Dimmer	0	
13	Dimmer	0	
14	Dimmer	0	
15	Dimmer	0	
16	Dimmer	0	
17	Dimmer	0	
18	Dimmer	0	
19	Dimmer	0	
20	Dimmer	0	
21	Dimmer	0	
22	Dimmer	0	
23	Dimmer	0	
24	Dimmer	0	
25	Dimmer	0	
26	Dimmer	0	
27	Dimmer	0	
28	Dimmer	0	
29	Dimmer	0	
30	Dimmer	0	
31	Dimmer	0	
32	Dimmer	0	
33	Dimmer	0	
34	Dimmer	0	
35	Dimmer	0	

Mode 5 44DMX (continued)

Ch	Function	Default	DMX values
36	Dimmer	0	
37	C TO	1	
38	Color Wheel	15	0–9 Open (wheel slot 1) 10–14 Color 1 (wheel slot 2) 15–19 Color 2 (wheel slot 3) 20–24 Color 3 (wheel slot 4) 25–29 Color 4 (wheel slot 5) 30–34 Color 5 (wheel slot 6) 35–39 Color 6 (wheel slot 7) 40–44 Color 7 (wheel slot 8) 45–49 Color 8 (wheel slot 9) 50–54 Color 9 (wheel slot 10) 55–59 Color 10 (wheel slot 11) 60–64 Color 11 (wheel slot 12) 65–69 Color 12 (wheel slot 13) 70–74 Color 13 (wheel slot 14) 75–79 Color 14 (wheel slot 15) 80–84 Color 15 (wheel slot 16) 85–89 Color 16 (wheel slot 17) 90–94 Color 17 (wheel slot 18) 95–99 Color 18 (wheel slot 19) 100–104 Color 19 (wheel slot 20) 105–109 Color 20 (wheel slot 21) 110–114 Color 21 (wheel slot 22) 115–119 Color 22 (wheel slot 23) 120–124 Color 23 (wheel slot 24) 125–129 Color 24 (wheel slot 25) 130–134 Color 25 (wheel slot 26) 135–139 Color 26 (wheel slot 27) 140–144 Color 27 (wheel slot 28) 145–149 Color 28 (wheel slot 29) 150–154 Color 29 (wheel slot 30) 155–159 Color 30 (wheel slot 31) 160–164 Color 31 (wheel slot 32) 165–169 Color 32 (wheel slot 33) 170–174 Color 33 (wheel slot 34) 175–179 Open 180–200 Max CW 201–201 Min CW 202–207 Stop 208–228 Min CCW 229–229 Max CCW 230–234 Open2 235–239 Open 1 240–244 Fast 245–254 Medium 255–255 Open3
39	Effect Macro Mode	0	0–14 Blackout 15–47 Full On 48–95 Line Effect 96–135 Number 1 to 9 136–175 Letter A to Z 176–215 Letter a to z 216–255 Blackout 1
40	Effect Macro	11	

Mode 5 44DMX (continued)

Ch	Function	Default	DMX values
41	Shutter / Strobe	15	0–7 Closed 8–15 Open 16–130 min Strobe 131–131 max Strobe 132–139 Open 2 140–180 Min Pulse Close 181–181 Max Pulse Close 182–189 Open 3 190–230 Min Pulse Open 231–231 Max Pulse Open 232–239 Open 4 240–247 Strobe Ran 248–255 Open 5
42	Dimmer	0	
43	Dimmer Fine	0	Fine byte of Dimmer
44	Function	0	0–29 Null 30–39 Dimmer Curve Linear 40–49 Dimmer Curve Square Law 50–59 Dimmer Curve Inv SQ Law 60–69 Dimmer Curve S 70–179 Null 2 180–189 Fast 190–199 Smooth 200–255 Null

Mode 1 108 DMX

108 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Red	255	
5	Green	255	
6	Blue	255	
7	Red	255	
8	Green	255	
9	Blue	255	
10	Red	255	
11	Green	255	
12	Blue	255	
13	Red	255	
14	Green	255	
15	Blue	255	
16	Red	255	
17	Green	255	
18	Blue	255	
19	Red	255	
20	Green	255	
21	Blue	255	
22	Red	255	
23	Green	255	

Mode 1 108 DMX (continued)

Ch	Function	Default	DMX values
24	Blue	255	
25	Red	255	
26	Green	255	
27	Blue	255	
28	Red	255	
29	Green	255	
30	Blue	255	
31	Red	255	
32	Green	255	
33	Blue	255	
34	Red	255	
35	Green	255	
36	Blue	255	
37	Red	255	
38	Green	255	
39	Blue	255	
40	Red	255	
41	Green	255	
42	Blue	255	
43	Red	255	
44	Green	255	
45	Blue	255	
46	Red	255	
47	Green	255	
48	Blue	255	
49	Red	255	
50	Green	255	
51	Blue	255	
52	Red	255	
53	Green	255	
54	Blue	255	
55	Red	255	
56	Green	255	
57	Blue	255	
58	Red	255	
59	Green	255	
60	Blue	255	
61	Red	255	
62	Green	255	
63	Blue	255	
64	Red	255	
65	Green	255	
66	Blue	255	
67	Red	255	
68	Green	255	

Mode 1 108 DMX (continued)

Ch	Function	Default	DMX values
69	Blue	255	
70	Red	255	
71	Green	255	
72	Blue	255	
73	Red	255	
74	Green	255	
75	Blue	255	
76	Red	255	
77	Green	255	
78	Blue	255	
79	Red	255	
80	Green	255	
81	Blue	255	
82	Red	255	
83	Green	255	
84	Blue	255	
85	Red	255	
86	Green	255	
87	Blue	255	
88	Red	255	
89	Green	255	
90	Blue	255	
91	Red	255	
92	Green	255	
93	Blue	255	
94	Red	255	
95	Green	255	
96	Blue	255	
97	Red	255	
98	Green	255	
99	Blue	255	
100	Red	255	
101	Green	255	
102	Blue	255	
103	Red	255	
104	Green	255	
105	Blue	255	
106	Red	255	
107	Green	255	
108	Blue	255	