
ACME

ACME EYEFLASH 2 RGB (BLINDER 2 RGB)

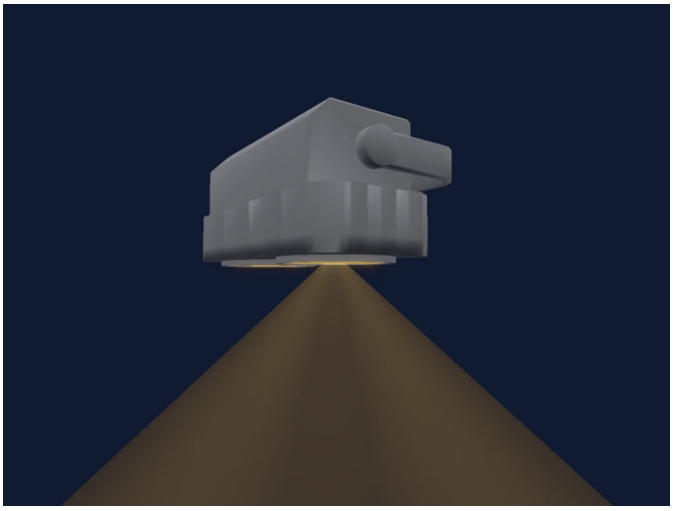

Manufacturer	**ACME**
Type	**Blinder**
DMX modes	**4**
DMX footprint	**4, 5, 7, 9 channels**
Beam angle	**96°**
Heads / cells	**2**
Size (W × H × D)	**305 × 145 × 192 mm**
GDTF fixture type	**1E077539-5BC3-486B-8156-36F…**

Controls

RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer · Pixel control

DMX modes

Mode 4 4 DMX	4 ch
Mode 1 5 DMX	5 ch
Mode 2 7 DMX	7 ch
Mode 3 9DMX	9 ch

Mode 4 4 DMX

4 channels

Ch	Function	Default	DMX values
1	Color Wheel	0	0–7 Color 1 (wheel slot 1) 8–15 Color 2 (wheel slot 2) 16–23 Color 3 (wheel slot 3) 24–31 Color 4 (wheel slot 4) 32–39 Color 5 (wheel slot 5) 40–47 Color 6 (wheel slot 6) 48–55 Color 7 (wheel slot 7) 56–63 Color 8 (wheel slot 8) 64–71 Color 9 (wheel slot 9) 72–79 Color 10 (wheel slot 10) 80–87 Color 11 (wheel slot 11) 88–95 Color 12 (wheel slot 12) 96–103 Color 13 (wheel slot 13) 104–111 Color 14 (wheel slot 14) 112–119 Color 15 (wheel slot 15) 120–127 Color 16 (wheel slot 16) 128–135 Color 17 (wheel slot 17) 136–143 Color 18 (wheel slot 18) 144–151 Color 19 (wheel slot 19) 152–159 Color 20 (wheel slot 20) 160–167 Color 21 (wheel slot 21) 168–175 Color 22 (wheel slot 22) 176–183 Color 23 (wheel slot 23) 184–191 Color 24 (wheel slot 24) 192–199 Color 25 (wheel slot 25) 200–207 Color 26 (wheel slot 26) 208–215 Color 27 (wheel slot 27) 216–223 Color 28 (wheel slot 28) 224–231 Color 29 (wheel slot 29) 232–239 Color 30 (wheel slot 30) 240–247 Color 31 (wheel slot 31) 248–255 Color 32 (wheel slot 32)
2	Saturation	0	
3	Dimmer	0	
4	C TO	0	

Mode 1 5 DMX

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Dimmer	0	
5	Shutter / Strobe	0	0–5 Open 1 6–122 min Strobe 123–123 max Strobe 124–127 Open2 128–185 Shutter Random 1 · Shutter Ran1 10–20 Hz 186–190 Open3 191–249 Shutter Random 2 · Shutter Ran2 10–20 Hz 250–255 Open4

Mode 2 7 DMX

7 channels

Ch	Function	Default	DMX values
1	Red	255	

Mode 2 7 DMX (continued)

Ch	Function	Default	DMX values
2	Green	255	
3	Blue	255	
4	Color Wheel	0	0–7 Open (wheel slot 1) 8–15 Color 1 (wheel slot 2) 16–22 Color 2 (wheel slot 3) 23–30 Color 3 (wheel slot 4) 31–37 Color 4 (wheel slot 5) 38–45 Color 5 (wheel slot 6) 46–52 Color 6 (wheel slot 7) 53–60 Color 7 (wheel slot 8) 61–67 Color 8 (wheel slot 9) 68–75 Color 9 (wheel slot 10) 76–82 Color 10 (wheel slot 11) 83–90 Color 11 (wheel slot 12) 91–97 Color 12 (wheel slot 13) 98–105 Color 13 (wheel slot 14) 106–112 Color 14 (wheel slot 15) 113–120 Color 15 (wheel slot 16) 121–127 Color 16 (wheel slot 17) 128–135 Color 17 (wheel slot 18) 136–142 Color 18 (wheel slot 19) 143–150 Color 19 (wheel slot 20) 151–157 Color 20 (wheel slot 21) 158–165 Color 21 (wheel slot 22) 166–172 Color 22 (wheel slot 23) 173–180 Color 23 (wheel slot 24) 181–187 Color 24 (wheel slot 25) 188–195 Color 25 (wheel slot 26) 196–202 Color 26 (wheel slot 27) 203–210 Color 27 (wheel slot 28) 211–217 Color 28 (wheel slot 29) 218–225 Color 29 (wheel slot 30) 226–232 Color 30 (wheel slot 31) 233–240 Color 31 (wheel slot 32) 241–247 Color 32 (wheel slot 33) 248–255 Color 33 (wheel slot 34)
5	Dimmer	0	
6	Dimmer Fine	0	Fine byte of Dimmer
7	Shutter / Strobe	0	0–5 Open 1 6–122 min Strobe 123–123 max Strobe 124–127 Open2 128–185 Shutter Random 1 · Shutter Ran 10–20 Hz 186–190 Open3 191–249 Shutter Random 2 · Shutter Ran2 10–20 Hz 250–255 Open4

Mode 3 9DMX

9 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Red	255	
5	Green	255	
6	Blue	255	
7	Dimmer	0	

Mode 3 9DMX (continued)

Ch	Function	Default	DMX values
8	Dimmer Fine	0	Fine byte of Dimmer
9	Shutter / Strobe	2	0–5 Open 6–122 min Strobe 123–123 max Strobe 124–127 Open2 128–185 Shutter Ran1 strobe 10–20 Hz 186–190 Open3 191–249 Shutter Ran2 strobe 10–20 Hz 250–255 Open4