
ACME

ACME PASODOBLE (PAR 12)

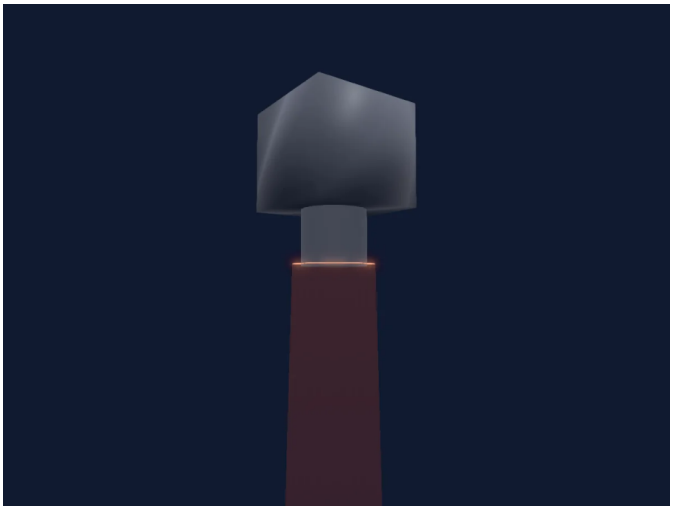

Manufacturer	**ACME**
Type	**PAR**
DMX modes	**4**
DMX footprint	**4, 5, 8, 10 channels**
Beam angle	**6°**
Size (W × H × D)	**212 × 186 × 205 mm**
GDTF fixture type	**3341C2B5-2833-4493-B67F-942…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Dimmer

Safety-relevant functions

Fixture reset

DMX modes

Mode4 4DMX	4 ch
Mode3 5DMX	5 ch
Mode2 8DMX	8 ch
Mode1 10DMX	10 ch

Mode4 4DMX

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	

Mode3 5DMX

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Shutter1Strobe	12	0–7 OFF 8–15 Open 16–130 min Strobe 131–131 max Strobe 132–139 Open 2 140–180 min Pulse Open 181–181 max Pulse Open 182–189 Open 3 190–230 min Pulse Close 231–231 max Pulse Close 232–239 Open 4 240–247 Strobe Ran 248–255 Open 5

Mode2 8DMX

8 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Shutter1Strobe	12	0–7 OFF 8–15 Open 16–130 min Strobe 131–131 max Strobe 132–139 Open 2 140–180 min Pulse Open 181–181 max Pulse Open 182–189 Open 3 190–230 min Pulse Close 231–231 max Pulse Close 232–239 Open 4 240–247 Strobe Ran 248–255 Open 5
6	Dimmer	0	
7	Dimmer Fine	0	Fine byte of Dimmer

Mode2 8DMX (continued)

Ch	Function	Default	DMX values
8	Function	0	0–29 No Feature 1 30–39 Dim Linear 40–49 Square Law 50–59 Inv SQ Law 60–69 S Curve 70–99 NoFeature 2 100–109 Frequency Setting 110–119 Frequency Disable 120–199 NoFeature 3 200–209 All Reset 210–219 Dim Fast 220–229 Dim Smooth 230–255 NoFeature 4

Mode1 10DMX

10 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Shutter1Strobe	12	0–7 OFF 8–15 Open 16–130 min Strobe 131–131 max Strobe 132–139 Open 2 140–180 min Pulse Open 181–181 max Pulse Open 182–189 Open 3 190–230 min Pulse Close 231–231 max Pulse Close 232–239 Open 4 240–247 Strobe Ran 248–255 Open 5
6	Dimmer	0	
7	Dimmer Fine	0	Fine byte of Dimmer
8	C TO	0	

Mode1 10DMX (continued)

Ch	Function	Default	DMX values
9	Color Wheel	0	0–9 Open (wheel slot 1) 10–14 Color 1 (wheel slot 2) 15–19 Color 2 (wheel slot 3) 20–24 Color 3 (wheel slot 4) 25–29 Color 4 (wheel slot 5) 30–34 Color 5 (wheel slot 6) 35–39 Color 6 (wheel slot 7) 40–44 Color 7 (wheel slot 8) 45–49 Color 8 (wheel slot 9) 50–54 Color 9 (wheel slot 10) 55–59 Color 10 (wheel slot 11) 60–64 Color 11 (wheel slot 12) 65–69 Color 12 (wheel slot 13) 70–74 Color 13 (wheel slot 14) 75–79 Color 14 (wheel slot 15) 80–84 Color 15 (wheel slot 16) 85–89 Color 16 (wheel slot 17) 90–94 Color 17 (wheel slot 18) 95–99 Color 18 (wheel slot 19) 100–104 Color 19 (wheel slot 20) 105–109 Color 20 (wheel slot 21) 110–114 Color 21 (wheel slot 22) 115–119 Color 22 (wheel slot 23) 120–124 Color 23 (wheel slot 24) 125–129 Color 24 (wheel slot 25) 130–134 Color 25 (wheel slot 26) 135–139 Color 26 (wheel slot 27) 140–144 Color 27 (wheel slot 28) 145–149 Color 28 (wheel slot 29) 150–154 Color 29 (wheel slot 30) 155–159 Color 30 (wheel slot 31) 160–164 Color 31 (wheel slot 32) 165–169 Color 32 (wheel slot 33) 170–174 Color 33 175–179 Open 1 180–189 >>> 190–200 >> 201–201 > 202–207 Stop 208–217 < 218–228 << 229–229 << 230–234 Open 2 235–239 Fast 240–244 Medium 245–249 Slow 250–255 Open 3
10	Function	0	0–29 No Feature 1 30–39 Dim Linear 40–49 Square Law 50–59 Inv SQ Law 60–69 S Curve 70–99 NoFeature 2 100–109 Frequency Setting 110–119 Frequency Disable 120–199 NoFeature 3 200–209 All Reset 210–219 Dim Fast 220–229 Dim Smooth 230–255 NoFeature 4