
ACME

# ACME STAGE BLINDER IP VW (BL-200 VW)

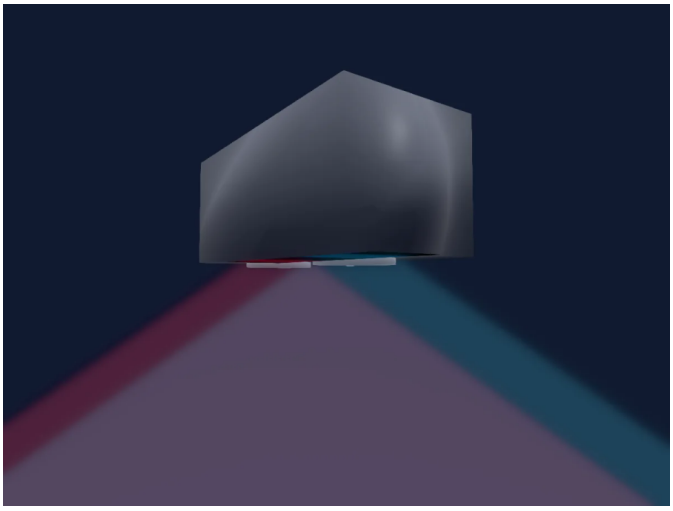

| | |
|---|---|
| Manufacturer | **ACME** |
| Type | **Blinder** |
| DMX modes | **5** |
| DMX footprint | **3, 4, 5, 6 channels** |
| Beam angle | **110°** |
| Size (W × H × D) | **396 × 164 × 183 mm** |
| GDTF fixture type | **B69B02FF-9FB8-46F3-939D-30…** |

## Controls

Extra LED colours · Colour temperature · Strobe · Dimmer

## DMX modes

| | |
|---|---|
| Mode 1 3 DMX | 3 ch |
| Mode 2 4 DMX | 4 ch |
| Mode 5 4 DMX | 4 ch |
| Mode 3 5 DMX 1 | 5 ch |
| Mode 4 6 DMX 1 | 6 ch |

## Mode 1 3 DMX

3 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | C TO | 0 | |
| 2 | Dimmer | 0 | |
| 3 | Shutter / Strobe | 0 | 0–5 Open<br>6–122 min Strobe<br>123–123 max Strobe<br>124–127 Open2<br>128–185 Shutter Random · Shutter Ran 10–13 Hz<br>186–190 Open3<br>191–249 Shutter Ran strobe · Shutter Ran2 15–20 Hz<br>250–255 Open4 |

## Mode 2 4 DMX

4 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Color Add WW | 255 | |
| 2 | Color Add CW | 255 | |
| 3 | Dimmer | 0 | |
| 4 | Shutter / Strobe | 0 | 0–5 Open<br>6–122 min Strobe<br>123–123 max Strobe<br>124–127 Open2<br>128–185 Shutter Random · Shutter Ran 10–13 Hz<br>186–190 Open3<br>191–249 Shutter Ran strobe · Shutter Ran2 15–20 Hz<br>250–255 Open4 |

## Mode 5 4 DMX

4 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Dimmer | 0 | |
| 2 | Dimmer | 0 | |
| 3 | Dimmer | 0 | |
| 4 | Shutter / Strobe | 0 | 0–5 Open<br>6–122 min Strobe<br>123–123 max Strobe<br>124–127 Open2<br>128–185 Shutter Random · Shutter Ran 10–13 Hz<br>186–190 Open3<br>191–249 Shutter Random2 · Shutter Ran2 15–20 Hz<br>250–255 Open4 |

## Mode 3 5 DMX 1

5 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Color Add WW | 255 | |
| 2 | Color Add CW | 255 | |
| 3 | Dimmer | 0 | |
| 4 | Dimmer Fine | 0 | Fine byte of Dimmer |

### Mode 3 5 DMX 1 (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **5** | Shutter / Strobe | 0 | 0–5 Open<br>6–122 min Strobe<br>123–123 max Strobe<br>124–127 Open2<br>128–185 Shutter Random · Shutter Ran 10–13 Hz<br>186–190 Open3<br>191–249 Shutter Ran strobe · Shutter Ran2 15–20 Hz<br>250–255 Open4 |

## Mode 4 6 DMX 1

6 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **1** | Color Add WW | 255 | |
| **2** | Color Add WW | 255 | |
| **3** | Color Add CW | 255 | |
| **4** | Color Add CW | 255 | |
| **5** | Dimmer | 0 | |
| **6** | Shutter / Strobe | 0 | 0–5 Open<br>6–122 min Strobe<br>123–123 max Strobe<br>124–127 Open2<br>128–185 Shutter Random · Shutter Ran 10–13 Hz<br>186–190 Open3<br>191–249 Shutter Ran strobe · Shutter Ran2 15–20 Hz<br>250–255 Open4 |