
ADJ

Burst 200

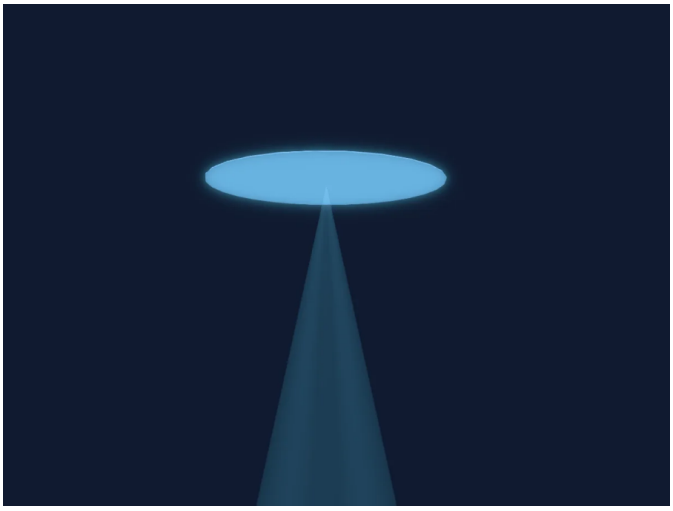

Manufacturer	**ADJ**
Type	**Blinder**
DMX modes	**6**
DMX footprint	**1, 2, 3, 4, 6 channels**
Beam angle	**25°**
Size (W × H × D)	**150 × 1 × 150 mm**
GDTF fixture type	**4B30B79C-D8BB-4465-ADD0-7…**

Controls

Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

1 channel	1 ch
2 channel	2 ch
2A (2 channel)	2 ch
3 channel	3 ch
4 channel	4 ch
6 channel	6 ch

1 channel

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

2 channel

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

2A (2 channel)

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer	0	0–254 Closed 255–255 Open

3 channel

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theater 101–120 Stage 2 121–255 Default to Unit Setting

4 channel

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	32	0–31 LED Off 32–63 LED On 64–79 Slow Strobe 80–94 Medium Strobe 95–95 Fast Strobe 96–127 LED On 128–143 Slow Pulse 144–158 Medium Pulse 159–159 Fast Pulse 160–191 LED On 192–206 Slow Random Strobe 207–222 Medium Random Strobe 223–223 Fast Random Strobe 224–255 LED On

4 channel (continued)

Ch	Function	Default	DMX values
4	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theater 101–120 Stage 2 121–255 Default to Unit Setting

6 channel

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer	0	0–254 Closed 255–255 Open
3	Shutter / Strobe	32	0–31 LED Off 32–63 LED On 64–79 Slow Strobe 80–94 Medium Strobe 95–95 Fast Strobe 96–127 LED On 128–143 Slow Pulse 144–158 Medium Pulse 159–159 Fast Pulse 160–191 LED On 192–206 Slow Random Strobe 207–222 Medium Random Strobe 223–223 Fast Random Strobe 224–255 LED On
4	Dimmer	255	0–254 Closed 255–255 Open
5	Dimmer Fine	255	Fine byte of Dimmer
6	Dimmer Mode	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theater 101–120 Stage 2 121–255 Default to Unit Setting