
ADJ

H20 Two

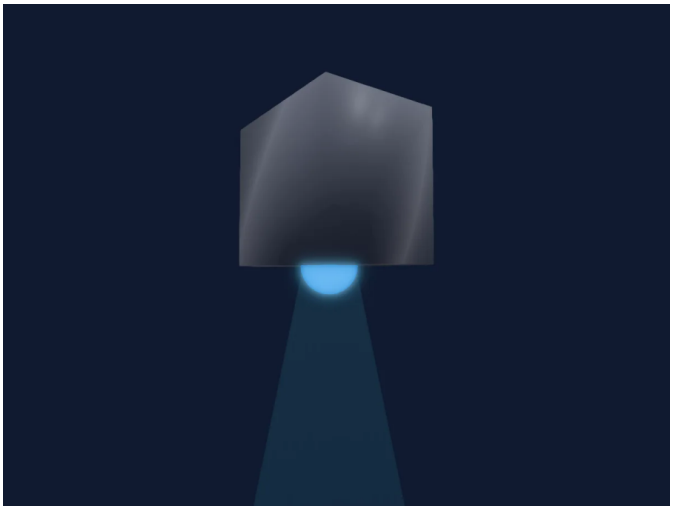

Manufacturer	**ADJ**
Type	**Effect light**
DMX modes	**1**
DMX footprint	**9 channels**
Size (W × H × D)	**231 × 282 × 315 mm**
GDTF fixture type	**A52185C5-0C2F-4D94-9799-D5…**

Controls

Colour wheel · Dimmer

Safety-relevant functions

Fixture reset

DMX modes

9CH — 9 ch

9CH

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Animation Wheel1Select Spin	0	0–9 No Rotation 10–120 Clockwise Rotation - Fast to Slow 121–134 No Rotation 135–245 Counter Clockwise Rotation - Slow to Fast 246–255 No Rotation
3	Color1Wheel Index	0	0–10 White (wheel slot 1) 11–21 White/Orange (wheel slot 2) 22–32 Orange (wheel slot 3) 33–43 Orange/Green (wheel slot 4) 44–54 Green (wheel slot 5) 55–65 Green/Blue (wheel slot 6) 66–76 Blue (wheel slot 7) 77–87 Blue/Yellow (wheel slot 8) 88–98 Yellow (wheel slot 9) 99–109 Yellow/Purple (wheel slot 10) 110–120 Purple (wheel slot 11) 121–127 Purple/White (wheel slot 12) 128–187 Clockwise Rotation - Fast to Slow (wheel slot 13) 188–196 STOP (wheel slot 14) 197–255 Counter Clockwise Rotation - Slow to Fast (wheel sl…
4	Shutter1Strobe	0	0–31 LEDs OFF 32–63 LEDs ON 64–95 Strobe Effect - Slow to Fast 96–127 LEDs ON 128–159 Pulse Effect in Sequences 160–191 LEDs ON 192–223 Random Strobe Effect - Slow to Fast 224–255 LEDs ON
5	Color Macro1	0	0–10 OFF 11–26 Program 0 27–43 Program 1 44–60 Program 2 61–76 Program 3 77–255 No Function
6	Color Macro1Rate	0	

9CH (continued)

Ch	Function	Default	DMX values
7	Dimmer Mode	0	0–20 Default to Unit Setting 21–40 Standard 41–60 Stage 61–80 TV 81–100 Architectural 101–120 Theatre 121–140 Stage 2 141–141 0_1s 142–142 0_2s 143–143 0_3s 144–144 0_4s 145–145 0_5s 146–146 0_6s 147–147 0_7s 148–148 0_8s 149–149 0_9s 150–150 1s 151–151 1_5s 152–152 2s 153–153 3s 154–154 4s 155–155 5s 156–156 6s 157–157 7s 158–158 8s 159–159 9s 160–160 10s 161–255 Default to Unit Setting
8	Dimmer Curve	0	0–20 Square 21–40 Linear 41–60 Inv Square 61–80 S Curve 81–255 No function
9	Control1	0	0–10 No Function 11–26 Reset All Motors 27–255 No Function