
ADJ

Mega Hex Par

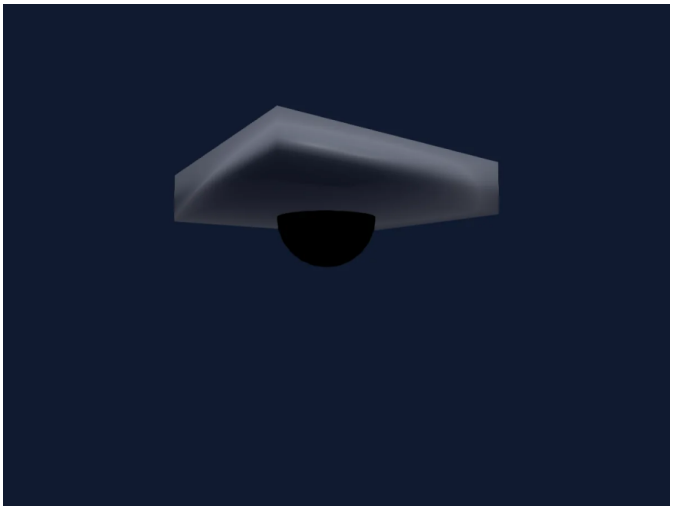

Manufacturer	**ADJ**
Type	**Strobe**
DMX modes	**5**
DMX footprint	**6, 7, 8, 11, 12 channels**
Size (W × H × D)	**261 × 55 × 260 mm**
GDTF fixture type	**5D9118F6-4975-4B83-B749-D5…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Dimmer

DMX modes

6-Channel	6 ch
7-Channel	7 ch
8-Channel	8 ch
11-Channel	11 ch
12-Channel	12 ch

6-Channel

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	UV	0	

7-Channel

7 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	UV	0	
7	Dimmer	0	

8-Channel

8 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	UV	0	
7	Dimmer	0	
8	Shutter1Strobe Effect	0	0–31 LED Off 32–63 LED On 64–95 Strobing slow to fast 96–127 LED On 128–159 Pulse Strobing slow to fast 160–192 Led On 193–223 Random Strobing slow to fast 224–255 LED On

11-Channel

11 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	UV	0	
7	Dimmer	0	

11-Channel (continued)

Ch	Function	Default	DMX values
8	Shutter1Strobe Effect	0	0–31 LED Off 32–63 LED On 64–95 Strobing slow to fast 96–127 LED On 128–159 Pulse Strobing slow to fast 160–192 Led On 193–223 Random Strobing slow to fast 224–255 LED On
9	Mode	0	0–51 Dimming Mode 52–102 Color Macro Mode 103–153 Color Change Mode 154–204 Color Fade Mode 205–255 Sound Active Mode
10	Color Control	0	
11	Function	0	

12-Channel

12 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Color Add RY	255	
5	White	255	
6	UV	0	
7	Dimmer	0	
8	Shutter1Strobe Effect	0	0–31 LED Off 32–63 LED On 64–95 Strobing slow to fast 96–127 LED On 128–159 Pulse Strobing slow to fast 160–192 Led On 193–223 Random Strobing slow to fast 224–255 LED On
9	Mode	0	0–51 Dimming Mode 52–102 Color Macro Mode 103–153 Color Change Mode 154–204 Color Fade Mode 205–255 Sound Active Mode
10	Color Control	0	
11	Function	0	
12	Dimmer Curve	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architectural 81–100 Theatre 101–255 Default to factory settings